

ROBOTICS

Product specification

IRB 5710



Trace back information:
Workspace 23C version a22
Checked in 2023-10-06
Skribenta version 5.5.019

Product specification

IRB 5710

OmniCore

Document ID: 3HAC075188-001

Revision: D

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2022-2023 ABB. All rights reserved.
Specifications subject to change without notice.

Table of contents

Overview of this specification	7
1 Description of IRB 5710	9
1.1 About the IRB 5710	9
1.2 About the IRB 5710 LeanID	12
1.3 Standards	16
1.3.1 Applicable standards	16
1.4 Maintenance and troubleshooting	17
2 Technical data for IRB 5710	19
2.1 Technical data	19
2.1.1 Technical data	19
2.1.2 Working range	25
2.1.3 Robot motion	32
2.2 Fitting equipment on the robot (robot dimensions)	33
2.3 Additional installation information	43
2.3.1 Installing a base plate	45
2.3.2 Setting the system parameters for an inverted or a tilted robot	52
2.3.3 Working range alterations	54
2.3.3.1 Adjusting the working range	54
2.3.3.2 Installing movable mechanical stops on axis 1 (option 3323-1)	55
2.4 Calibration and references	57
2.4.1 Calibration methods	57
2.4.2 Synchronization marks and axis movement directions	59
2.4.2.1 Synchronization marks and synchronization position for axes	59
2.4.2.2 Calibration movement directions for all axes	61
2.4.3 Fine calibration	62
2.4.4 Absolute Accuracy calibration	63
2.4.5 Axis Calibration on axis 6	65
2.4.6 Calibration tools for Axis Calibration	67
2.5 Load diagrams	68
2.5.1 Introduction	68
2.5.2 Diagrams	69
2.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement	77
2.5.4 Wrist torque	79
2.5.5 Maximum TCP acceleration	80
2.6 Performance according to ISO 9283	81
2.7 Velocity	82
2.8 Robot stopping distances and times	83
2.8.1 Robot stopping distances according to ISO 10218-1	83
2.8.2 Measuring stopping distance and time	87
2.8.3 IRB 5710-110/2.3	89
2.8.4 IRB 5710-110/2.3 Inv	97
2.8.5 IRB 5710-90/2.7	105
2.8.6 IRB 5710-90/2.7 Inv	113
2.8.7 IRB 5710-90/2.3 LID	121
2.8.8 IRB 5710-90/2.3 LID Inv	129
2.8.9 IRB 5710-70/2.7 LID	137
2.8.10 IRB 5710-70/2.7 LID Inv	145
3 Specification of variants and options	153
3.1 Introduction to variants and options	153
3.2 Manipulator	154
3.3 Floor cables	164

Table of contents

3.4	Application	165
3.4.1	Overview of DressPack options	165
3.4.2	DressPack for material handling	166
3.4.3	DressPack for spotwelding	170
3.4.4	Configuration result of DressPack options	174
3.4.5	Connector kits manipulator	177
3.4.5.1	Base - Connector kits	178
3.4.5.2	Axis 3 - Connector kits	180
3.4.5.3	Axis 6 - Connector kits	183
3.4.6	Application floor cables	186
Index		189

Overview of this specification

About this product specification

This product specification describes the performance of the manipulator or a complete family of manipulators in terms of:

- The structure and dimensional prints
- The fulfilment of standards, safety, and operating equipment
- The load diagrams, mounting or extra equipment, the motion, and the robot reach
- The specification of available variants and options

The specification covers the manipulator using the OmniCore controller.

Usage

Product specifications are used to find data and performance about the product, for example to decide which product to buy. How to handle the product is described in the product manual.

The specification is intended for:

- Product managers and product personnel
- Sales and marketing personnel
- Order and customer service personnel

Usage

Product specifications are used to find data and performance about the product, for example to decide which product to buy. How to handle the product is described in the product manual.

The specification is intended for:

- Product managers and product personnel
- Sales and marketing personnel
- Order and customer service personnel

References

Documentation referred to in the product specification, is listed in the table below.

Document name	Document ID
<i>Product manual - IRB 5710</i>	3HAC075184-001
<i>Product manual - OmniCore V250XT</i>	3HAC073447-001
<i>Circuit diagram - IRB 5710/IRB 5720</i>	3HAC080367-001



Tip

All documents can be found via myABB Business Portal, www.abb.com/myABB.

Continues on next page

Overview of this specification

Continued

Revisions

Revision	Description
A	First edition.
B	Published in release 22D. The following updates are done in this revision: <ul style="list-style-type: none">• Option 209-x Manipulator color RAL code added.• Requirements for option 3316-1 <i>Upper arm cover</i> updated.
C	Published in release 23B. The following updates are done in this revision: <ul style="list-style-type: none">• The updated robot stopping distances and times are moved to this document, and removed from the generic document, see Robot stopping distances and times on page 83.• Added DressPack options for spotwelding.• Minor corrections.• Text and image that presents the position for a nominal extra load on the upper arm is updated.
D	Published in release 23C. The following updates are done in this revision: <ul style="list-style-type: none">• Corrected information about available options for DressPack.

1 Description of IRB 5710

1.1 About the IRB 5710

General introduction

ABB is expanding its large size robot portfolio with IRB 5710, offering faster performance, more accurate, expanded mounting options, and advanced foundry protection than other competing robots in its class.

The IRB 5710 is available in four variants spanning various options for payload from 70kg to 110kg, reach from 2.3m to 2.7m.

Intended use

IRB 5710 is ideal for use in material handling, machine tending, and high precision assembly applications in the Electric Vehicle (EV), automotive, and the general industries. For Electric Vehicles, robots can handle an array of tasks, including EV battery module picking and placing, high precision assembly and parts handling. For general industries, the robots can be used for a wide range of tasks in die casting, material removal, cleaning, spraying and general high precision applications.

ABB robots are capable of high accelerations and speeds. It is generally recommended to use Robot Studio to find out if a robot model is suitable for a specific application and duty factor. In the case of intense use of robots, optional cooling fans may be required, and the expected component life of gearboxes and motors may be affected. Robot Studio is an excellent tool to help with the assessment of the duty factor and the selection of the most suitable robot variant.

Available variants

The IRB 5710 is available in the following variants



xx2100001205

Robot variant	Handling capacity (kg)	Reach (m)
IRB 5710-110/2.3	110 kg	2.3 m
IRB 5710-90/2.7	90 kg	2.7 m
IRB 5710-90/2.3 LID	90 kg	2.3 m
IRB 5710-70/2.7 LID	70 kg	2.7 m


Continues on next page

1 Description of IRB 5710

1.1 About the IRB 5710

Continued

Robot axes

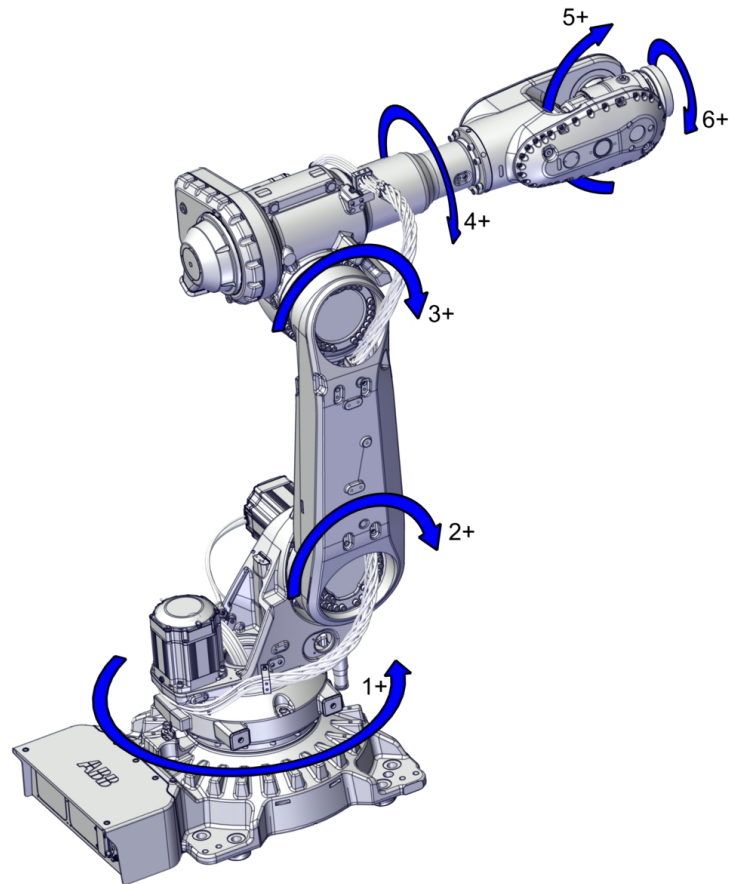

xx2100002527

Control system

The robot is equipped with the OmniCore controller and robot control software, RobotWare. RobotWare supports every aspect of the robot system, such as motion control, development and execution of application programs, communication etc. See *Operating manual - OmniCore*.

We have added a range of software products - all falling under the umbrella designation of Active Safety - to protect not only personnel in the unlikely event of an accident, but also robot tools, peripheral equipment and the robot itself.

The IRB 5710 manipulator can be connected to the following robot controllers:

- OmniCore V250XT

Safety

Safety standards valid for complete robot, manipulator and controller.

Continues on next page

Additional functionality

For additional functionality, the robot can be equipped with optional software for application support - for example communication features - network communication - and advanced functions such as multitasking, sensor control etc. For a complete description on optional software, see the product specification for the robot controller listed in [References](#).


1 Description of IRB 5710

1.2 About the IRB 5710 LeanID

1.2 About the IRB 5710 LeanID

About the DressPack

The IRB 5710 can be equipped with different DressPacks. The DressPacks are modular built but with the aim to offer a complete solution. The DressPacks are designed to fit a wide variety of applications, like machine tending, material handling and spot welding and are well integrated into the robot system to ensure long life length and large working range.

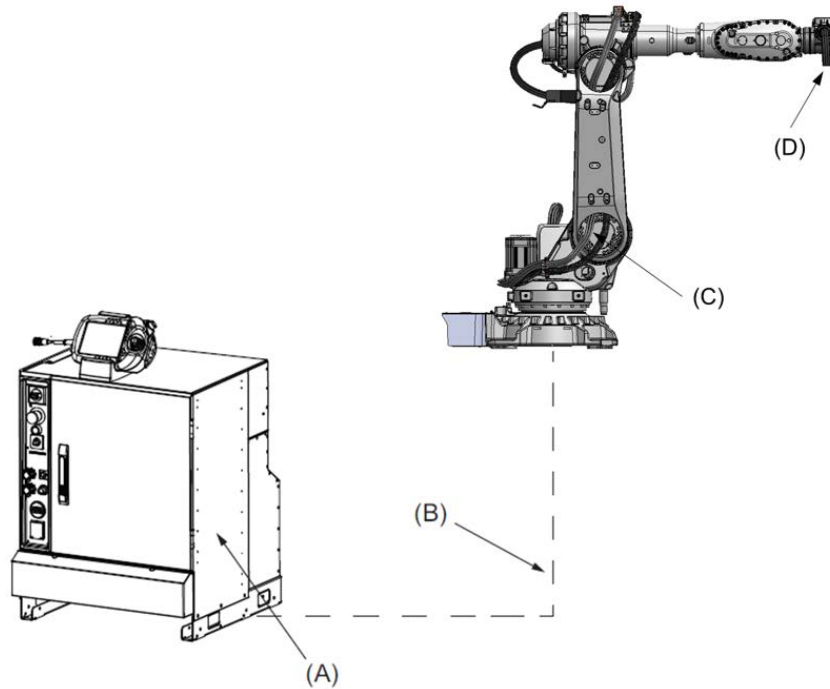

xx2100002465

Pos	Description
A	Robot controller
B	DressPack, floor
C	DressPack, lower arm
D	DressPack, upper arm

Continues on next page

Available DressPacks

The IRB 5710 is available with the DressPack variants stated in the table below. The lower arm DressPacks (base - axis 3) have the same routing and design whilst the upper arm DressPacks (axis 3 - 6) consists of two design solutions, LeanID - MH and MH3. The main difference between LeanID and MH3 is that LeanID is guided across the axis 6 center of rotation by utilizing a process turning disc instead of the standard turning disc. This allows for a controlled and predictable motion pattern of the DressPack. The MH3 DressPack is designed for less complex wrist movements and requires the integrator to manage the DressPack routing at axis 6.


Robot type	DressPack variants	
	Base - axis 3	axis 3 - 6
IRB 5710-110/2.3	MH	MH3
IRB 5710-90/2.7	MH	MH3
IRB 5710-90/2.3 LID	MH	LeanID - MH
IRB 5710-70/2.7 LID	MH	LeanID - MH

Continues on next page

1 Description of IRB 5710

1.2 About the IRB 5710 LeanID

Continued

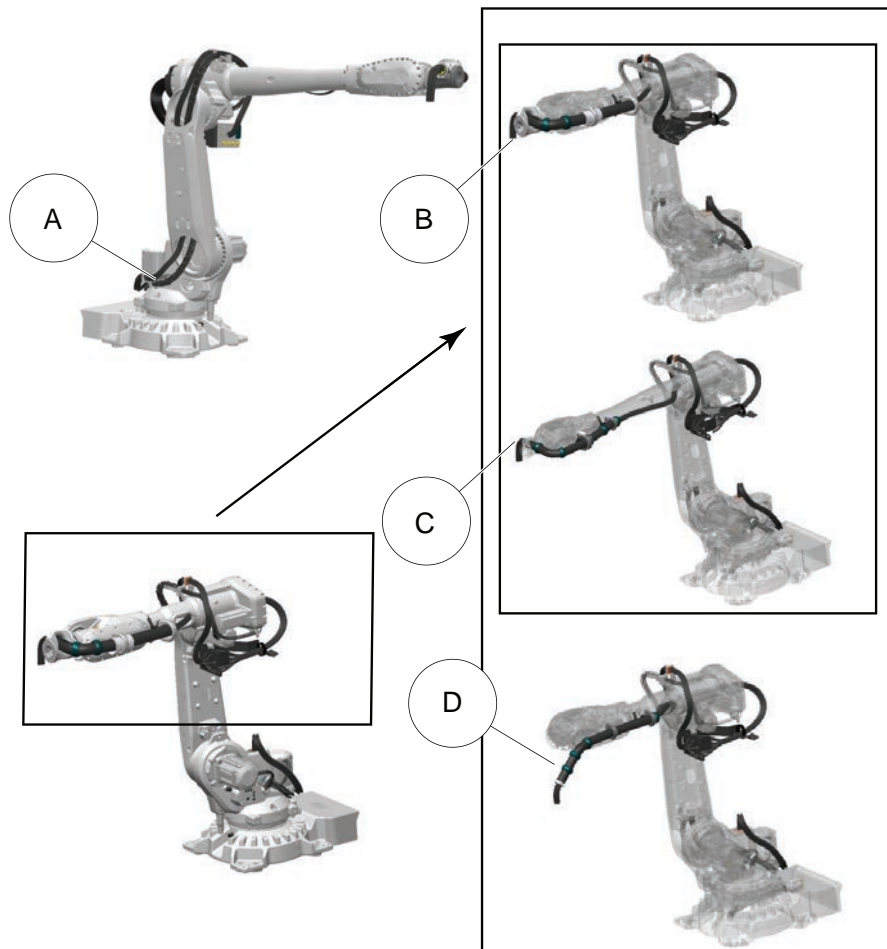

xx2100002588


Pos	Description	DressPack variant	Robot type
A	DressPack base - axis 3	MH	IRB 5710-110/2.3 IRB 5710-90/2.7 IRB 5710-90/2.3 LID IRB 5710-70/2.7 LID
B	DressPack axis 3 - 6	LeanID - MH	IRB 5710-90/2.3 LID
C	DressPack axis 3 - 6	LeanID - MH	IRB 5710-70/2.7 LID
D	DressPack axis 3 - 6	MH3	IRB 5710-110/2.3 IRB 5710-90/2.7

Continues on next page

DressPack solutions for different users needs

The different robot types can be equipped with the well integrated cable and hose packages in the DressPack options. The DressPack is designed in close conjunction with the development of the manipulator and is therefore well synchronized with the robot.

As there is a big span between different users need of flexibility, depending of the complexity of the operation/wrist movements, there are two major levels of dress pack solutions available, see Figure below.

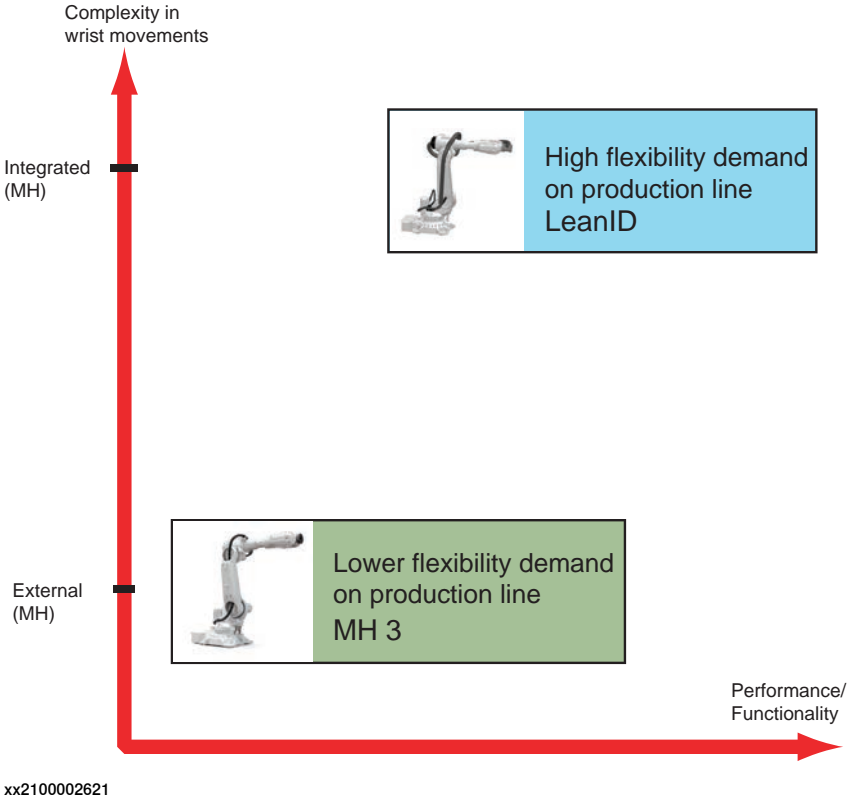

1 Description of IRB 5710

1.3.1 Applicable standards

1.3 Standards

1.3.1 Applicable standards

General

The product is compliant with ISO 10218-1:2011, *Robots for industrial environments - Safety requirements - Part 1 Robots*, and applicable parts in the normative references, as referred to from ISO 10218-1:2011. In case of deviation from ISO 10218-1:2011, these are listed in the declaration of incorporation. The declaration of incorporation is part of the delivery.

Robot standards

Standard	Description
ISO 9283	Manipulating industrial robots – Performance criteria and related test methods
ISO 9787	Robots and robotic devices – Coordinate systems and motion nomenclatures
ISO 9946	Manipulating industrial robots – Presentation of characteristics

Other standards used in design

Standard	Description
IEC 60204-1	Safety of machinery - Electrical equipment of machines - Part 1: General requirements, normative reference from ISO 10218-1
IEC 61000-6-2	Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity standard for industrial environments
IEC 61000-6-4	Electromagnetic compatibility (EMC) – Part 6-4: Generic standards – Emission standard for industrial environments
ISO 13849-1:2006	Safety of machinery - Safety related parts of control systems - Part 1: General principles for design, normative reference from ISO 10218-1

Region specific standards and regulations

Standard	Description
ANSI/RIA R15.06	Safety requirements for industrial robots and robot systems
CAN/CSA Z 434-03 CAN/CSA Z 434-14	Industrial robots and robot Systems - General safety requirements
EN ISO 10218-1	Robots and robotic devices — Safety requirements for industrial robots — Part 1: Robots

1.4 Maintenance and troubleshooting

General

The robot requires only minimum maintenance during operation. It has been designed to make it as easy to service as possible:

- Maintenance-free AC motors are used.
- Oil is used for the gearboxes.
- The cabling is routed for longevity, and in the unlikely event of a failure.

Maintenance

The maintenance intervals depend on the use of the robot. The required maintenance activities also depend on the selected options. For detailed information on maintenance procedures, see the maintenance section in *Product manual - IRB 5710*.

Troubleshooting

The robot has built-in communication that shows information on the FlexPendant. These messages facilitates troubleshooting and are an integral part of the control system. Troubleshooting procedures are describes in the product manual for the manipulator and the controller respectively.

This page is intentionally left blank

2 Technical data for IRB 5710

2.1 Technical data

2.1.1 Technical data

Weight, robot

The table shows the weight of the robot.

Robot model	Nominal weight ⁱ
IRB 5710-110/2.3	830 kg
IRB 5710-90/2.7	830 kg
IRB 5710-90/2.3 LID	890 kg
IRB 5710-70/2.7 LID	885 kg

ⁱ Option *Inverted (3317-1)* adds approximately 15 kg to the nominal weight.



Note

The weight does not include additional options, tools and other equipment fitted on the robot.

The weight does not include the weight of the DressPack.

Mounting positions

The table shows valid mounting positions and the installation (mounting) angle for the manipulator.

Mounting position	Installation angle
Floor mounted	0°
Inverted	180°
Tilted	0-20°



Note

The actual mounting angle must always be configured in the system parameters, otherwise the performance and lifetime is affected. See the product manual for details.

Continues on next page


2 Technical data for IRB 5710

2.1.1 Technical data

Continued

Loads on foundation, robot

The illustration shows the directions of the robots stress forces. The directions are valid for all floor mounted, tilted mounted and inverted robots.

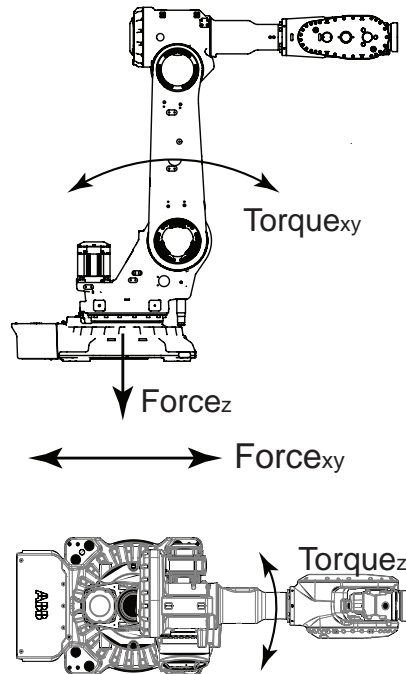

xx2100002622

The table shows the various forces and torques working on the robot during different kinds of operation.



Note

These forces and torques are extreme values that are rarely encountered during operation. The values also never reach their maximum at the same time!



WARNING

The robot installation is restricted to the mounting options given in following load table(s).

Floor mounted

Force	Endurance load (in operation)	Maximum load (emergency stop)
Force xy	±6.7 kN	±14.1 kN
Force z	9.6 ±4.4 kN	9.6 ±10.7 kN
Torque xy	±13.9 kNm	±23.7 kNm
Torque z	±4.2 kNm	±10.2 kNm

Inverted

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	±6.1 kN	±14.4 kN

Continues on next page

Force	Endurance load (in operation)	Max. load (emergency stop)
Force z	-9.6 ±4.3 kN	-9.6 ±10.2 kN
Torque xy	±13 kNm	±23 kNm
Torque z	±4.2 kNm	±10.2 kNm

Tilted

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	±9.4 kN	±16.5 kN
Force z	8.9 ±4.5 kN	8.9 ±11.1 kN
Torque xy	±14.7 kNm	±24.6 kNm
Torque z	±4.2 kNm	±10.4 kNm



Note

Values valid for maximum tilted robot.

Requirements, foundation

The table shows the requirements for the foundation where the weight of the installed robot is included:

Requirement	Value	Note
Flatness of foundation surface	0.3 mm	Flat foundations give better repeatability of the resolver calibration compared to original settings on delivery from ABB. The value for levelness aims at the circumstance of the anchoring points in the robot base. In order to compensate for an uneven surface, the robot can be recalibrated during installation. If resolver/encoder calibration is changed this will influence the absolute accuracy.
Minimum resonance frequency	22 Hz Note It may affect the manipulator lifetime to have a lower resonance frequency than recommended.	The value is recommended for optimal performance. Due to foundation stiffness, consider robot mass including equipment. ⁱ For information about compensating for foundation flexibility, see the description of <i>Motion Process Mode</i> in the manual that describes the controller software option, see References on page 7 .

ⁱ The minimum resonance frequency given should be interpreted as the frequency of the robot mass/inertia, robot assumed stiff, when a foundation translational/torsional elasticity is added, i.e., the stiffness of the pedestal where the robot is mounted. The minimum resonance frequency should not be interpreted as the resonance frequency of the building, floor etc. For example, if the equivalent mass of the floor is very high, it will not affect robot movement, even if the frequency is well below the stated frequency. The robot should be mounted as rigid as possible to the floor.
Disturbances from other machinery will affect the robot and the tool accuracy. The robot has resonance frequencies in the region 10 – 20 Hz and disturbances in this region will be amplified, although somewhat damped by the servo control. This might be a problem, depending on the requirements from the applications. If this is a problem, the robot needs to be isolated from the environment.

Continues on next page

2 Technical data for IRB 5710

2.1.1 Technical data

Continued

Storage conditions, robot

The table shows the allowed storage conditions for the robot:

Parameter	Value
Minimum ambient temperature	-25 °C
Maximum ambient temperature	55 °C
Maximum ambient temperature (less than 24 hrs)	70 °C
Maximum ambient humidity	95%

Operating conditions, robot

The table shows the allowed operating conditions for the robot:

Parameter	Value
Minimum ambient temperature	5 °C ⁱ
Maximum ambient temperature	50 °C
Maximum ambient humidity	95% at constant temperature

ⁱ At low environmental temperature < 10°C is, as with any other machine, a warm-up phase recommended to be run with the robot. Otherwise there is a risk that the robot stops or run with lower performance due to temperature dependent oil and grease viscosity.

Protection classes, robot

The table shows the available protection types of the robot, with the corresponding protection class.

Protection type	Protection class ⁱ
Manipulator, protection type Standard	IP67
Manipulator, protection type Foundry Plus 2	IP67

ⁱ According to IEC 60529.


Environmental information

The product complies with IEC 63000. *Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.*

Airborne noise level

Description	Note	Data
Airborne noise level	The sound pressure level outside the working space.	70 dB (A) Leq

The noise emission is measured at four points on a radius 1 m outside the robots maximum working range at 1.5m above the robot base level while the manipulator follow a defined cycle according to VDMA 24608, at max performance and payload.

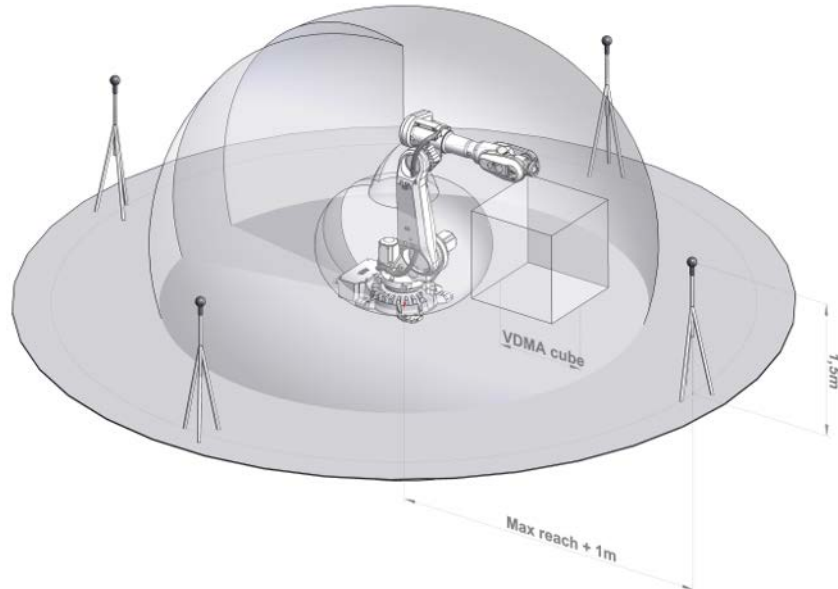

xx2100002505




Note

The noise emission from a robot system, actual application, depends on programmed path, payload, cycle time, mounting position, environment etc.

Power consumption at max load

Type of movement	IRB 5710-110/2.3	IRB 5710-90/2.7
ISO Cube Max. velocity (kW)	2.9	2.3
Robot in calibration position	IRB 5710-110/2.3	IRB 5710-90/2.7
Brakes engaged (kW)	0.25	0.23
Brakes disengaged (kW)	0.66	0.68

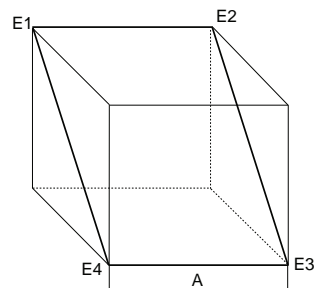

xx100000101

2 Technical data for IRB 5710

2.1.1 Technical data

Continued

Pos	Description
A	1,000 mm




Note

If measuring the power consumption at the installation site, the returned power to the grid needs to be taken in to account.

2.1.2 Working range


Illustration, working range IRB 5710-110/2.3

This illustration shows the unrestricted working range of the robot.

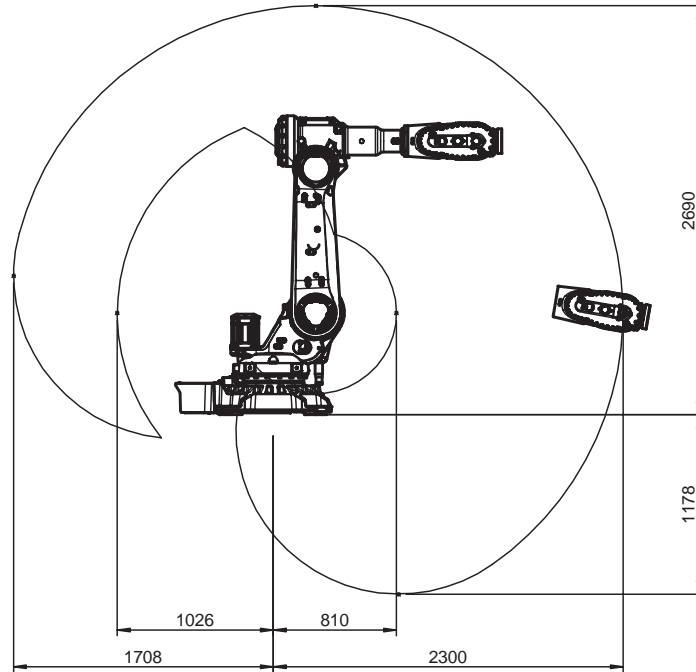

xx210000387

IRB 5710-110/2.3 inverted (with option 3317-1)

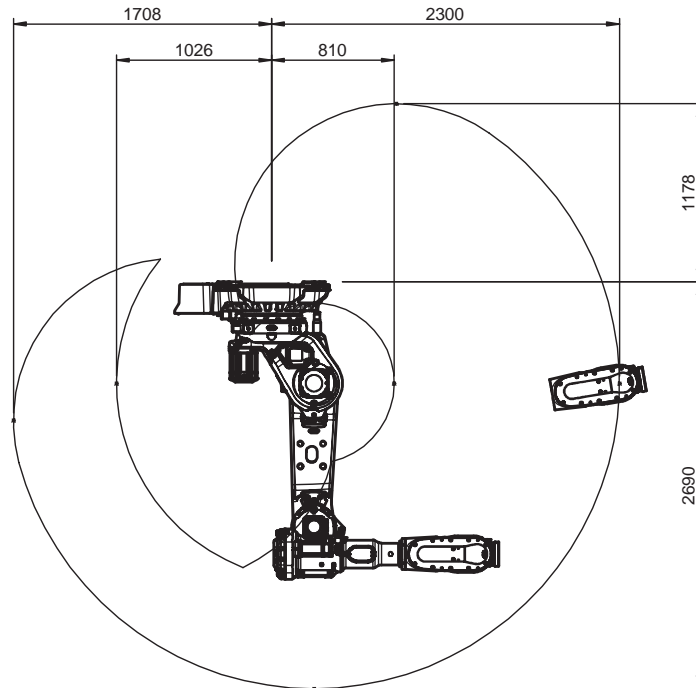

xx2100002542

Continues on next page


2 Technical data for IRB 5710

2.1.2 Working range


Continued

Illustration, working range IRB 5710-90/2.7

This illustration shows the unrestricted working range of the robot.

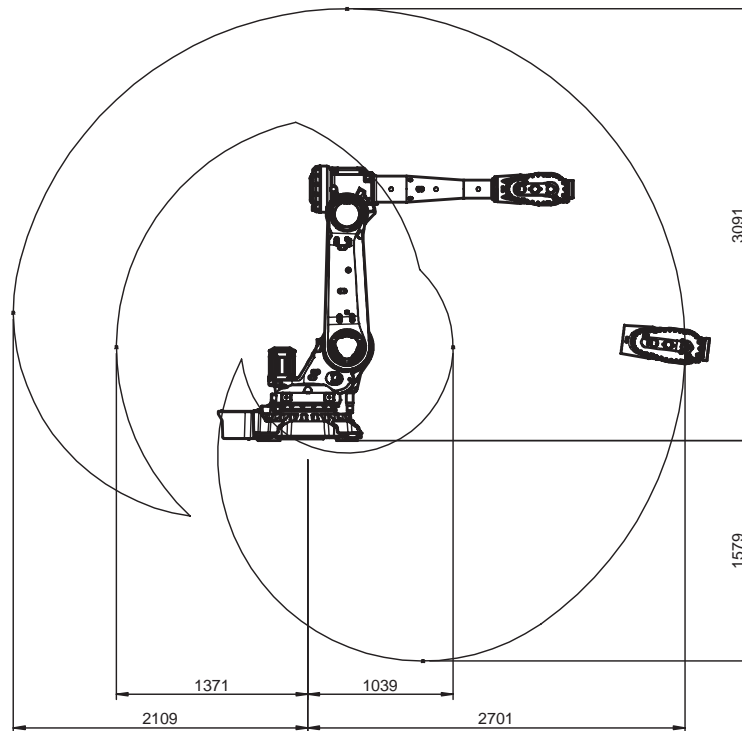


IRB 5710-90/2.7 inverted (with option 3317-1)

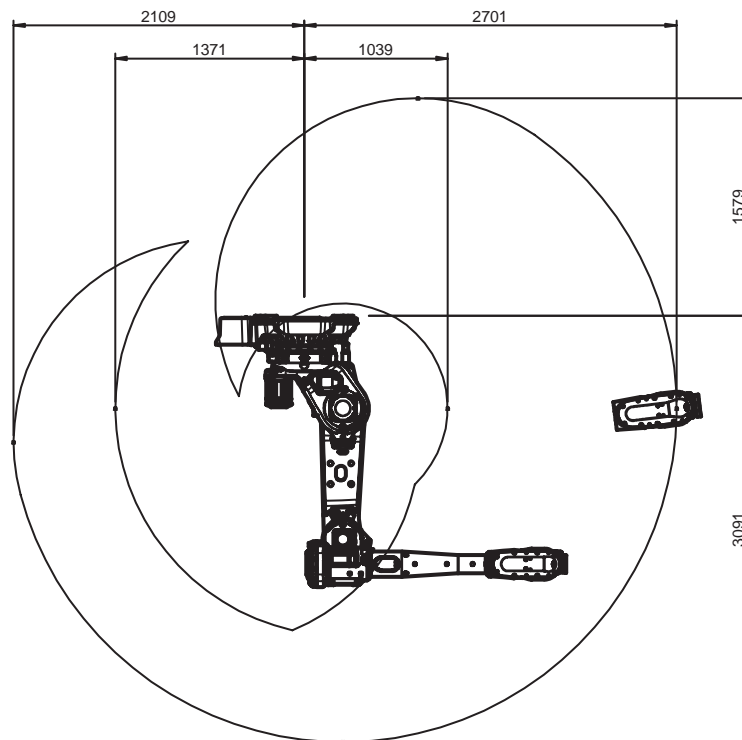

Continues on next page


Illustration, working range IRB 5710-90/2.3 LID

This illustration shows the unrestricted working range of the robot.

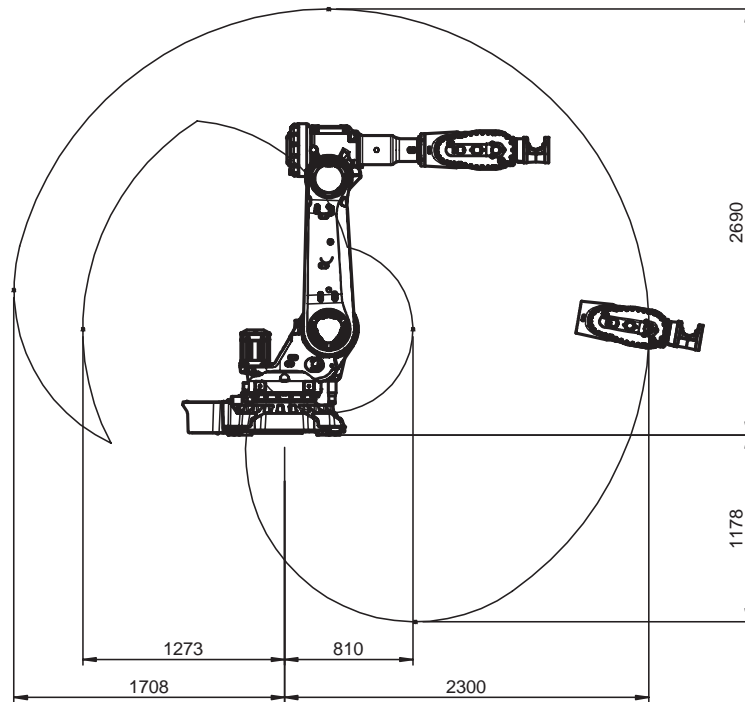

xx210000389

IRB 5710-90/2.3 LID inverted (with option 3317-1)

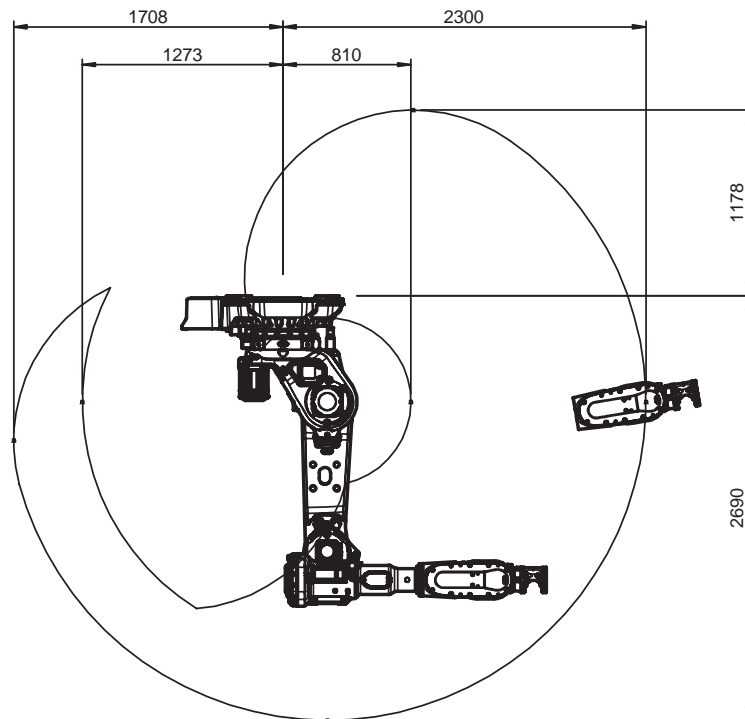

xx2100002544

Continues on next page


2 Technical data for IRB 5710

2.1.2 Working range

Continued


Illustration, working range IRB 5710-70/2.7 LID

This illustration shows the unrestricted working range of the robot.

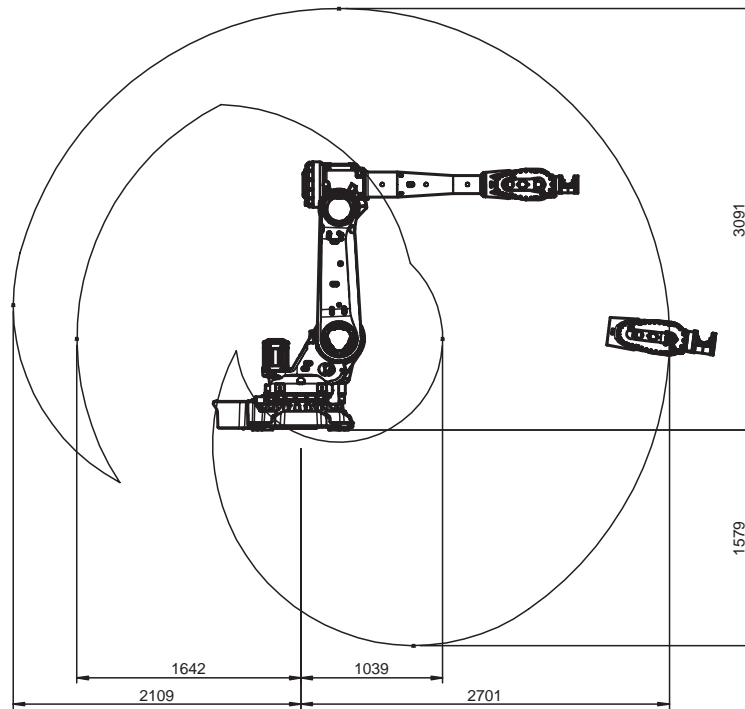

xx2100000390

IRB 5710-70/2.7 LID inverted (with option 3317-1)

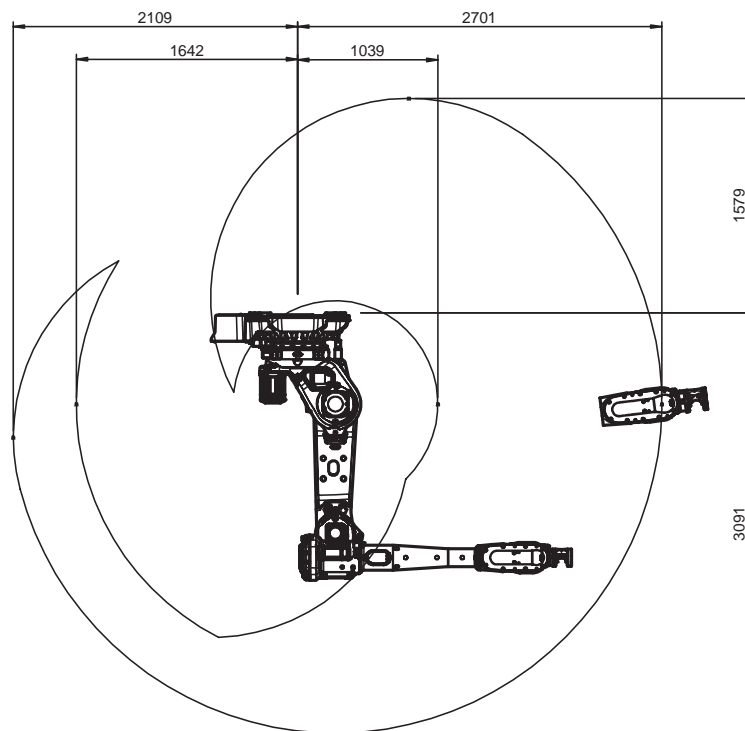


xx2100002545

Continues on next page

Top view of working range

IRB 5710-110/2.3, IRB 5710-90/2.3 LID

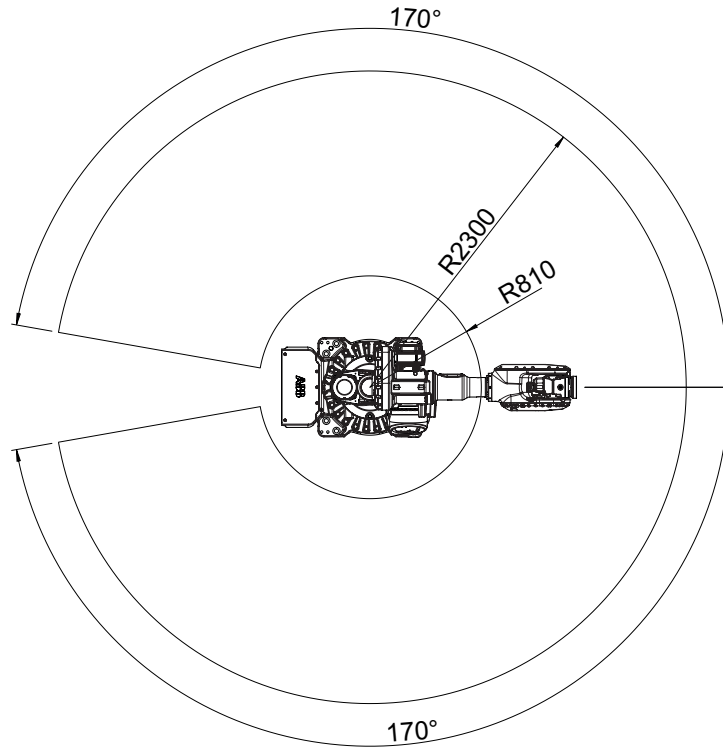

xx210000401


Continues on next page

2 Technical data for IRB 5710

2.1.2 Working range

Continued

IRB 5710-90/2.7, IRB 5710-70/2.7 LID

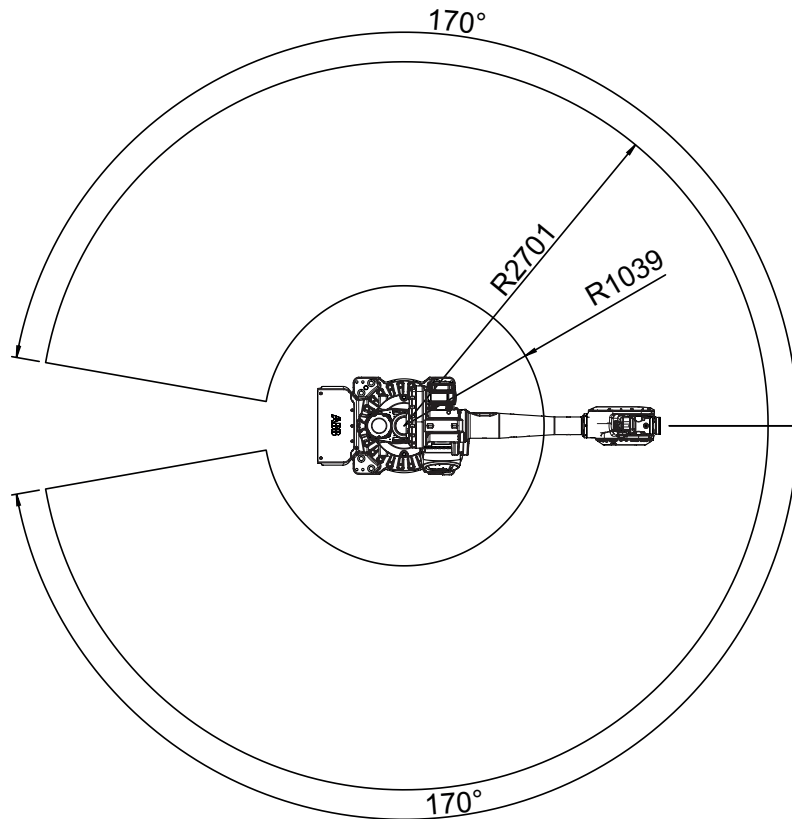

xx210000402

Working range

Axis	Working range	Note
Axis 1	$\pm 170^\circ$	The default working range for axis 1 can be extended as an option.
	$\pm 220^\circ$ ⁱ	
Axis 2	$-75^\circ / +145^\circ$	
Axis 3	$-180^\circ / +70^\circ$ (IRB 5710-110/2.3, IRB 5710-90/2.7)	
	$-160^\circ / +70^\circ$ (IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID)	
Axis 4	$\pm 300^\circ$	
Axis 5	$\pm 130^\circ$ (IRB 5710-110/2.3, IRB 5710-90/2.7)	
	$\pm 120^\circ$ ⁱⁱ (IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID)	

Continues on next page

Axis	Working range	Note
Axis 6	$\pm 360^\circ$ (IRB 5710-110/2.3, IRB 5710-90/2.7) $\pm 200^\circ$ ⁱⁱ (IRB 5710-90/2.3 LID, IRB 5710-70/2.7 LID)	

- i Option *Extended Working Range Axis 1* (3324-1)
Not valid for option *Inverted* (3317-1)
Not valid with DressPack options for spot welding.
- ii Maximum combined movements reduced.
See [Working range axis 5 and axis 6 for IRB 5710-90/2.3 LID, and IRB 5710-70/2.7 LID \(option axis 3-6 \[3326-x\]\) on page 32.](#)

2 Technical data for IRB 5710

2.1.3 Robot motion


2.1.3 Robot motion

Limitations of robot movements for LeanID

Robot variants with LeanID will have restricted working range implemented in RobotWare. See [Working range on page 30](#).

Working range axis 5 and axis 6 for IRB 5710-90/2.3 LID, and IRB 5710-70/2.7 LID (option axis 3-6 [3326-x])

Allowed working area for axis 6 related to axis 5 position is shown in the figure below.

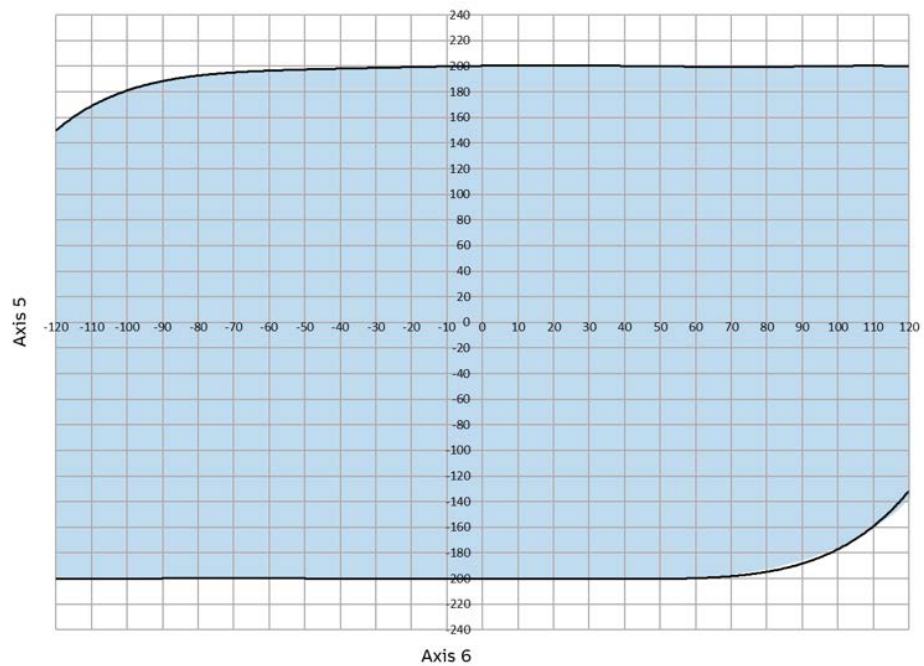

xx2100002452



Note


The working range for LeanID variants is controlled and protected by software.

2.2 Fitting equipment on the robot (robot dimensions)

Robot dimensions

The figure shows the dimension of the robot. For more information regarding geometry, see CAD models online.

IRB 5710-110/2.3

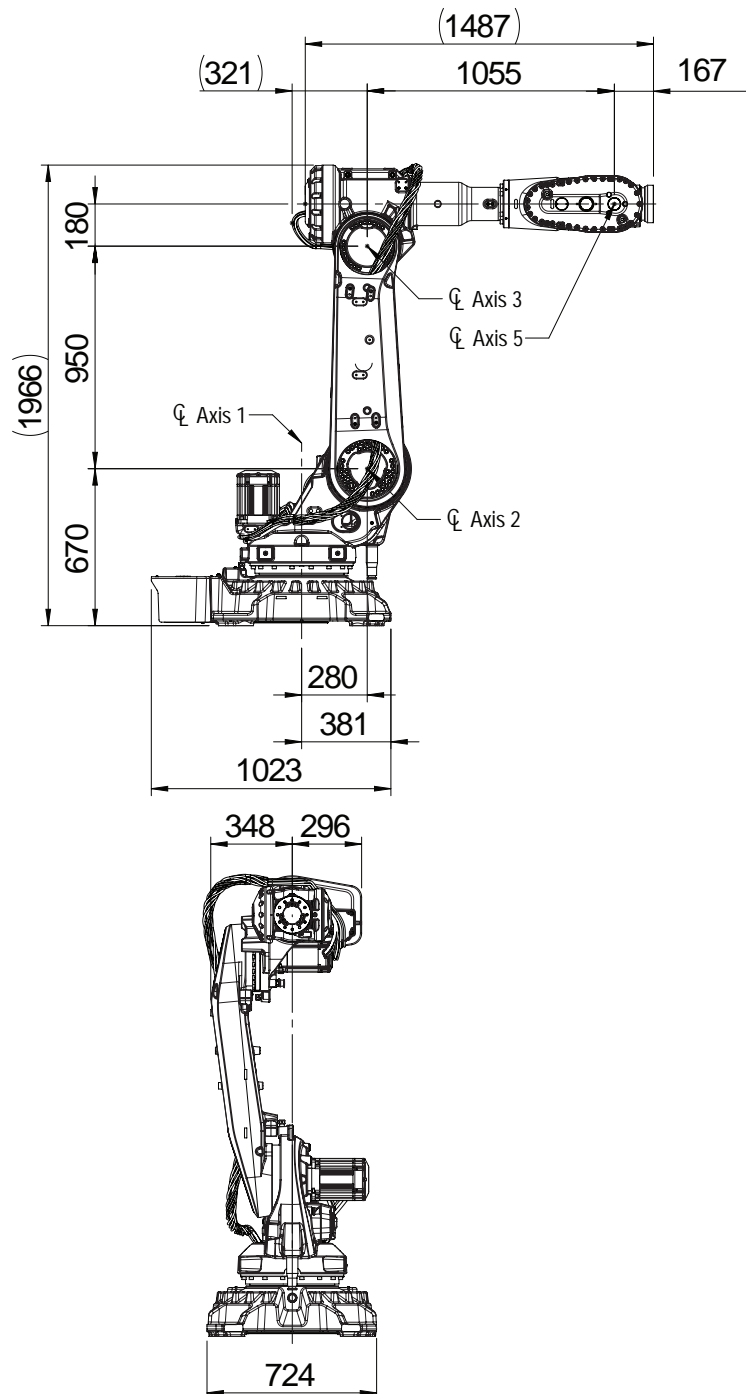

xx210000792


Continues on next page

2 Technical data for IRB 5710

2.2 Fitting equipment on the robot (robot dimensions)

Continued

IRB 5710-90/2.7

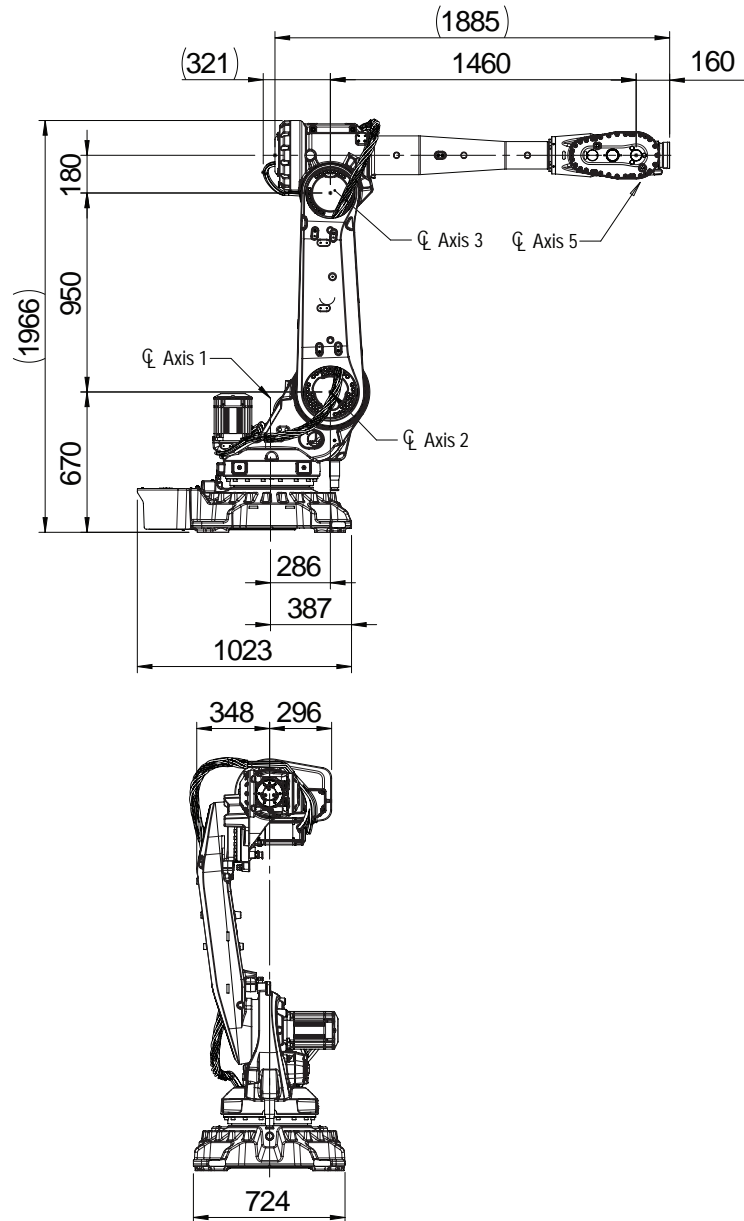

xx210000794


Continues on next page

2 Technical data for IRB 5710

2.2 Fitting equipment on the robot (robot dimensions)

Continued

IRB 5710-90/2.3 LID

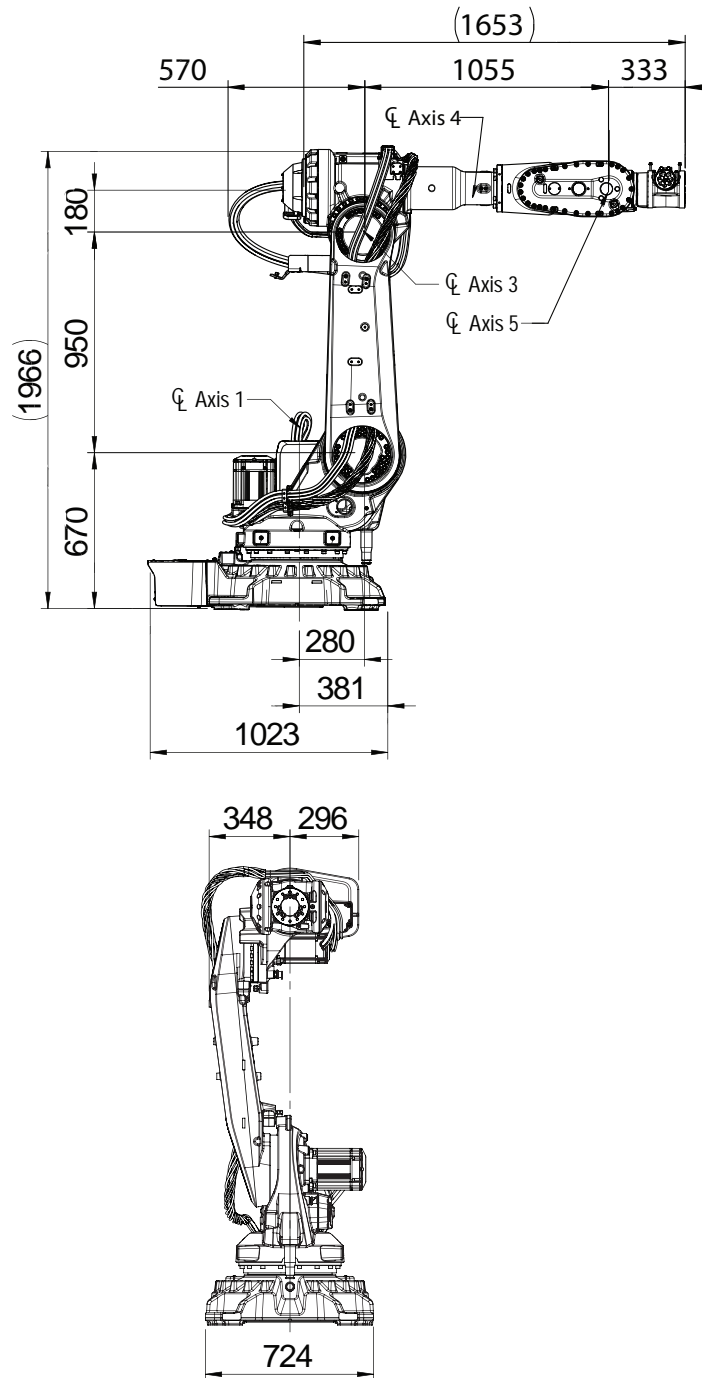

xx210000793


Continues on next page

2 Technical data for IRB 5710

2.2 Fitting equipment on the robot (robot dimensions)

Continued

IRB 5710-70/2.7 LID

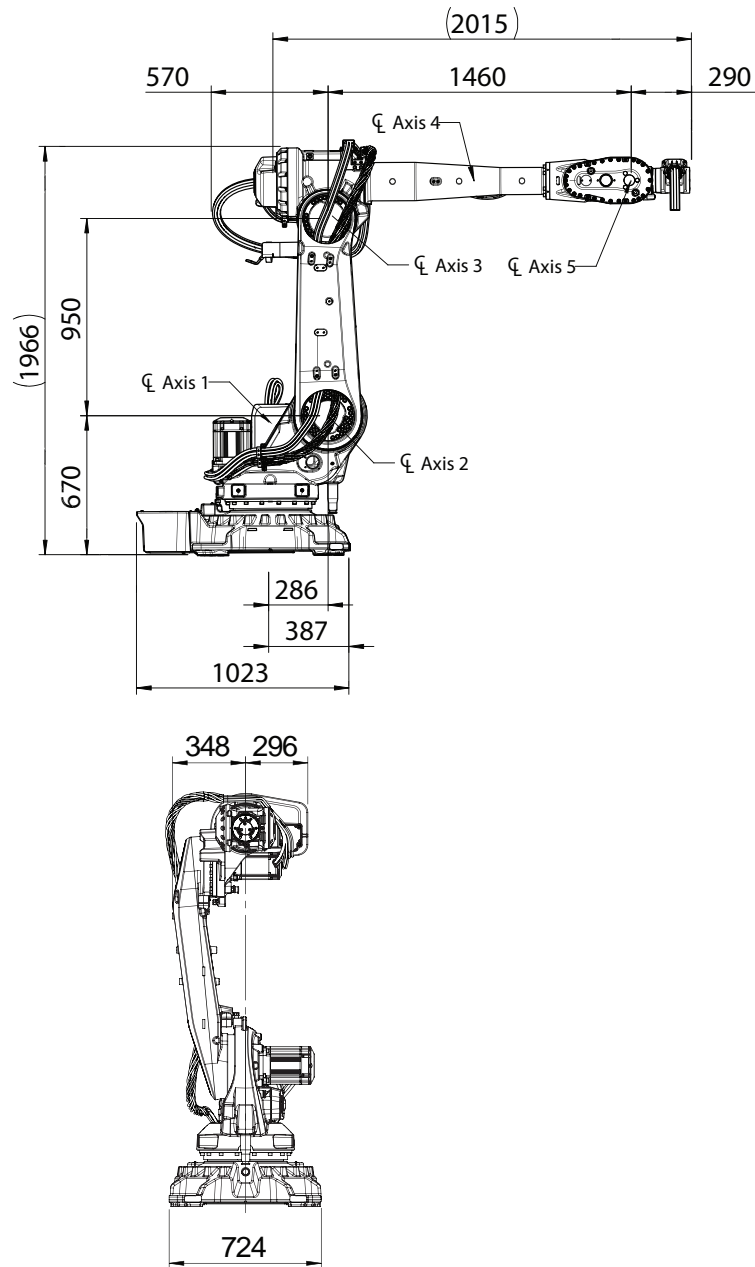

xx2100000795

Extra load on the robot

Extra loads can be mounted on robot. Definitions of dimensions and masses are shown in the following figures. The robot is supplied with holes for fitting extra equipment.


Continues on next page

Maximum allowed arm load depends on center of gravity of arm load and robot payload.

Frame

The table and figure shows allowed extra load on the frame.

	Description
Permitted extra load on frame	$J_H = 100 \text{ kgm}^2$
Recommended position (see the following figure)	$J_H = J_{H0} + M4 \times R^2$ where: <ul style="list-style-type: none"> • J_{H0} is the moment of inertia of the equipment • R is the radius (m) from the center of axis 1 • $M4$ is the total mass (kg) of the equipment including bracket and harness ($\leq 250 \text{ kg}$)

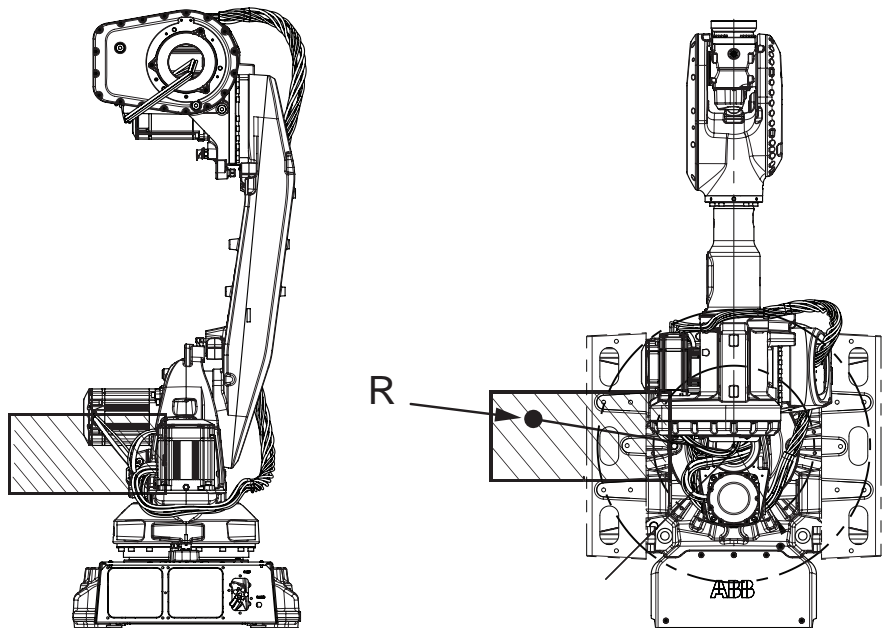

xx210000824

Continues on next page


2 Technical data for IRB 5710

2.2 Fitting equipment on the robot (robot dimensions)

Continued

Upper arm

The figure shows the position for a nominal extra load of 20 kg on the upper arm housing on a standard robot. For more precise calculations of allowed extra load up to maximum 200 kg in combination with the reduced payload, use RobotStudio add-in RobotLoad or contact ABB.

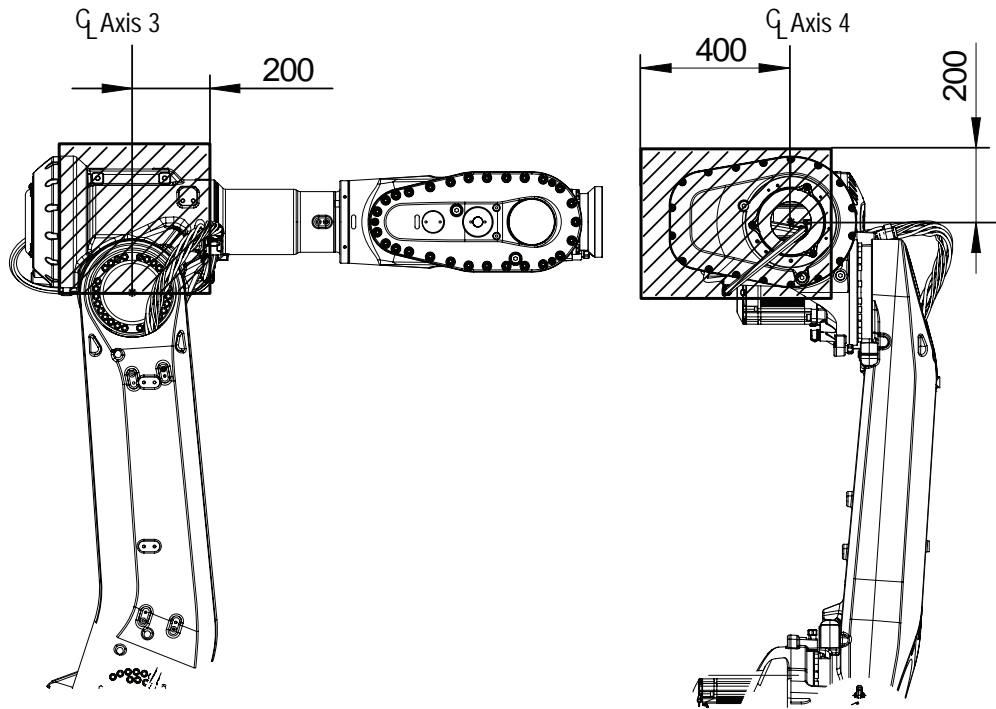


xx2200002036

Continues on next page

Attachment holes for fitting extra equipment


The robot is supplied with holes for fitting extra equipment.

Upper arm

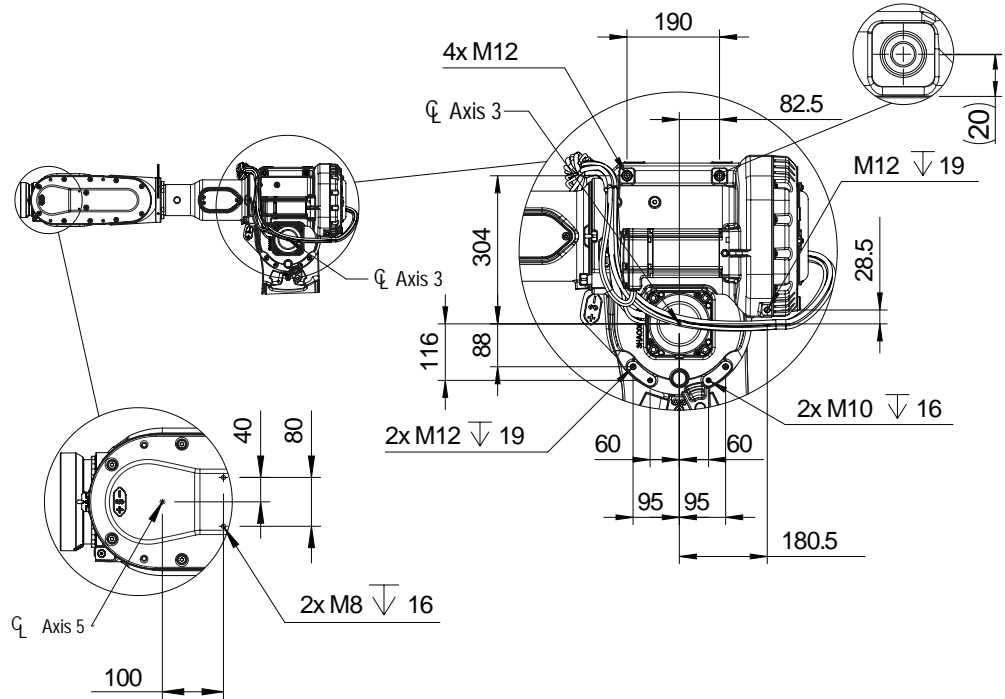

xx2100000810

Lower arm

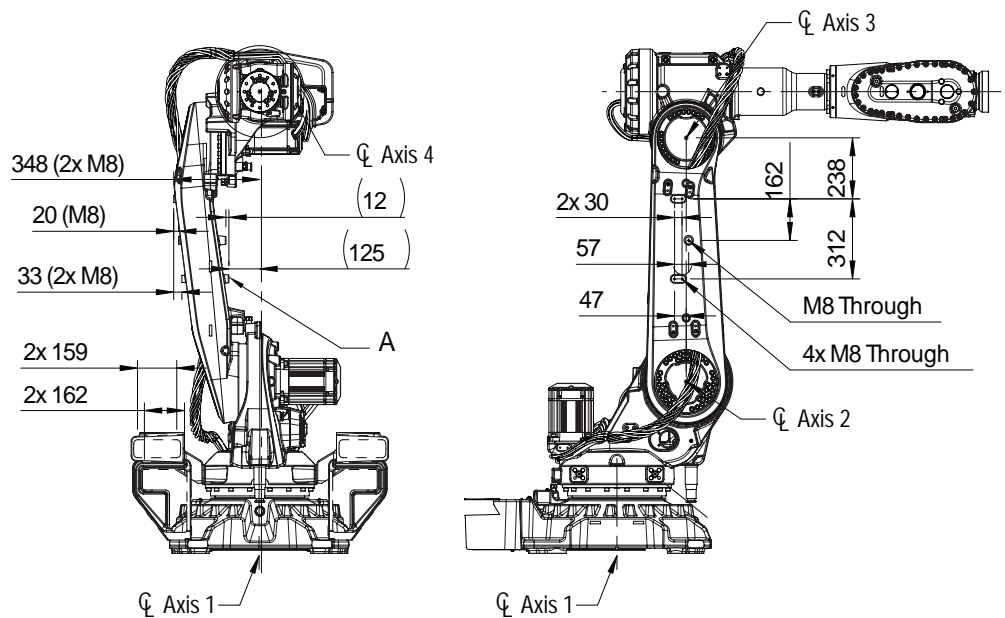

xx2100000811

A	Allowed positions for attachment holes. 4x M12 through. Avoid damaging cables when drilling.
---	--


Continues on next page

2 Technical data for IRB 5710

2.2 Fitting equipment on the robot (robot dimensions)

Continued



Frame

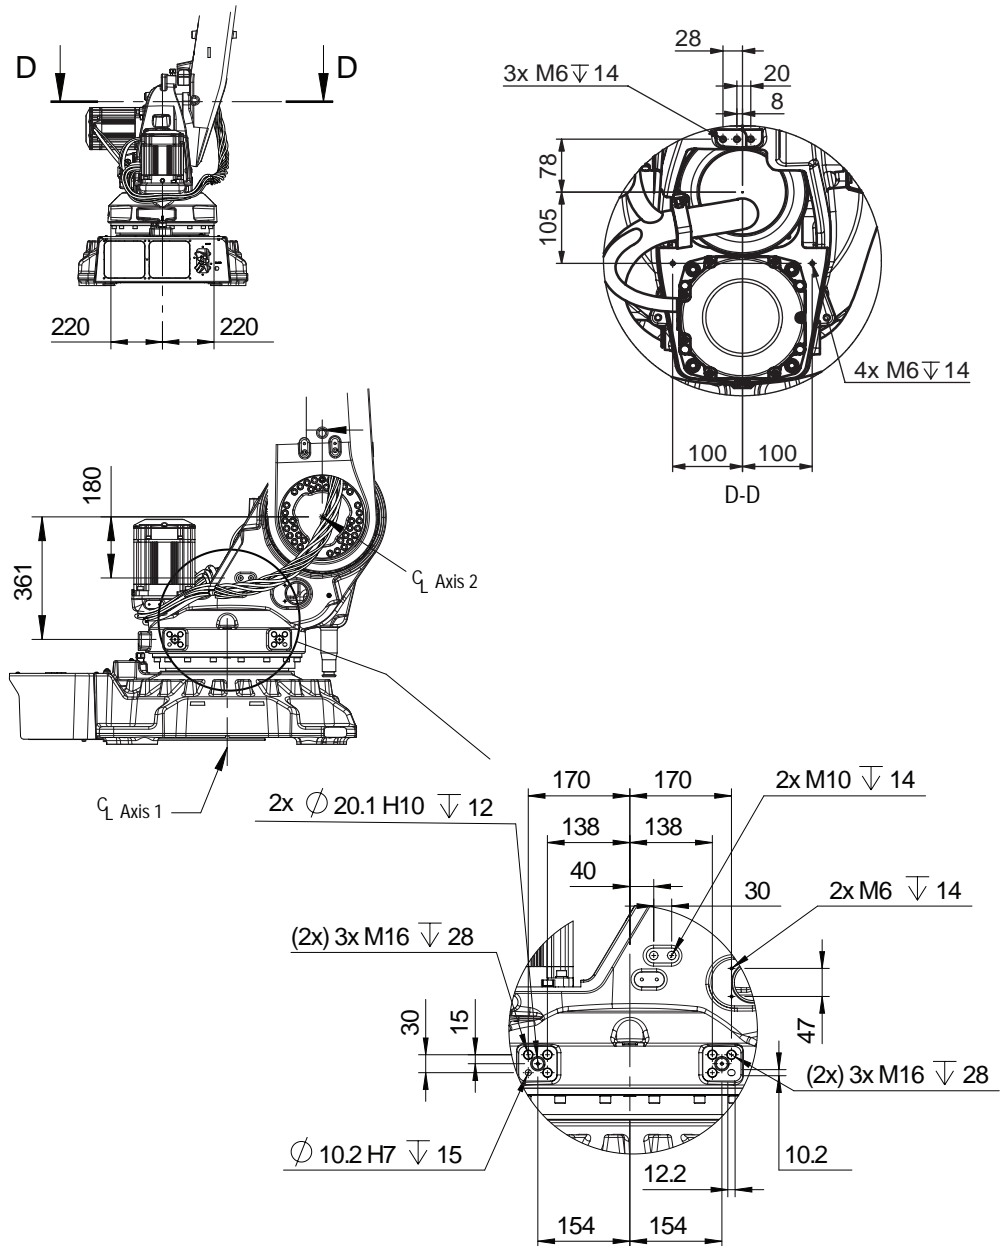

xx2100000812

Continues on next page

Tool flange dimensions

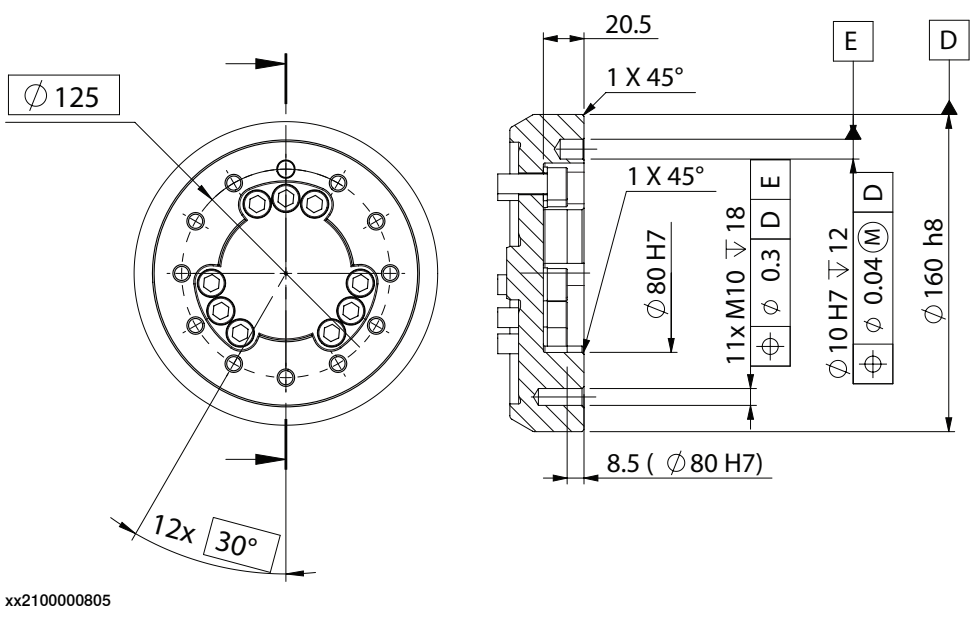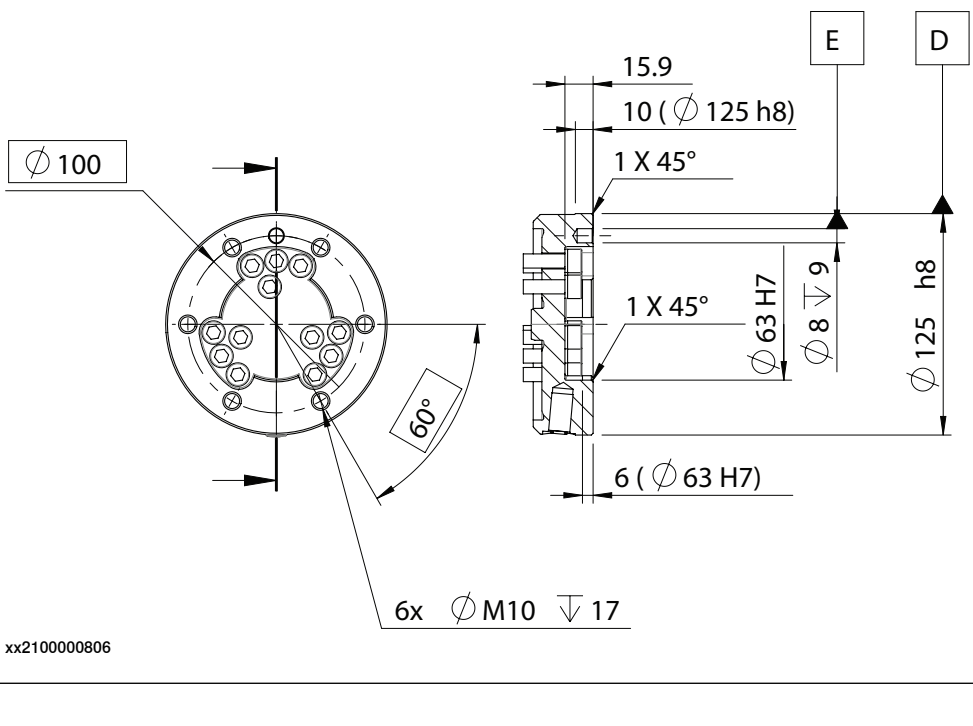Robot variant	Tool flange dimension
<p>IRB 5710-110/2.3</p>  <p>xx2100000805</p>	 <p>xx2100000806</p>
<p>IRB 5710-90/2.3 LID</p>	

Continues on next page

2 Technical data for IRB 5710

2.2 Fitting equipment on the robot (robot dimensions)

Continued

Robot variant	Tool flange dimension
	<p>xx2100000807</p>
IRB 5710-70/2.7 LID	<p>xx2100000808</p>

Fastener quality

When fitting tools on the tool flange, only use screws with quality 12.9. For other equipment use suitable screws and tightening torque for your application.

2.3 Additional installation information

General

IRB 5710 is available in four variants and all variants can be floor mounted, inverted, or tilted mounted.

Detailed installation instructions

All detailed installation instructions are described in *Product manual - IRB 5710*.

Attachment screws base plate

The table below specifies the type of securing screws and washers to be used for securing the robot to the base plate/foundation.

Suitable screws	M24 x 100
Quantity	8 pcs
Quality	8.8
Screw tightening yield point utilization factor (v) (according to VDI2230)	90% (v=0.9)
Suitable washer	4 mm flat washer
Guide pins	Guide pins are required if mounting the manipulator to a track motion or to a base plate. For more information, see Guide pins on page 49 .
Tightening torque	550 Nm (screws lubricated with Molykote 1000) 600-725 Nm, typical 650 Nm (screws none or lightly lubricated)
Level surface requirements	0.3 mm, see Requirements, foundation on page 21 for detailed explanation.

Continues on next page


2 Technical data for IRB 5710

2.3 Additional installation information

Continued

Hole configuration, base

This illustration shows the hole configuration used when securing the robot.

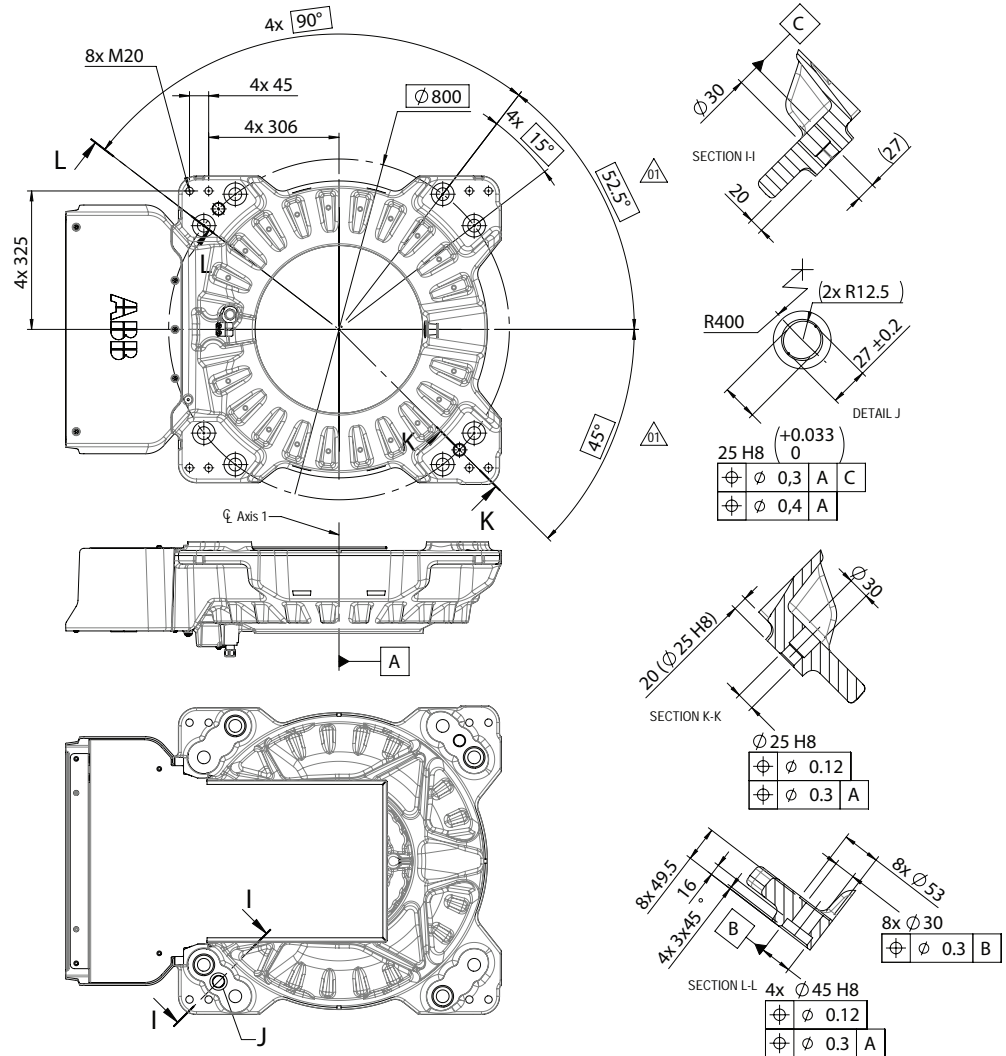

xx210000788

Continues on next page

2.3.1 Installing a base plate

Advantages of using a base plate

Instead of installing the robot directly on the floor, a base plate can be manufactured and used as an adapter between the floor and the robot base. This list specifies some of the advantages of using a base plate:

- to ensure a plain surface with a high precision of the robot base hole configuration
- to simplify adjustment of levelness by machined surfaces or by using shims
- to distribute the press force from the robot to a larger foot print
- to compensate poor floor quality that might not be suitable for fastening the robot base directly onto. The base plate has a greater number of fastening points to the foundation and makes a larger footprint, which reduces the load on each fastening point.
- to reduce surface pressure on the foundation contact points, which minimizes the risk of wearing down an uneven surface and thereby causing changes in the robot fastening tightening torque
- to be able to prepare the installation site before robot delivery
- to increase the precision between the positions of an installed robot and other equipment



Note

Do not use a base plate for installation of an inverted robot.

Continues on next page


2 Technical data for IRB 5710

2.3.1 Installing a base plate

Continued

Base plate drawing

The following figure shows the option base plate (dimensions in mm).

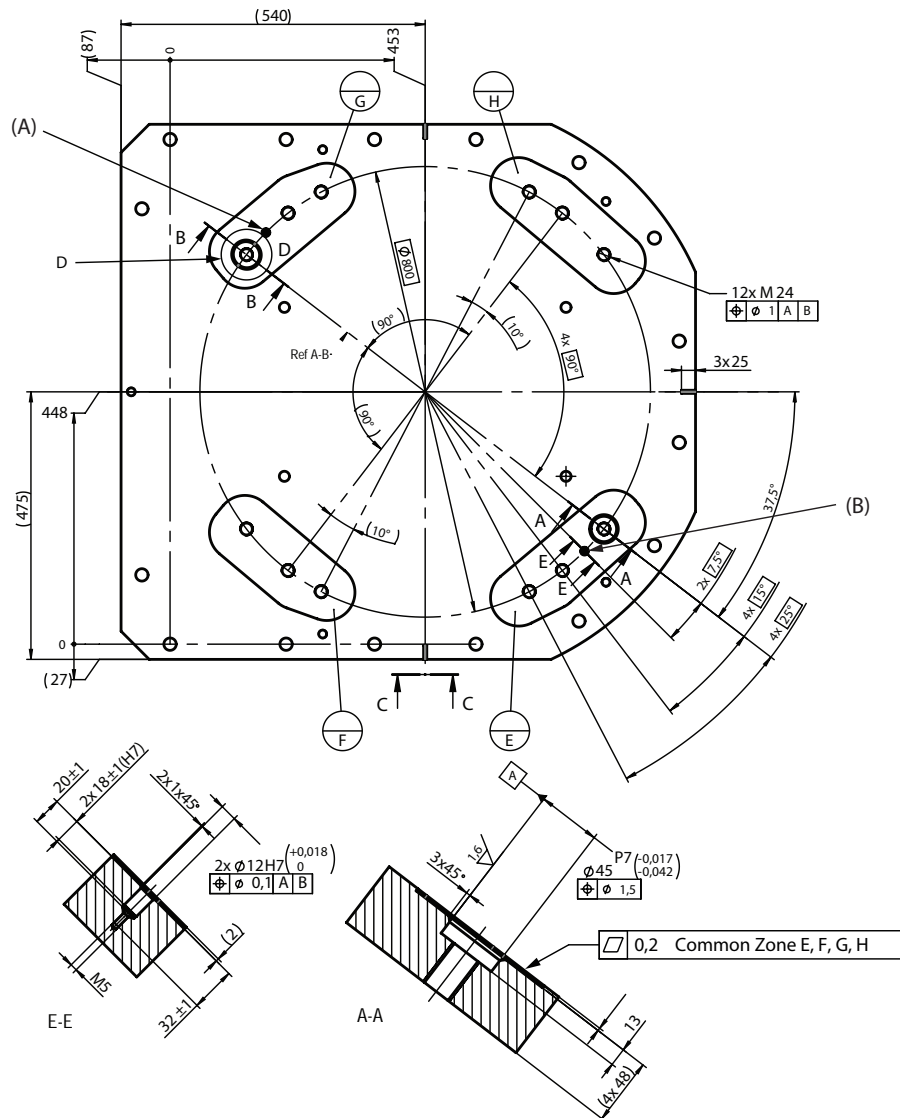

xx1500000246


Pos	Description
A, B	Hole for guide pin, cylindrical, see Guide pins on page 49
E, F, G, H	Common tolerance zone (accuracy all over the base plate from one contact surface to the other)

Continues on next page

2 Technical data for IRB 5710

2.3.1 Installing a base plate

Continued

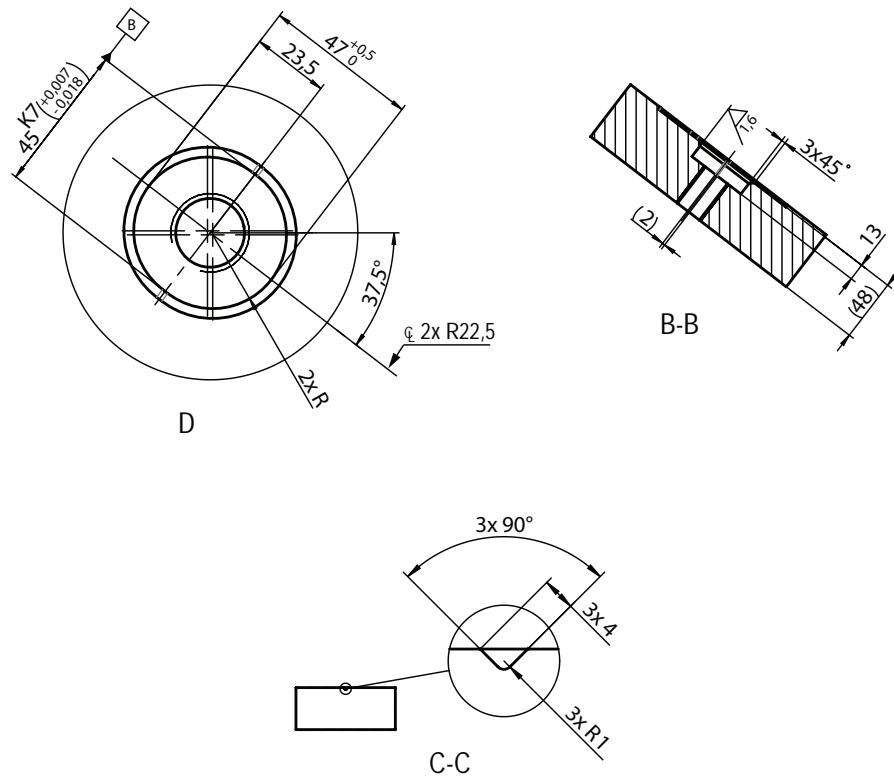



xx150000247

Continues on next page

2 Technical data for IRB 5710

2.3.1 Installing a base plate


Continued

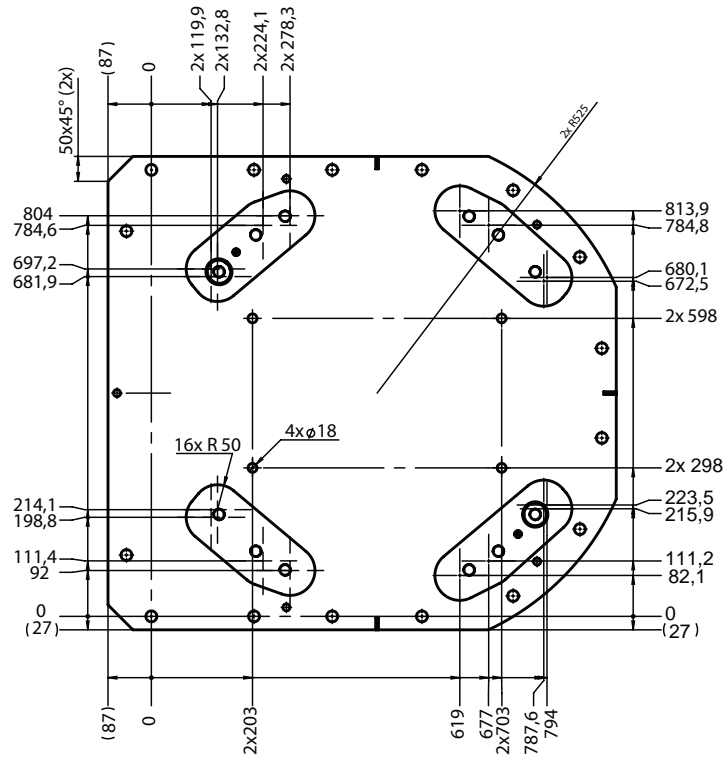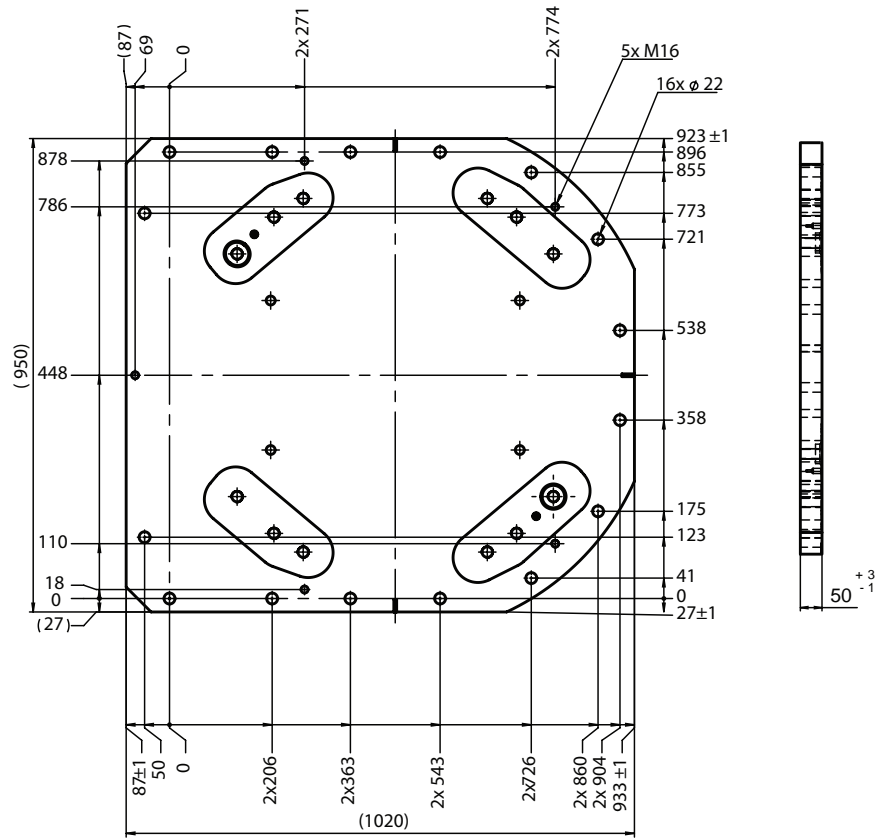

xx1500000249

Continues on next page


Guide pins

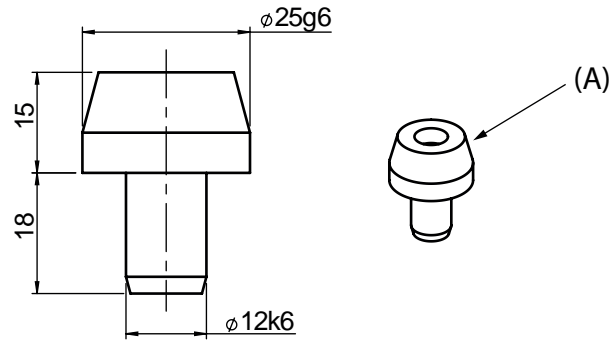

XX150000248

Pos	Description
A	Cylindrical guide pin (x2) (Requires attachment screws, see Assembly of guide pins on page 49.)

Assembly of guide pins

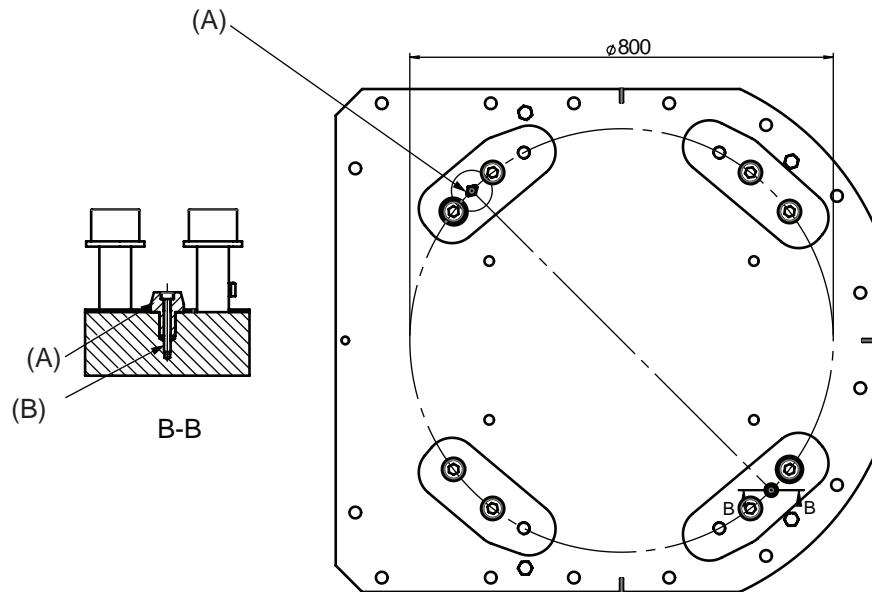

Pos	Description
A	Cylindrical guide pin (x2)
B	M5 x 40. Tightening torque 6 Nm. (x2)

Continues on next page


2 Technical data for IRB 5710

2.3.1 Installing a base plate

Continued

Base plate, orienting grooves and leveling bolts

The illustration below shows the orienting grooves and attachment holes for leveling bolts in the base plate.

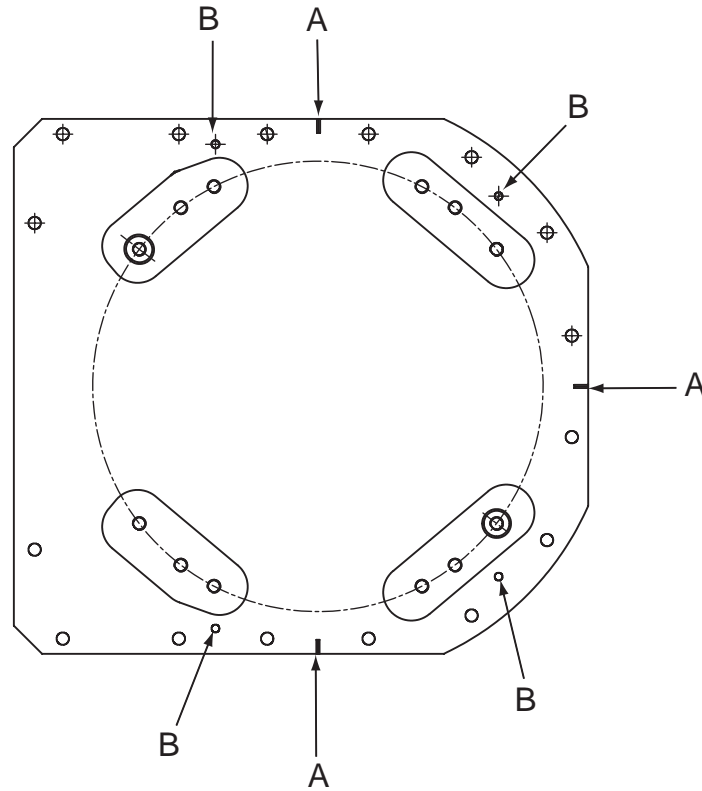


xx150000312

A	Orienting grooves (3 pcs)
B	Levelling bolts, attachment holes (4 pcs)

Continues on next page

Base plate, locating pins

The illustration below shows the locating pins in the base plate.

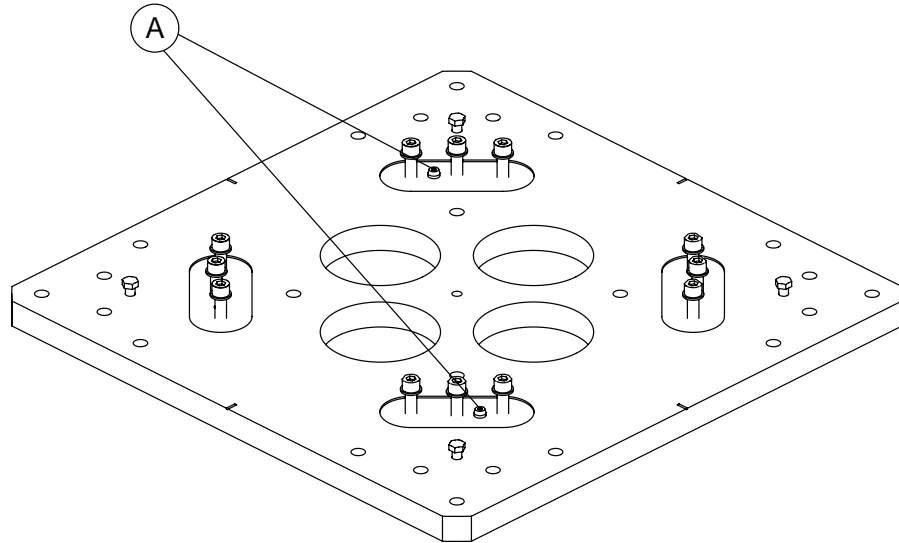


xx1700001591

A	Locating pins (2 pcs)
---	-----------------------

Base plate, guide sleeve holes

The illustration below shows the guide sleeve holes in the base plate.

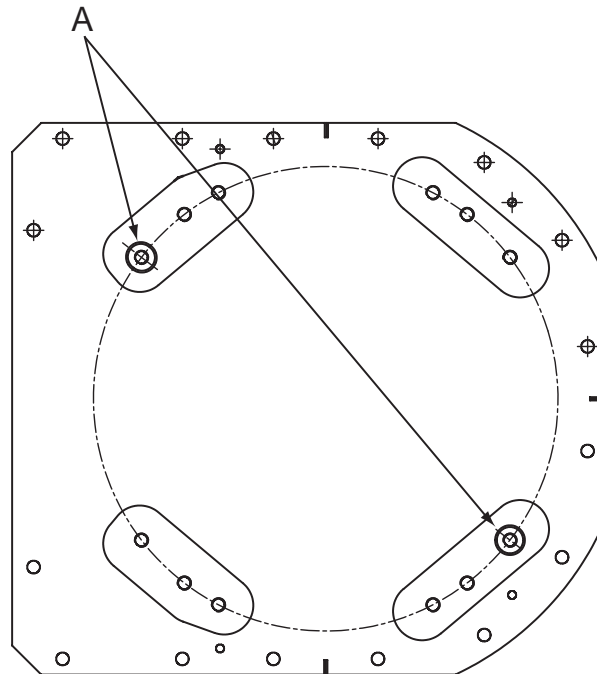

xx0300000045

A	Guide sleeve holes (2 pcs)
---	----------------------------

2 Technical data for IRB 5710

2.3.2 Setting the system parameters for an inverted or a tilted robot

2.3.2 Setting the system parameters for an inverted or a tilted robot

General

A robot delivered for inverted mounting, is configured for mounting parallel to the floor, without tilting. If the robot is mounted in any other angle than 180°, then the system parameters that describe the mounting angle (how the robot is oriented relative to the gravity) must be re-defined.



Note

With inverted installation, make sure that the gantry or corresponding structure is rigid enough to prevent unacceptable vibrations and deflections, so that optimum performance can be achieved.



Note

The mounting positions are described in [Mounting positions on page 19](#), and the requirements on the foundation are described in [Requirements, foundation on page 21](#).

System parameters



Note

The mounting angle must be configured correctly in the system parameters so that the robot system can control the movements in the best possible way. An incorrect definition of the mounting angle will result in:

- Overloading the mechanical structure.
- Lower path performance and path accuracy.
- Some functions will not work properly, for example *Load Identification* and *Collision detection*.

Gravity Beta

When the robot is mounted other than floor-standing (rotated around the y-axis), the robot base frame and the system parameter *Gravity Beta* must be redefined. If the robot is mounted upside down (inverted), then *Gravity Beta* should be π (+3.141593).

The *Gravity Beta* is a positive rotation direction around the y-axis in the base coordinate system. The value is set in radians.

Gamma Rotation

Gamma Rotation defines the orientation of the robot foot on the travel carriage (track motion).

Continues on next page

Mounting angles and values

The parameter *Gravity Beta* (or *Gravity Alpha*) specifies the mounting angle of the robot in radians. It is calculated in the following way.

$\text{Gravity Beta} = A^\circ \times 3.141593/180 = B \text{ radians}$, where *A* is the mounting angle in degrees and *B* is the mounting angle in radians.

Example of position	Mounting angle (A °)	Gravity Beta
Floor mounted	0°	0.000000 (Default)
Tilted mounting	Example: 15°	Corresponds to: 0.261799 rad
Inverted mounting	180°	3.141593

Defining the system parameters in RobotWare

The value of the system parameters that define the mounting angle must be redefined when changing the mounting angle of the robot. The parameters belong to the type *Robot*, in the topic *Motion*.

The system parameters are described in *Technical reference manual - System parameters*.

The system parameters are configured in RobotStudio or on the FlexPendant.

2 Technical data for IRB 5710

2.3.3.1 Adjusting the working range

2.3.3 Working range alterations

2.3.3.1 Adjusting the working range

Reasons for adjusting the manipulator working range

The working range of each manipulator axis is configured in the software. If there is a risk that the manipulator may collide with other objects at installation site, its working space should be limited. The manipulator must always be able to move freely within its entire working space.

Working range configurations

The parameter values for the axes working range can be altered within the allowed working range and according to available options for the robot, either to limit or to extend a default working range. Allowed working ranges and available options for each manipulator axis are specified in [Working range on page 30](#).

Mechanical stops on the manipulator

Mechanical stops are and can be installed on the manipulator as limiting devices to ensure that the manipulator axis does not exceed the working range values set in the software parameters.



Note

The mechanical stops are only installed as safety precaution to physically stop the robot from exceeding the working range set. A collision with a mechanical stop always requires actions for repair and troubleshooting.

Axis	Fixed mechanical stop ⁱ	Movable mechanical stop ⁱⁱ
Axis 1	yes	yes The working range can be reduced by altering the parameter values. Installation of additional mechanical stops is recommended. The working range can be extended (option 3324-1) by altering the parameter values and removing the movable mechanical stop pin.
Axis 2	yes	no
Axis 3	yes	no
Axis 4	no	no
Axis 5	yes	no
Axis 6	no	no

ⁱ Part of the casting or fixed on the casting and can not /should not be removed.

ⁱⁱ Can be installed in one or more than one position, to ensure a reduced working range, or be removed to allow extended working range.

2.3.3.2 Installing movable mechanical stops on axis 1 (option 3323-1)


Reduction of the axis-1 working range

The working range of axis 1 is limited by system parameter configuration. To reduce the working range from default range, first adjust the parameter values and then install additional mechanical stops as a safety measure.

The movable mechanical stops reduce the working range according to the table.

Graduation of limited working range	Reduction of working range
15°	from $\pm 5^\circ$ and $\pm 125^\circ$ in both directions

Illustration, reduced working range

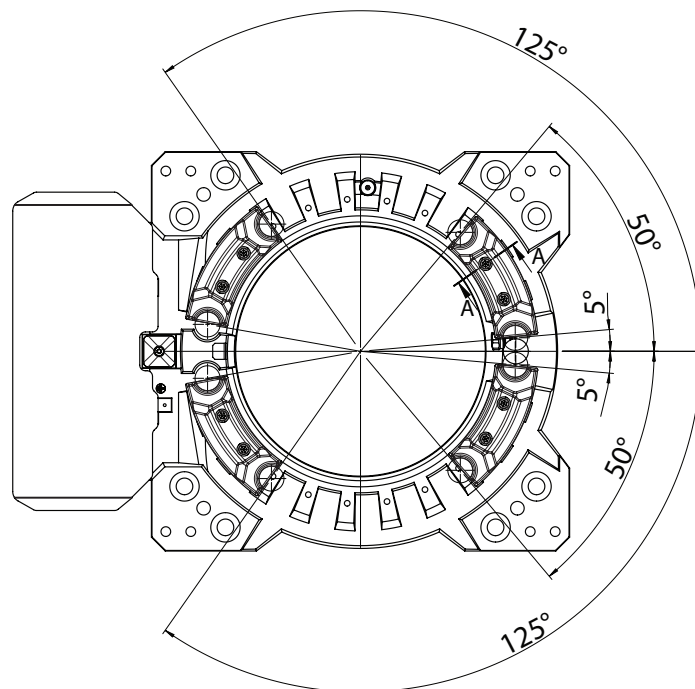

xx210000973



WARNING

If the mechanical stop pin is deformed after a hard collision, it must be replaced!
Deformed movable stops and/or additional stops as well as deformed attachment screws must also be replaced after a hard collision.

Continues on next page


2 Technical data for IRB 5710

2.3.3.2 Installing movable mechanical stops on axis 1 (option 3323-1)

Continued

Location of the mechanical stops

The mechanical stops are located as shown in the figure.

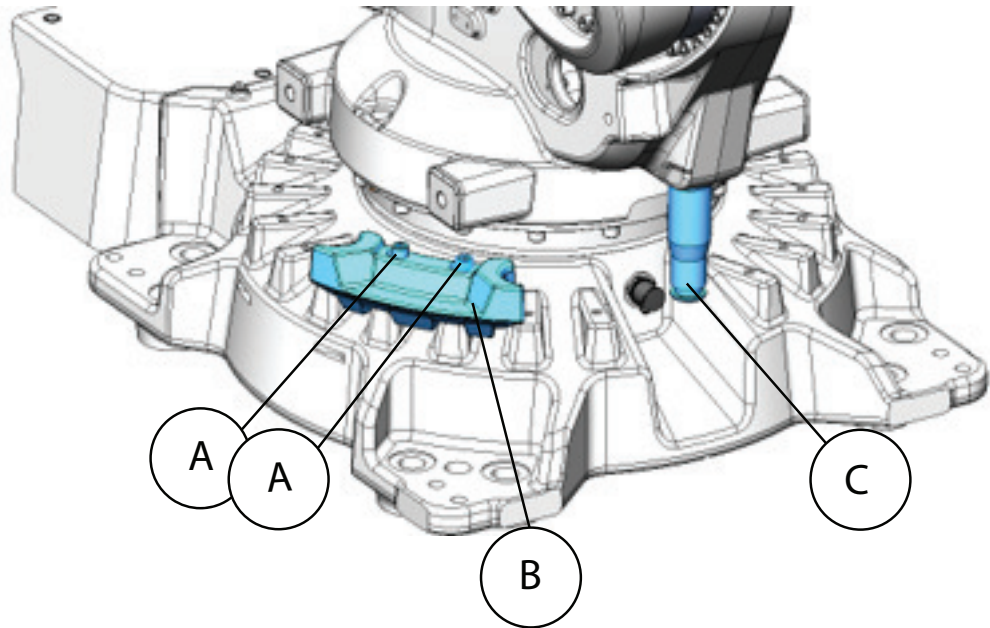

xx2100002647

A ⁱ	Attachment screws M12x70 quality 12.9 and washers DIN 125 (2 pcs per additional mechanical stop); Tightening torque 60 Nm
B	Movable mechanical stop
C	Mechanical stop pin axis-1

ⁱ There is a need to drill and make threaded M12 holes in base.
Use the movable mechanical stop or the dents in the casting as a guide to drill.

Installing the movable mechanical stops

See the product manual for installation procedure.

Fastener quality

When fitting tools on the tool flange, only use screws with quality 12.9. For other equipment use suitable screws and tightening torque for your application.

2.4 Calibration and references

2.4.1 Calibration methods

Overview

This section specifies the different types of calibration and the calibration methods that are supplied by ABB.

The original calibration data delivered with the robot is generated when the robot is floor mounted. If the robot is not floor mounted, then the robot accuracy could be affected. The robot needs to be calibrated after it is mounted.

More information is available in the product manual.

Types of calibration

Type of calibration	Description	Calibration method
Standard calibration	The calibrated robot is positioned at calibration position. Standard calibration data is found on the SMB (serial measurement board) or EIB in the robot.	Axis Calibration
Absolute accuracy calibration (optional)	Based on standard calibration, and besides positioning the robot at synchronization position, the Absolute accuracy calibration also compensates for: <ul style="list-style-type: none"> Mechanical tolerances in the robot structure Deflection due to load <p>Absolute accuracy calibration focuses on positioning accuracy in the Cartesian coordinate system for the robot.</p> <p>Absolute accuracy calibration data is found on the serial measurement board (SMB) or other robot memory.</p> <p>A robot calibrated with Absolute accuracy has the option information printed on its name plate (OmniCore).</p> <p>To regain 100% Absolute accuracy performance, the robot must be recalibrated for absolute accuracy after repair or maintenance that affects the mechanical structure.</p>	CalibWare

Brief description of calibration methods

Axis Calibration method

Axis Calibration is a standard calibration method for calibration of IRB 5710. It is the recommended method in order to achieve proper performance.

The following routines are available for the Axis Calibration method:

- Fine calibration
- Update revolution counters
- Reference calibration

The calibration equipment for Axis Calibration is delivered as a toolkit.

Continues on next page

2 Technical data for IRB 5710

2.4.1 Calibration methods

Continued

The actual instructions of how to perform the calibration procedure and what to do at each step is given on the FlexPendant. You will be guided through the calibration procedure, step by step.

CalibWare - Absolute Accuracy calibration

The CalibWare tool guides through the calibration process and calculates new compensation parameters. This is further detailed in the *Application manual - CalibWare Field*.

If a service operation is done to a robot with the option Absolute Accuracy, a new absolute accuracy calibration is required in order to establish full performance. For most cases after replacements that do not include taking apart the robot structure, standard calibration is sufficient.

The Absolute Accuracy option varies according to the robot mounting position. This is printed on the robot name plate for each robot. The robot must be in the correct mounting position when it is recalibrated for absolute accuracy.


2.4.2 Synchronization marks and axis movement directions

2.4.2.1 Synchronization marks and synchronization position for axes

Introduction

This section shows the position of the synchronization marks and the synchronization position for each axis.

Synchronization marks, IRB 5710, IRB 5720

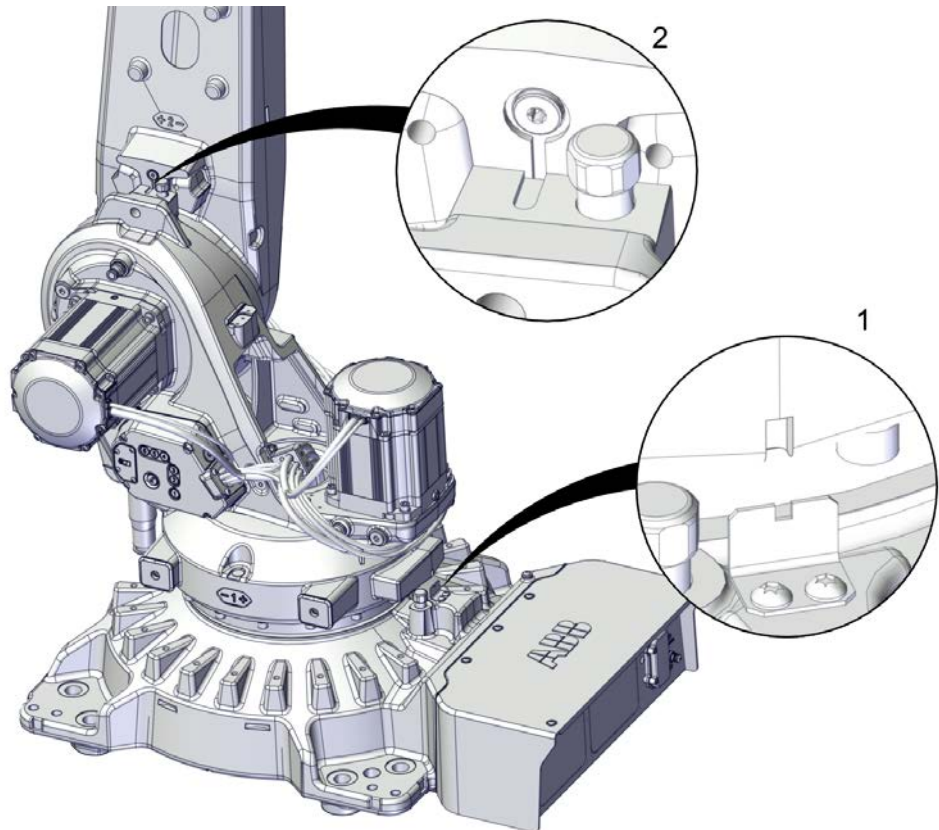


xx2100002319

Continues on next page

2 Technical data for IRB 5710

2.4.2.1 Synchronization marks and synchronization position for axes

Continued

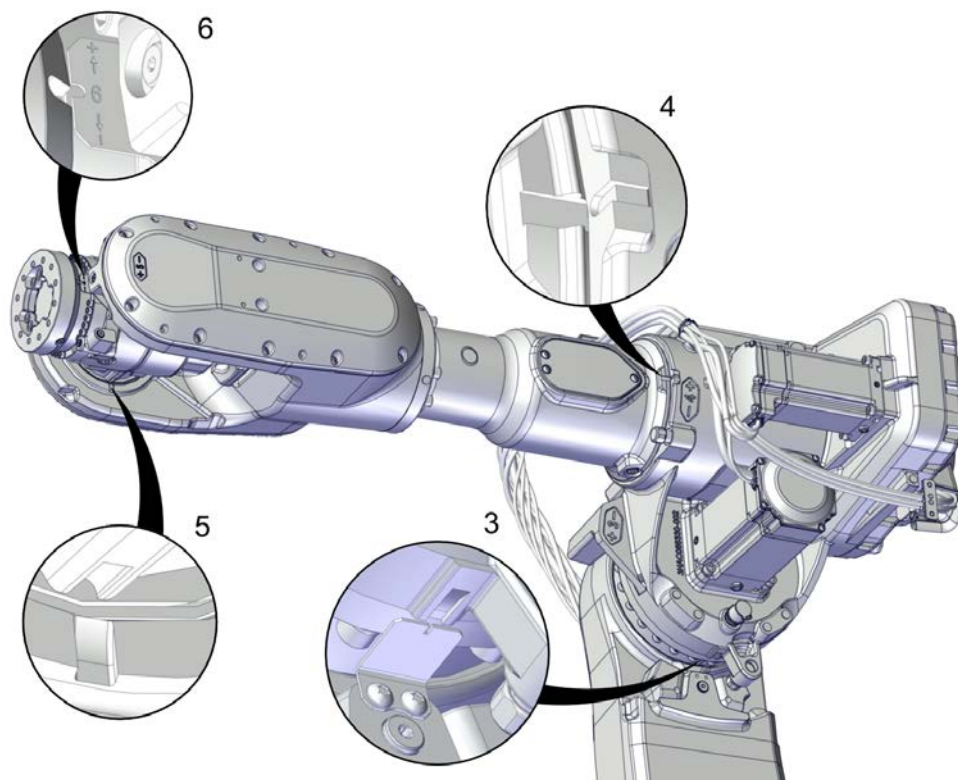

xx2100002318


2.4.2.2 Calibration movement directions for all axes

Overview

When calibrating, the axis must consistently be run towards the calibration position in the same direction in order to avoid position errors caused by backlash in gears and so on. Positive directions are shown in the graphic below.

Calibration service routines will handle the calibration movements automatically and these might be different from the positive directions shown below.

Manual movement directions

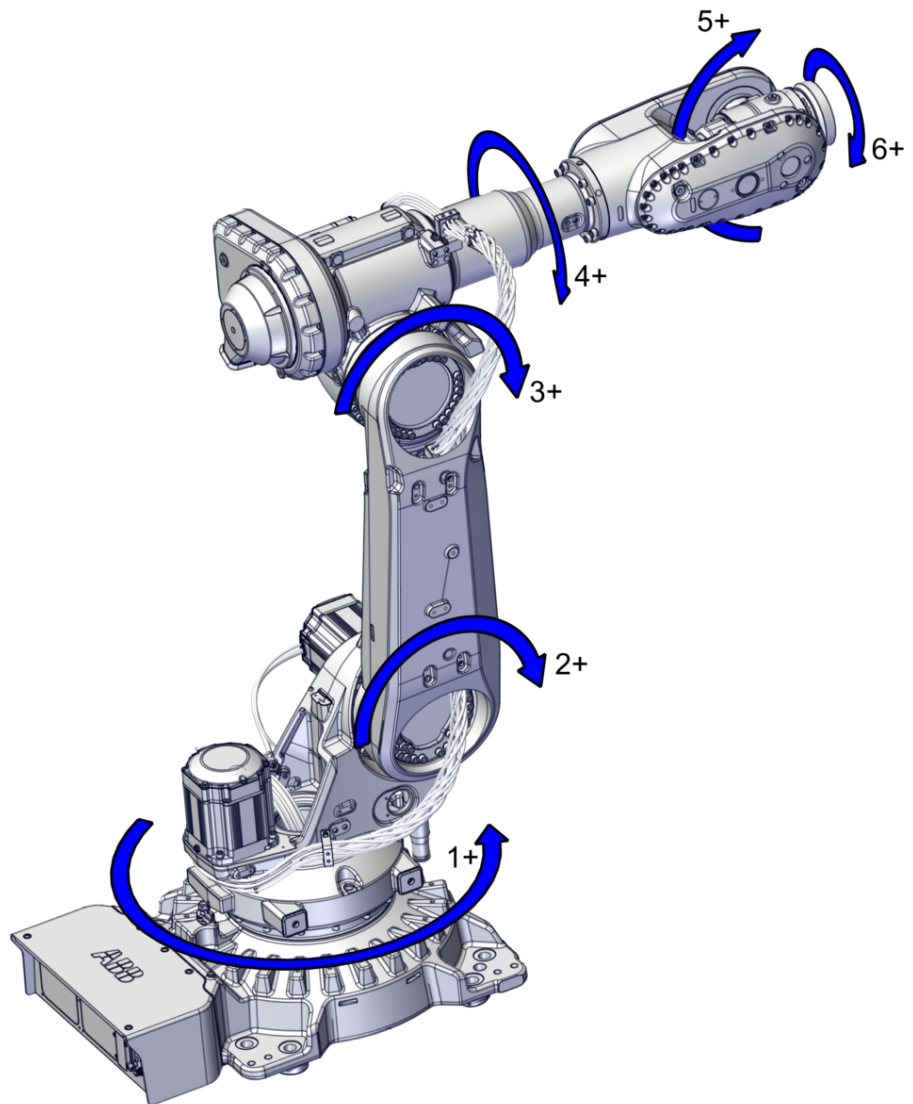

xx2100002527


2 Technical data for IRB 5710

2.4.3 Fine calibration

2.4.3 Fine calibration

General

The fine calibration is done with the Axis calibration method.

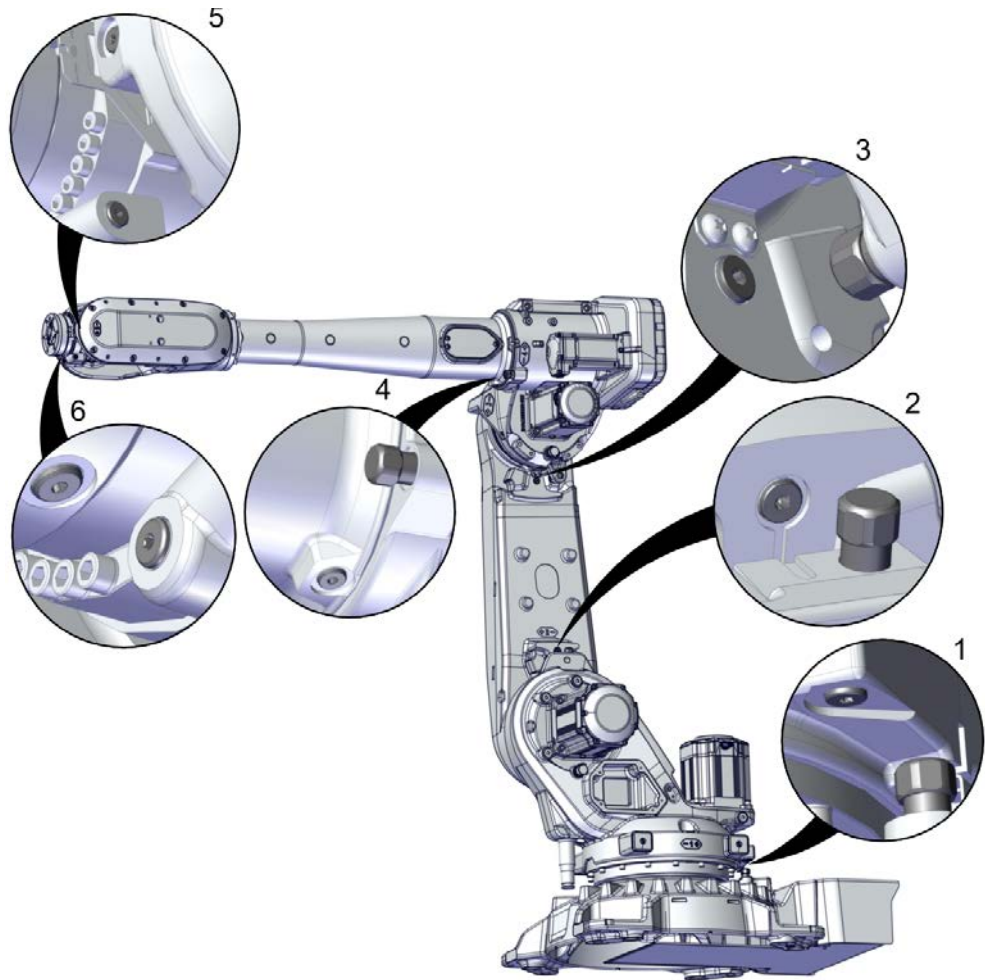

xx2100002320

2.4.4 Absolute Accuracy calibration

Purpose

Absolute Accuracy is a calibration concept that improves TCP accuracy. The difference between an ideal robot and a real robot can be several millimeters, resulting from mechanical tolerances and deflection in the robot structure. *Absolute Accuracy* compensates for these differences.

Here are some examples of when this accuracy is important:


- Exchangeability of robots
- Offline programming with no or minimum touch-up
- Online programming with accurate movement and reorientation of tool
- Programming with accurate offset movement in relation to eg. vision system or offset programming
- Re-use of programs between applications

The option *Absolute Accuracy* is integrated in the controller algorithms and does not need external equipment or calculation.



Note

The performance data is applicable to the corresponding RobotWare version of the individual robot.

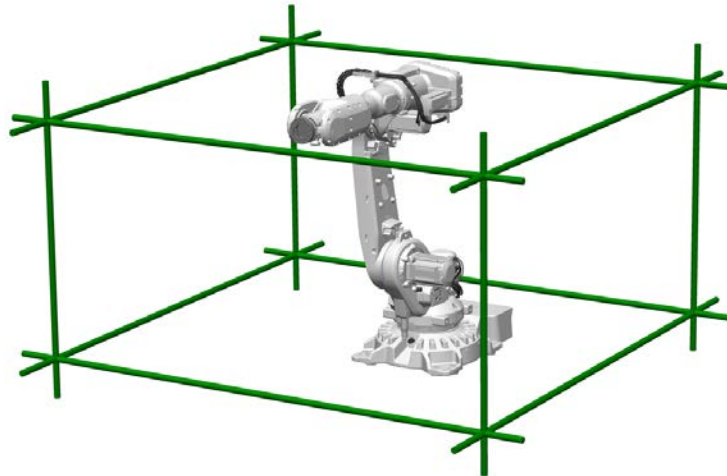

xx2100002472

What is included

Every *Absolute Accuracy* robot is delivered with:

- compensation parameters saved on the robot's serial measurement board
- a birth certificate representing the *Absolute Accuracy* measurement protocol for the calibration and verification sequence.

A robot with *Absolute Accuracy* calibration has a label with this information on the manipulator.

Continues on next page

2 Technical data for IRB 5710

2.4.4 Absolute Accuracy calibration

Continued

Absolute Accuracy supports floor mounted installations. Compensation parameters saved in the robot's serial measurement board differ depending on which Absolute Accuracy option is selected.

RAPID instructions

There are no RAPID instructions included in this option.

2.4.5 Axis Calibration on axis 6

General


Consideration of the customer tool design is required in order to be able to perform calibrations, without disassemble the customer tool. The tool can enclose the outside of the turning disc if it is not thicker than 10 mm (radial distance) in the position where preparation is done.



Note

Space needed to mount the Calibration tool for IRB 5710-90/2.7.

Customer interface plane

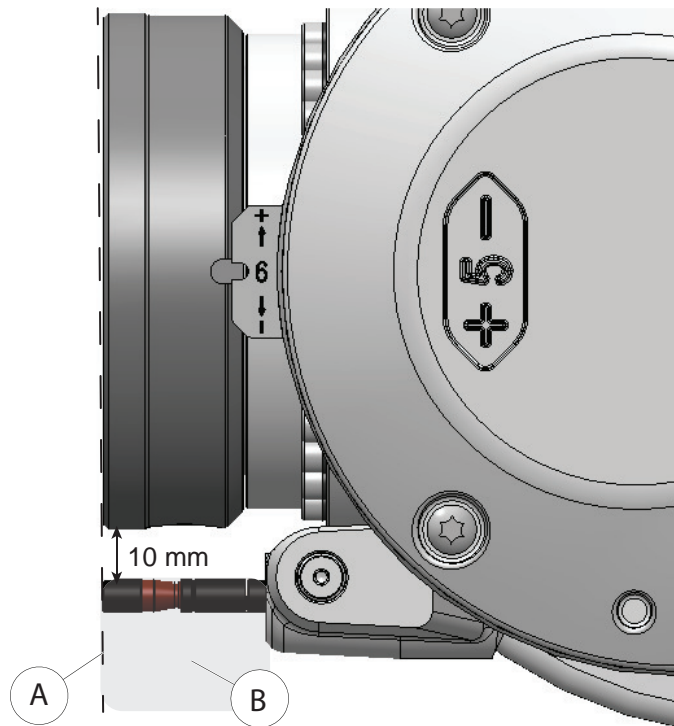

xx2100001145


Position	Description
A	Customer interface plane
B	Space needed to mount the Calibration tool

Continues on next page

2 Technical data for IRB 5710

2.4.5 Axis Calibration on axis 6

Continued

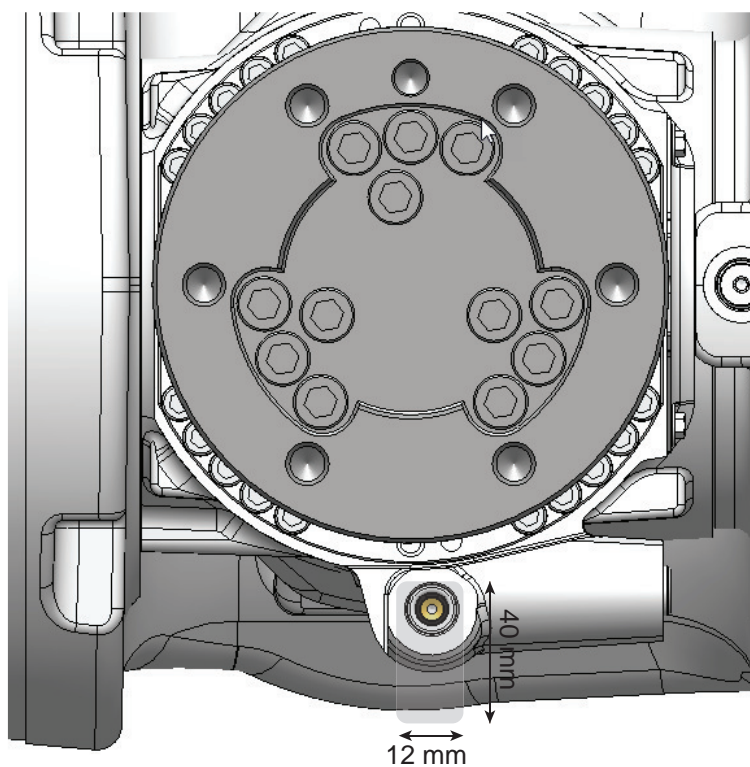

xx2100001146


2.4.6 Calibration tools for Axis Calibration

Calibration tools




WARNING

If any part is missing or damaged, the tool must be replaced immediately.

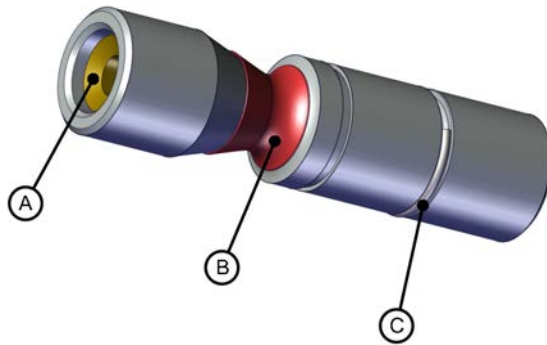

xx1500001914

A	Tube insert
B	Plastic protection
C	Steel spring ring

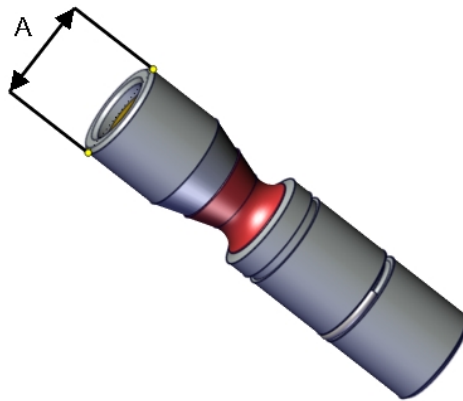

xx1500000951

A	Outer diameter
---	----------------

If including the calibration tool in a local periodic check system, the following measures should be checked.

- Outer diameter within $\varnothing 12g4$ mm, $\varnothing 8g4$ mm or $\varnothing 6g5$ mm (depending on calibration tool size).
- Straightness within 0.005 mm.

2 Technical data for IRB 5710

2.5.1 Introduction

2.5 Load diagrams

2.5.1 Introduction



WARNING

It is very important to always define correct actual load data and correct payload of the robot. Incorrect definitions of load data can result in overloading of the robot.

If incorrect load data and/or loads are outside load diagram is used the following parts can be damaged due to overload:

- motors
- gearboxes
- mechanical structure



WARNING

In the robot system the service routine LoadIdentify is available, which allows the user to make an automatic definition of the tool and load, to determine correct load parameters.

See *Operating manual - OmniCore*, for detailed information.



WARNING

Robots running with incorrect load data and/or with loads outside diagram, will not be covered by robot warranty.

General

The load diagrams include a nominal payload inertia, J_0 of 10 kgm² for IRB 5710-110/2.3 and IRB 5710-90/2.3 LID, 3 kgm² for IRB 5710-90/2.7 and IRB 5710-70/2.7 LID, and an extra load of 20 kg or complete dressing for the LeanID versions.

At different moment of inertia the load diagram will be changed. For robots that are allowed floor, tilted or inverted mounted, the load diagrams as given are valid and thus it is also possible to use RobotLoad within those tilt and axis limits.


Control of load case by "RobotLoad"

To verify a specific load case, use the RobotStudio add-in RobotLoad.

The result from RobotLoad is only valid within the maximum loads and tilt angles. There is no warning if the maximum permitted arm load is exceeded. For over-load cases and special applications, contact ABB for further analysis.

2.5.2 Diagrams

Diagrams of IRB 5710-110/2.3

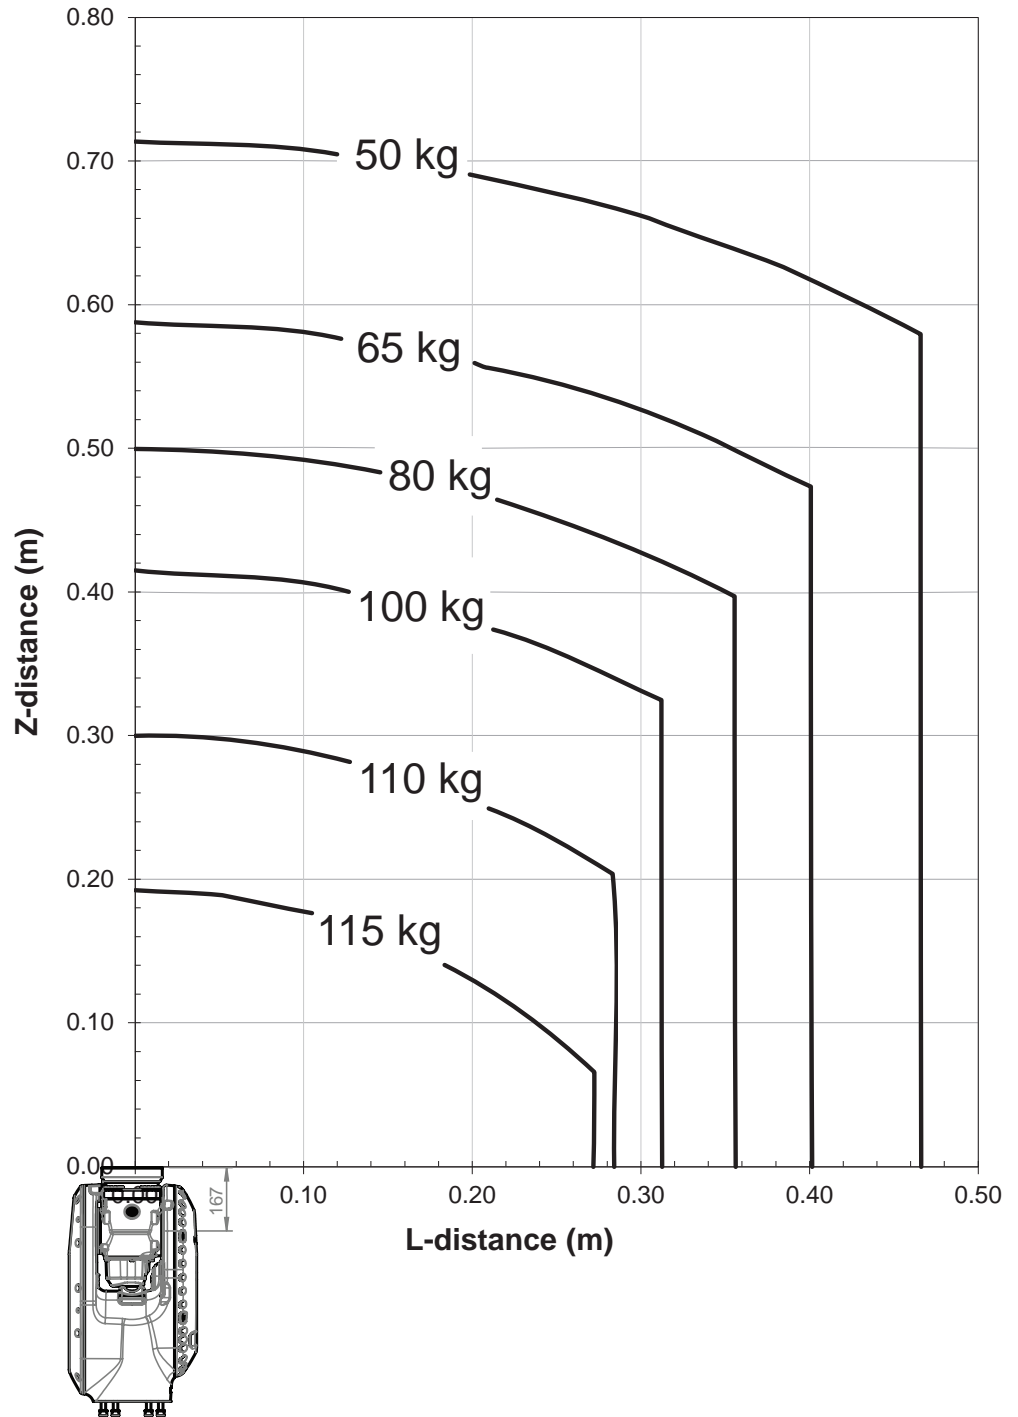

xx2100001496


Continues on next page

2 Technical data for IRB 5710

2.5.2 Diagrams

Continued

Diagrams of IRB 5710-110/2.3"Vertical Wrist" ($\pm 10^\circ$)

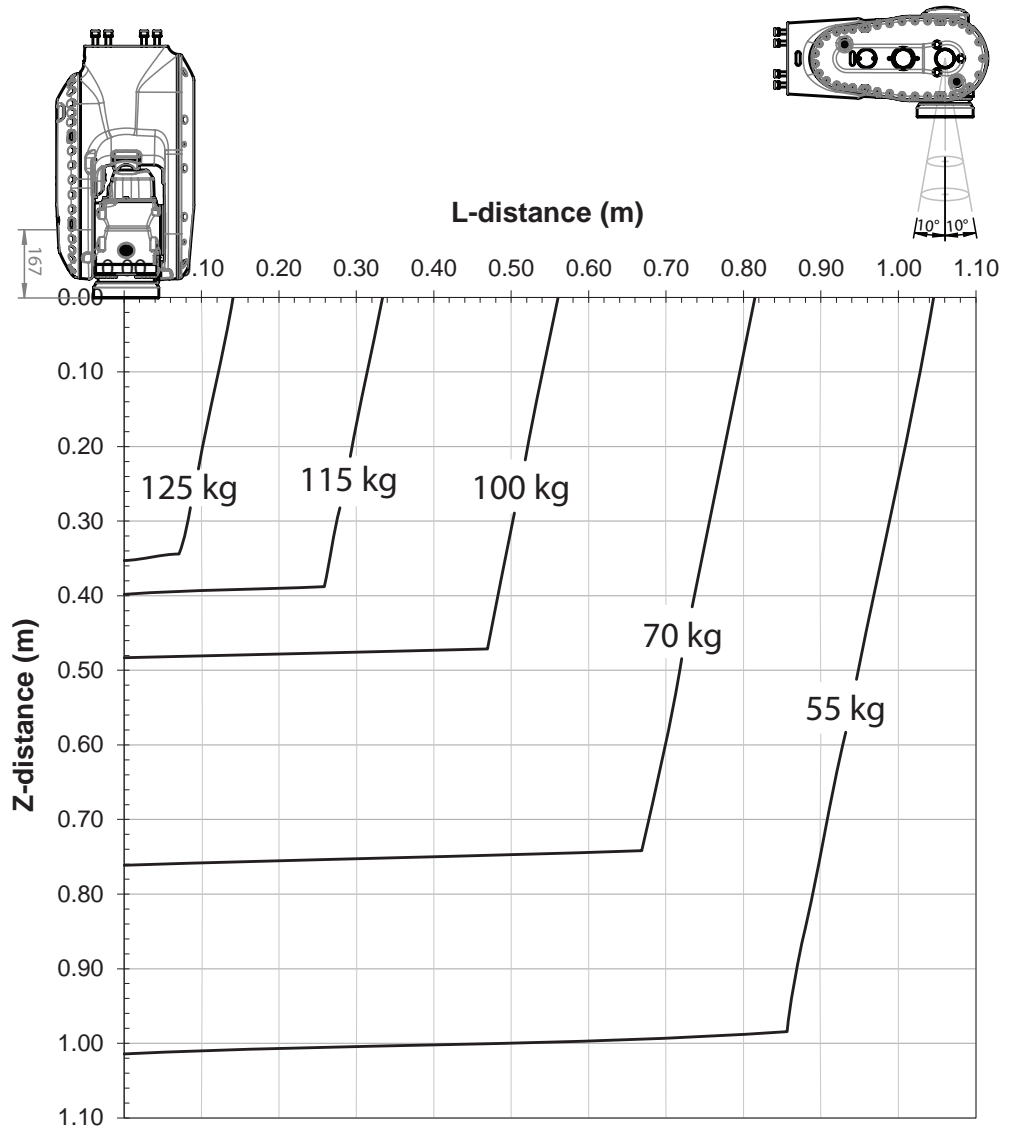


xx2100001497

For wrist down (0° deviation from the vertical line).

	Description
Max load	145 kg
Z _{max}	0.281 m
L _{max}	0.053 m

Continues on next page

Diagrams of IRB 5710-90/2.7

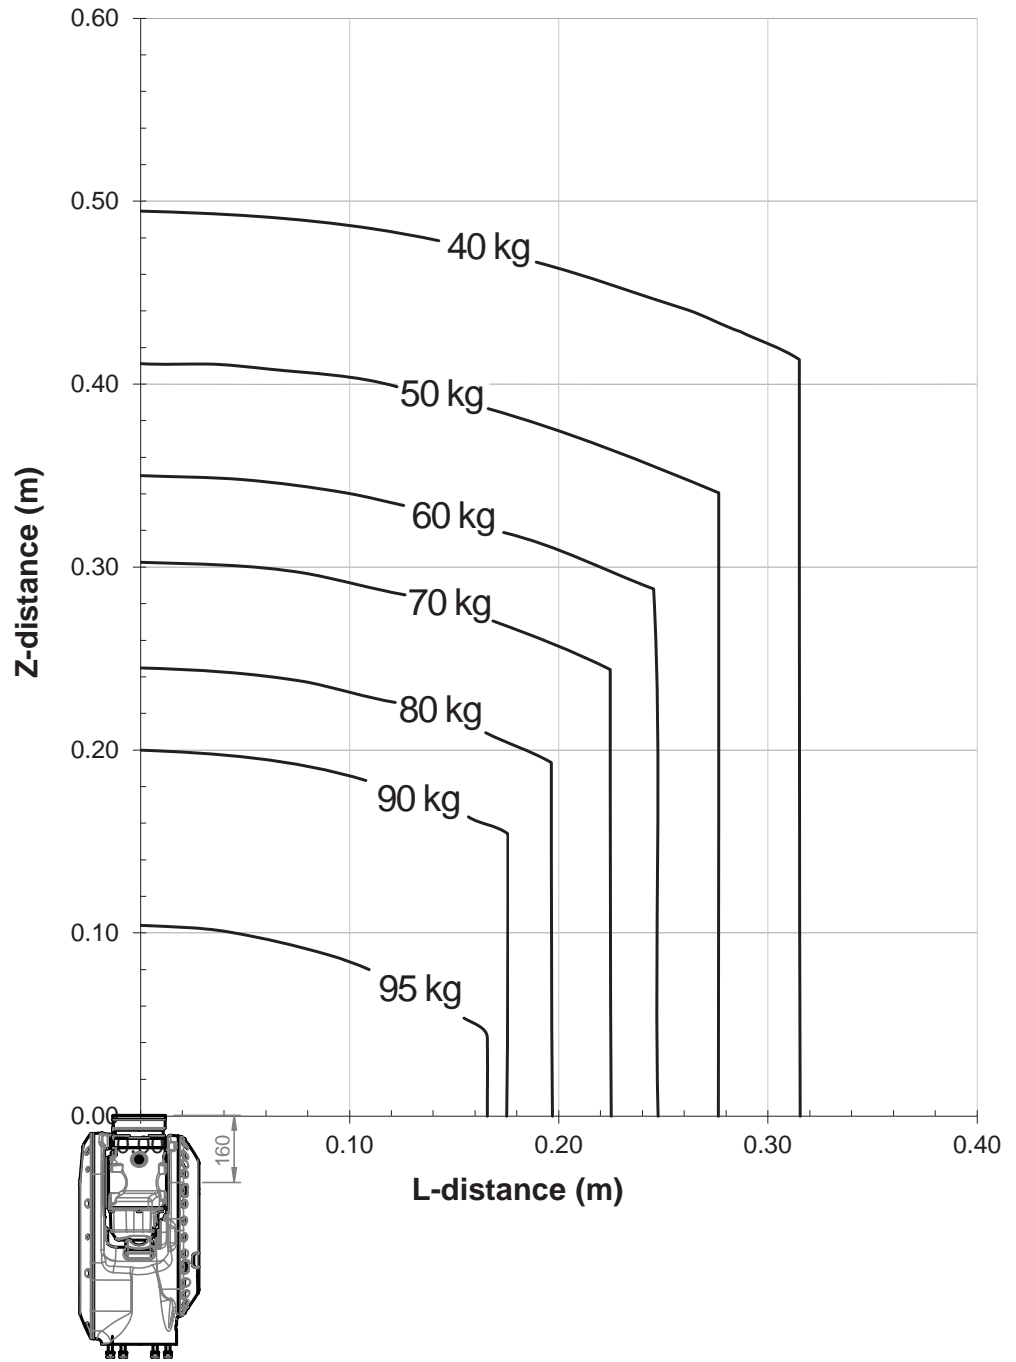

xx2100001500


Continues on next page

2 Technical data for IRB 5710

2.5.2 Diagrams

Continued

Diagrams of IRB 5710-90/2.7"Vertical Wrist" ($\pm 10^\circ$)

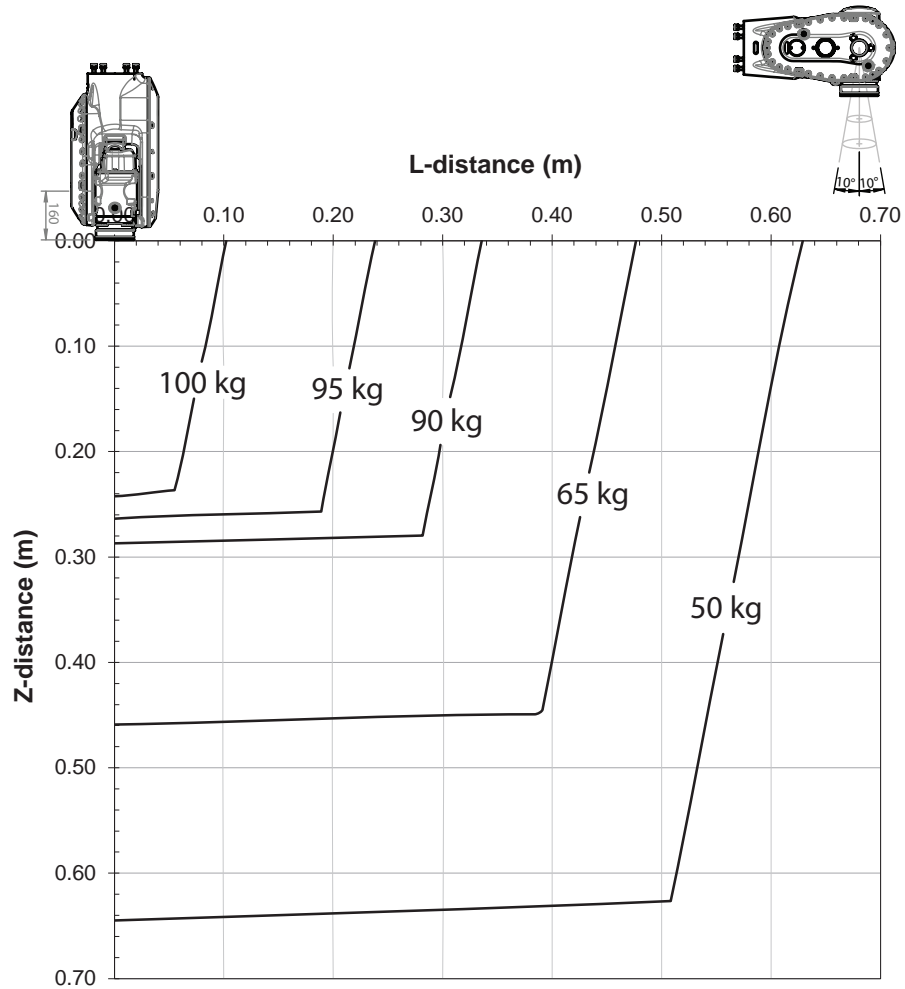


xx2100001501

For wrist down (0° deviation from the vertical line).

	Description
Max load	112 kg
Z _{max}	0.199 m
L _{max}	0.068 m

Continues on next page

Diagrams of IRB 5710-90/2.3 LID (option [3326-x])

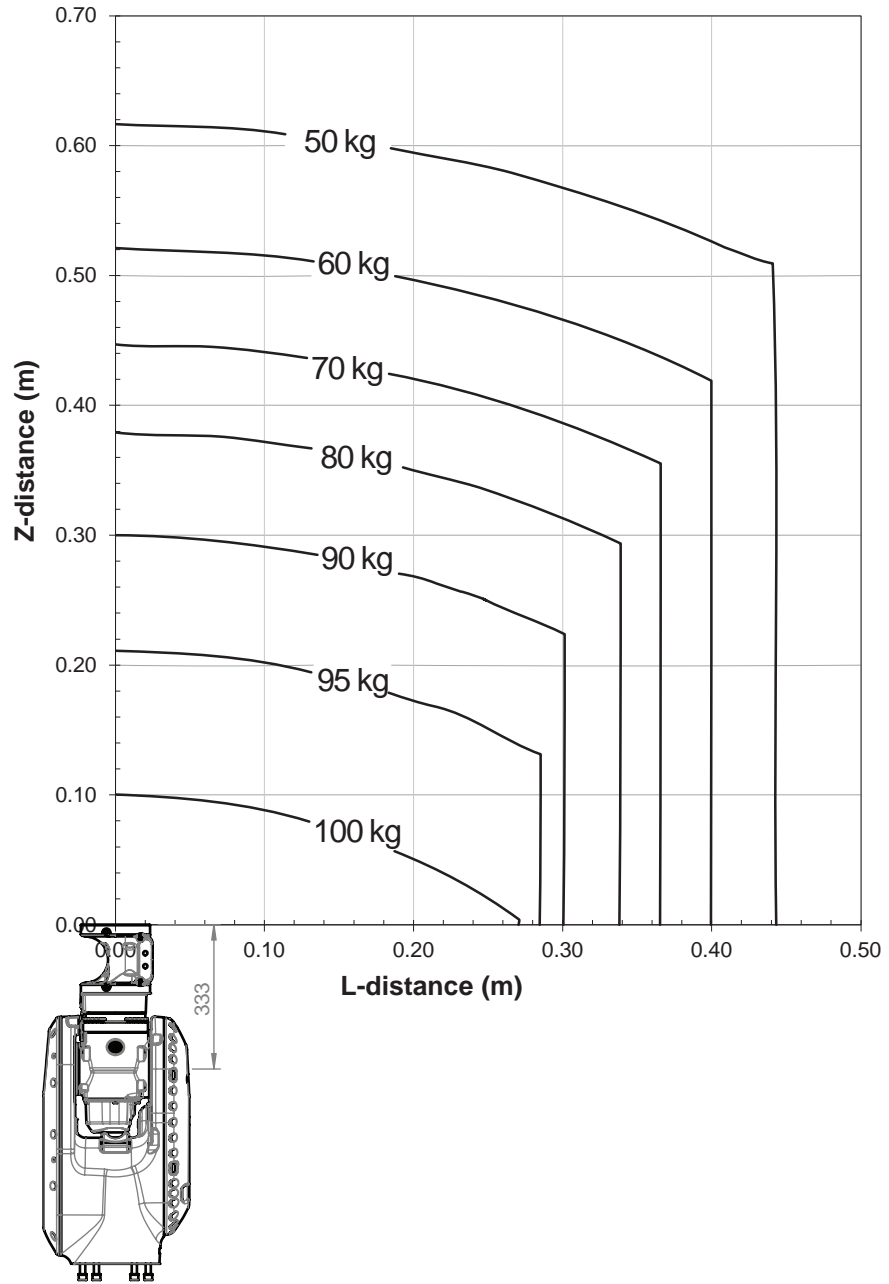

xx2100001498


Continues on next page

2 Technical data for IRB 5710

2.5.2 Diagrams

Continued

Diagrams of IRB 5710-90/2.3 LID (option [3326-x]) "Vertical Wrist" ($\pm 10^\circ$)

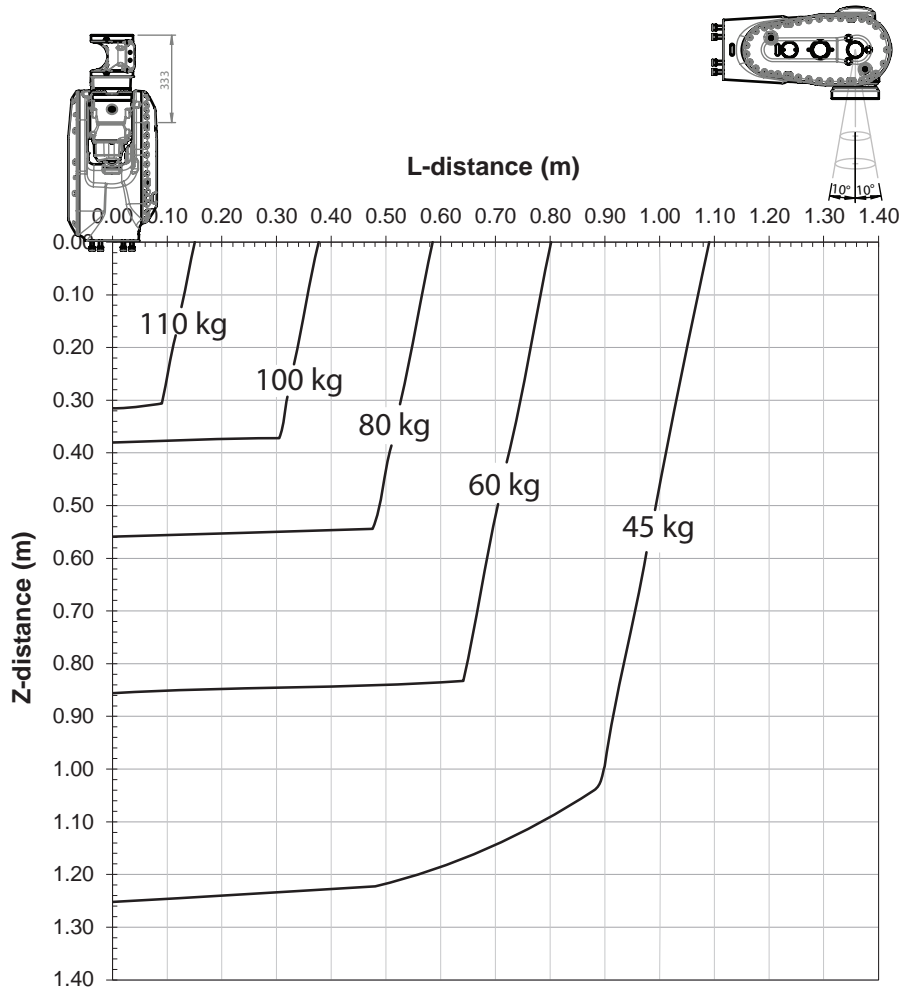


xx2100001499

For wrist down (0° deviation from the vertical line).

	Description
Max load	118 kg
Z _{max}	0.271 m
L _{max}	0.054 m

Continues on next page

Diagrams of IRB 5710-70/2.7 LID (option [3326-x])

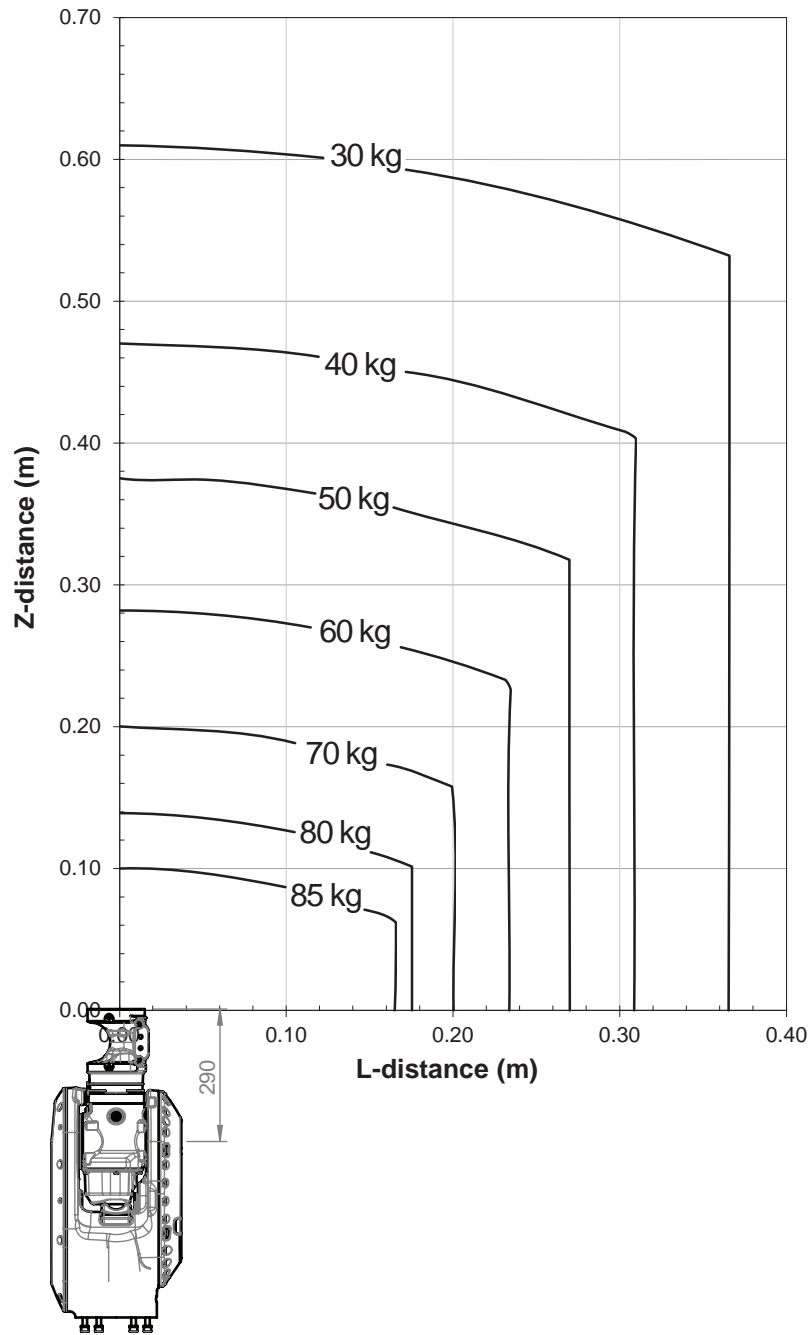

xx2100001502


Continues on next page

2 Technical data for IRB 5710

2.5.2 Diagrams

Continued

Diagrams of IRB 5710-70/2.7 LID (option [3326-x]) "Vertical Wrist" ($\pm 10^\circ$)

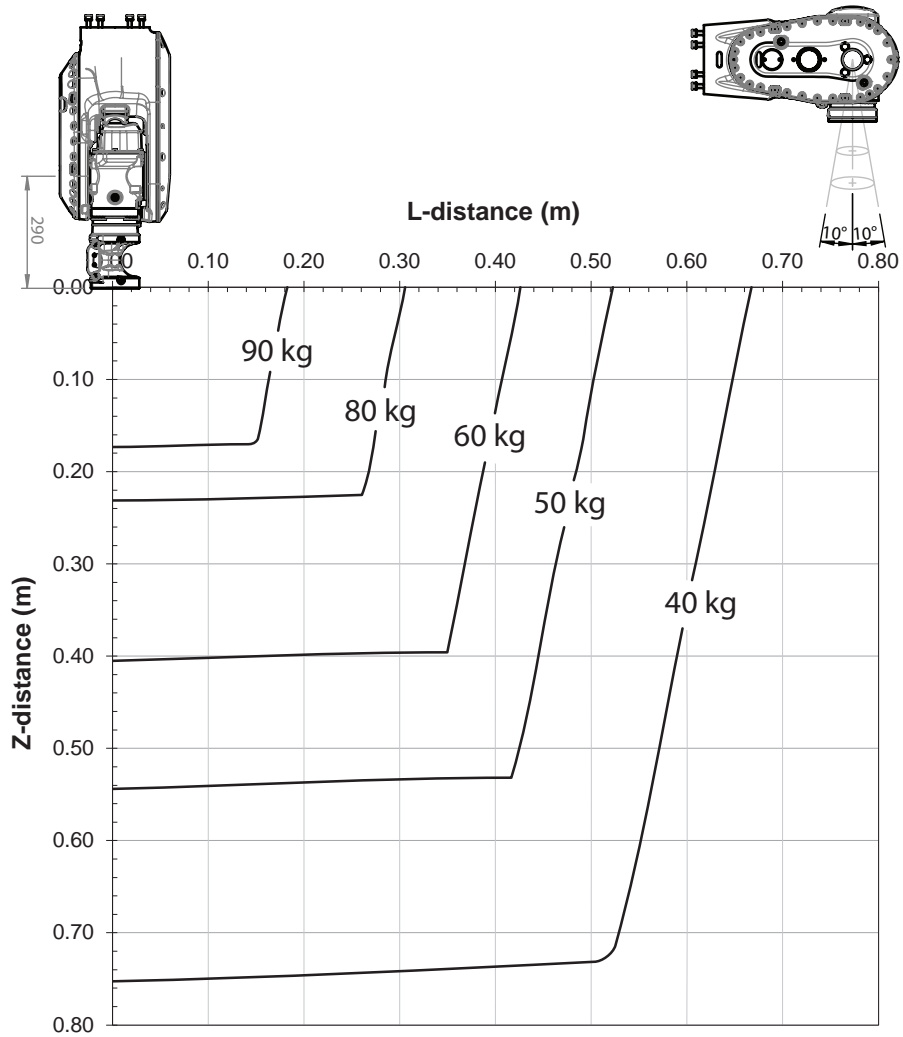

xx2100001503

For wrist down (0° deviation from the vertical line).

	Description
Max load	97 kg
Z _{max}	0.14 m
L _{max}	0.038 m

2.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement

2.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement




Note

Total load given as: mass in kg, center of gravity (Z and L) in meters and moment of inertia (J_{0x} , J_{0y} , J_{0z}) in kgm^2 . $L = \text{sqr}(X^2 + Y^2)$, see the following figure.

Full movement of axis 5 ($\pm 130^\circ$)

5	IRB 5710-110/2.3	$Ja_5 = \text{Load} \times (Z + 0.167)^2 + \max(J_{0x}, J_{0y}) \leq 120 \text{ kgm}^2$
	IRB 5710-90/2.7	$Ja_5 = \text{Load} \times (Z + 0.16)^2 + \max(J_{0x}, J_{0y}) \leq 50 \text{ kgm}^2$
	IRB 5710-90/2.3 LID	$Ja_5 = \text{Load} \times (Z + 0.333)^2 + \max(J_{0x}, J_{0y}) \leq 120 \text{ kgm}^2$
	IRB 5710-70/2.7 LID	$Ja_5 = \text{Load} \times (Z + 0.29)^2 + \max(J_{0x}, J_{0y}) \leq 50 \text{ kgm}^2$
6	IRB 5710-110/2.3	$Ja_6 = \text{Load} \times L^2 + J_{0z} \leq 90 \text{ kgm}^2$
	IRB 5710-90/2.7	$Ja_6 = \text{Load} \times L^2 + J_{0z} \leq 35 \text{ kgm}^2$
	IRB 5710-90/2.3 LID	$Ja_6 = \text{Load} \times L^2 + J_{0z} \leq 90 \text{ kgm}^2$
	IRB 5710-70/2.7 LID	$Ja_6 = \text{Load} \times L^2 + J_{0z} \leq 35 \text{ kgm}^2$



xx1400002028

Pos	Description
A	Center of gravity
Description	
J_{0x} , J_{0y} , J_{0z}	Max. moment of inertia around the X, Y and Z axes at center of gravity.


Continues on next page

2 Technical data for IRB 5710

2.5.3 Maximum load and moment of inertia for full and limited axis 5 (center line down) movement Continued

Limited axis 5, center line down

5	IRB 5710-110/2.3	$Ja_5 = \text{Load} \times (Z + 0.167)^2 + \max(J_{0x}, J_{0y}) \leq 130 \text{ kgm}^2$
	IRB 5710-90/2.7	$Ja_5 = \text{Load} \times (Z + 0.16)^2 + \max(J_{0x}, J_{0y}) \leq 55 \text{ kgm}^2$
	IRB 5710-90/2.3 LID	$Ja_5 = \text{Load} \times (Z + 0.333)^2 + \max(J_{0x}, J_{0y}) \leq 130 \text{ kgm}^2$
	IRB 5710-70/2.7 LID	$Ja_5 = \text{Load} \times (Z + 0.29)^2 + \max(J_{0x}, J_{0y}) \leq 55 \text{ kgm}^2$
6	IRB 5710-110/2.3	$Ja_6 = \text{Load} \times L^2 + J_{0z} \leq 115 \text{ kgm}^2$
	IRB 5710-90/2.7	$Ja_6 = \text{Load} \times L^2 + J_{0z} \leq 45 \text{ kgm}^2$
	IRB 5710-90/2.3 LID	$Ja_6 = \text{Load} \times L^2 + J_{0z} \leq 115 \text{ kgm}^2$
	IRB 5710-70/2.7 LID	$Ja_6 = \text{Load} \times L^2 + J_{0z} \leq 45 \text{ kgm}^2$

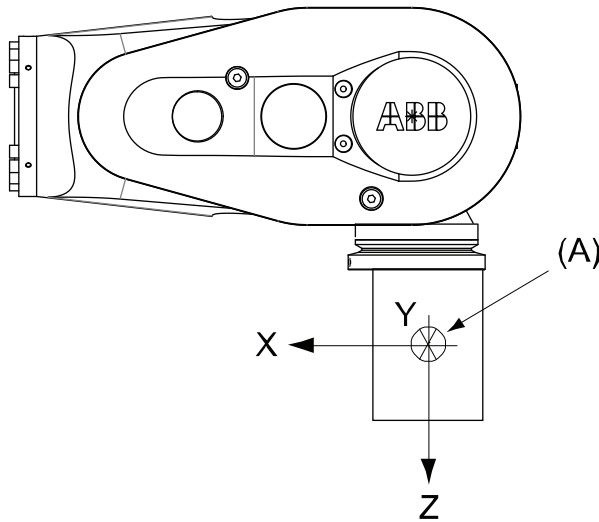

xx1400002029

Pos	Description
A	Center of gravity
Description	
J_{0x}, J_{0y}, J_{0z}	Max. moment of inertia around the X, Y and Z axes at center of gravity.

2.5.4 Wrist torque



Note

The wrist torque values are for reference only, and should not be used for calculating permitted load offset (position of center of gravity) within the load diagram, since those also are limited by main axes torques as well as dynamic loads. Furthermore, arm loads will influence the permitted load diagram. To find the absolute limits of the load diagram, use the RobotStudio add-in RobotLoad.

Torque

The table below shows the maximum permissible torque due to payload.

Robot variant	Max wrist torque axis 4 and 5	Max wrist torque axis 6	Max torque valid at load
IRB 5710-110/2.3	571 Nm	307 Nm	100 kg
IRB 5710-90/2.7	318 Nm	155 Nm	70 kg
IRB 5710-90/2.3 LID	569 Nm	265 Nm	80 kg
IRB 5710-70/2.7 LID	340 Nm	138 Nm	55 kg

2 Technical data for IRB 5710

2.5.5 Maximum TCP acceleration

2.5.5 Maximum TCP acceleration

General

Higher values can be reached with lower loads than the nominal because of our dynamical motion control QuickMove2. For specific values in the unique customer cycle, or for robots not listed in the table below, we recommend to use RobotStudio.

Maximum Cartesian design acceleration for nominal loads

Robot variant	E-stop Max acceleration at nominal load COG [m/s ²]	Controlled Motion Max acceleration at nominal load COG [m/s ²]
IRB 5710-110/2.3	53	36
IRB 5710-90/2.7	60	38
IRB 5710-90/2.3 LID	65	37
IRB 5710-70/2.7 LID	65	38



Note


Acceleration levels for emergency stop and controlled motion includes acceleration due to gravitational forces. Nominal load is defined with nominal mass and cog with max offset in Z and L (see the load diagram).

2.6 Performance according to ISO 9283

General

At rated maximum load, maximum offset and 1.6 m/s velocity on the inclined ISO test plane, with all six axes in motion. Values in the table below are the average result of measurements on a small number of robots. The result may differ depending on where in the working range the robot is positioning, velocity, arm configuration, from which direction the position is approached, the load direction of the arm system. Backlashes in gearboxes also affect the result.

The figures for AP, RP, AT and RT are measured according to figure below.

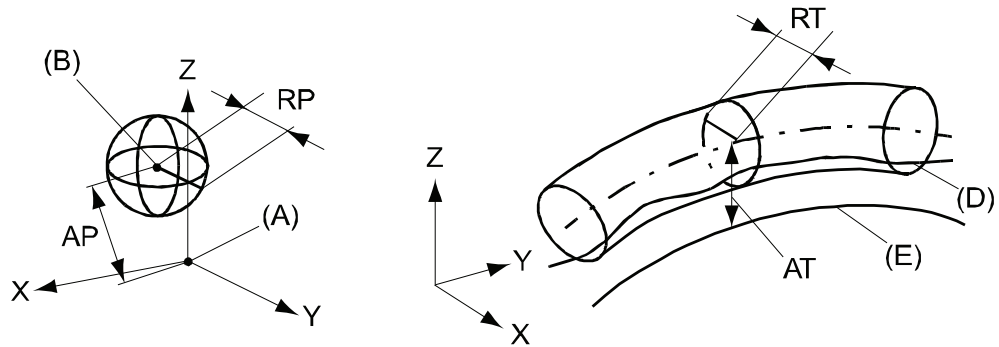

xx080000424

Pos	Description	Pos	Description
A	Programmed position	E	Programmed path
B	Mean position at program execution	D	Actual path at program execution
AP	Mean distance from programmed position	AT	Max deviation from E to average path
RP	Tolerance of position B at repeated positioning	RT	Tolerance of the path at repeated program execution

IRB 5710	IRB 5710-110/2.3	IRB 5710-90/2.7
Pose accuracy, AP ⁱ (mm)	0.04	0.04
Pose repeatability, RP (mm)	0.04	0.05
Pose stabilization time, PSt (s) within 0.2 mm of the position	0.4	0.3
Path accuracy, AT (mm)	1.2	1.0
Path repeatability, RT (mm)	0.12	0.16

ⁱ AP according to the ISO test above, is the difference between the taught position (position manually modified in the cell) and the average position obtained during program execution.

2 Technical data for IRB 5710

2.7 Velocity

2.7 Velocity

Maximum axis speed

Robot variant	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6
IRB 5710-110/2.3	140 °/s	125 °/s	140 °/s	250 °/s	200 °/s	250 °/s
IRB 5710-90/2.7	140 °/s	125 °/s	140 °/s	300 °/s	250 °/s	360 °/s
IRB 5710-90/2.3 LID	140 °/s	125 °/s	140 °/s	250 °/s	200 °/s	250 °/s
IRB 5710-70/2.7 LID	140 °/s	125 °/s	140 °/s	300 °/s	250 °/s	360 °/s

There is a supervision function to prevent overheating in applications with intensive and frequent movements (high duty cycle).

2.8 Robot stopping distances and times

2.8.1 Robot stopping distances according to ISO 10218-1

About the data for robot stopping distances and times

All measurements and calculations of stopping distances and times are done according to ISO 10218-1, with single axis motion on axes 1, 2, and 3. If more than one axis is used for the movement, then the stopping distance and time can be longer. Normal delays of the hardware and software are taken into account. See more about the delays and their impact on the results, [Reading the data on page 85](#).

The stopping distances and times are presented using the tool data and extension zones presented for the respected robot variant. These variables are 100%, 66%, and 33% of the maximum values for the robot.

The stop categories 0 and 1 are according to IEC 60204-1.



Note

The category 0 stop is not necessarily the worst case (depending on load, speed, application, wear, etc.).



Note

The stop category 1 is a controlled stop and will therefore have less deviation from the programmed path compared with a stop category 0.

Loads

The tool data that is used is presented for the respective robot variant.

The used loads represent the rated load. No arm load is used. See the [Load diagrams on page 68](#).

Continues on next page

2 Technical data for IRB 5710



2.8.1 Robot stopping distances according to ISO 10218-1

Continued


Extension zones

The extension zone for the stop category 1 is based on the tool mounting interface (tool flange) with the axis angles according to the following illustrations. The zone data is presented for the respective robot variant.

The extension zone outer limits are defined by the TCP0 position for the stated angles.

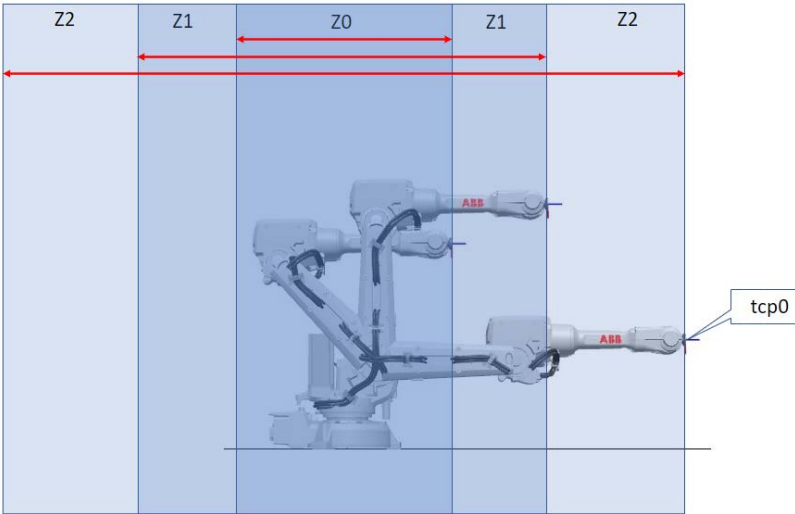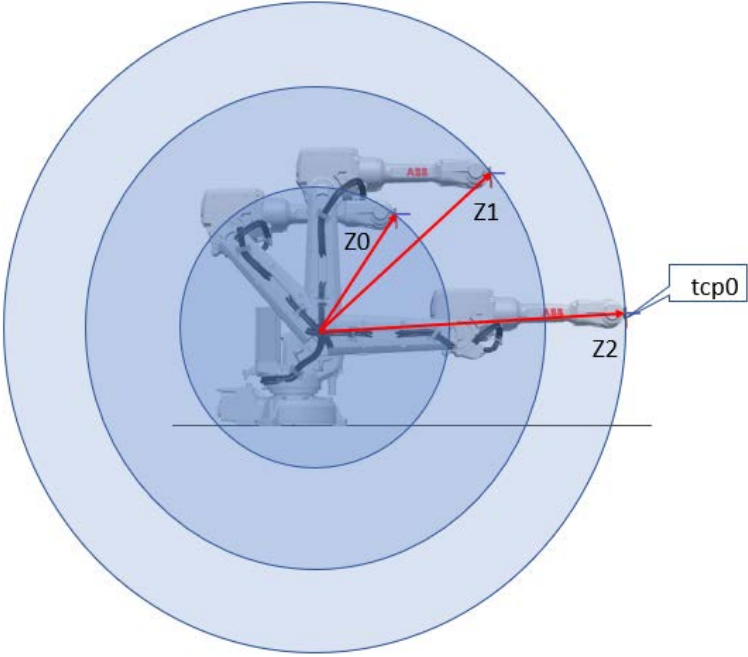	Illustration
Axis 1	 <p>xx2300000860</p>
Axis 2	 <p>xx2300000861</p>

Continues on next page

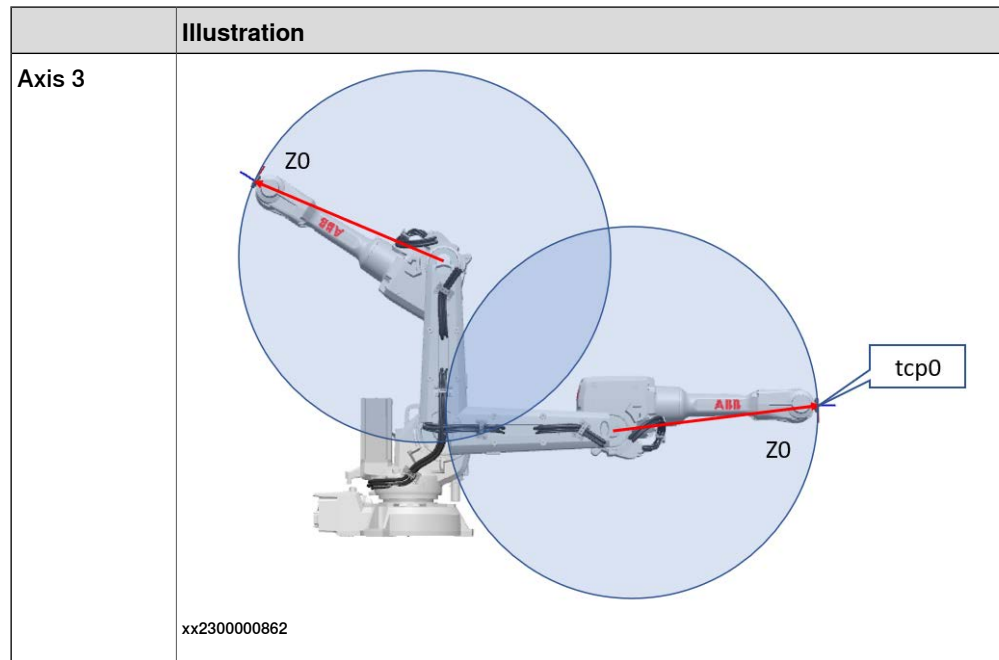

Speed

The speed in the simulations is based on TCP0.

The TCP0 speed is measured in meters per second when the stop is triggered.

Stopping distances

The stopping distance is measured in degrees.

Stopping times

The stopping time is measured in seconds.

Limitations

The stopping distance can vary depending on additional loads on the robot.

The stopping distance for category 0 stops can vary depending on the individual brakes and the joint friction.

Reading the data

The data for stop category 0 is presented in tables, with distance and time for each axis.

The data for stop category 1 is presented as graphs with curves representing the different loads.

There is a short delay in the stop, which means that if the axis is accelerating when the stop is initiated (C), it will continue to accelerate during this delay time. This


Continues on next page

2 Technical data for IRB 5710

2.8.1 Robot stopping distances according to ISO 10218-1

Continued

can result in graphs where a higher load (A) gives shorter stopping distance than a smaller load (B).

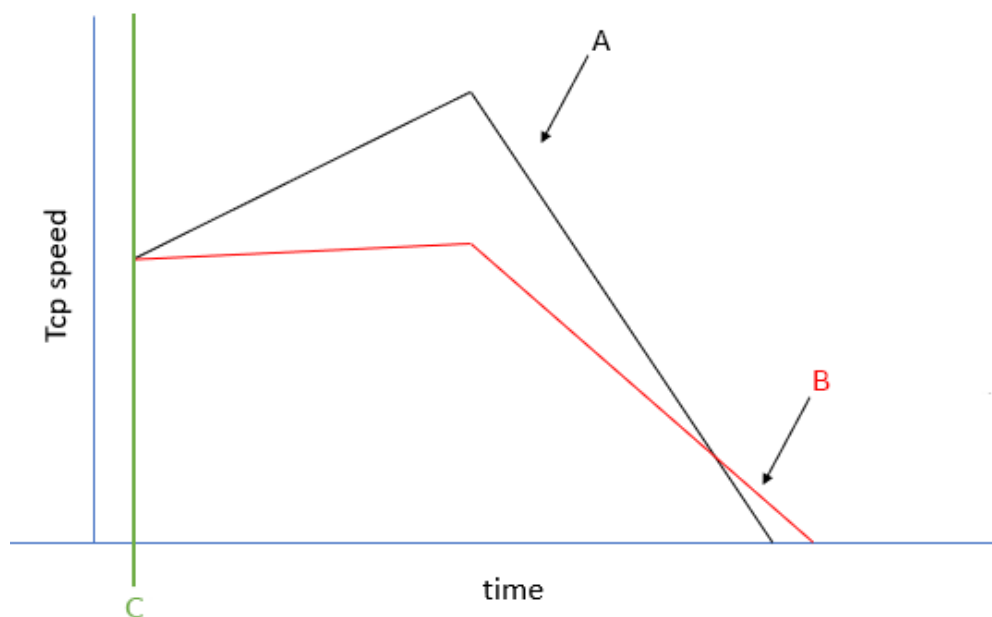

xx2300001041

The tcp speed is the actual speed when the stop is initiated, which is not necessarily the programmed speed.

2.8.2 Measuring stopping distance and time

Preparations before measuring

For measurement and calculation of overall system stopping performance, see ISO 13855:2010.

The measurement shall be done for the selected stop category. The emergency stop button on the robot controller is configured for stop category 0 on delivery. A risk assessment can conclude the need for another stop category. The stop category can be changed through the system parameter *Function* (topic *Controller*, type *Safety Run Chain*). In case of deviations of the default configuration of stop category 0, then this is detailed in the product specification for the respective manipulator.



CAUTION

The measurement and calculation of overall stopping performance for a robot must be tested with its correct load, speed, and tools, in its actual environment, before the robot is taken into production.

All load and tool data must be correctly defined (weight, CoG, moment of inertia). The load identification service routine can be used to identify the data.



CAUTION

Follow the safety instructions in the respective product manual for the robot.

Measuring with TuneMaster

The software TuneMaster can be used to measure stopping distances and times for ABB robots. The TuneMaster software contains documentation on how to use it.

- 1 Download TuneMaster from www.abb.com/robotics, section **RobotStudio - Downloads - RobotWare Tools and Utilities**.
- 2 Install TuneMaster on a computer. Start the TuneMaster app and select **Log Signals**.
- 3 Connect to the robot controller.
- 4 Define the I/O stop signal to use for measurement, for example, ES1 for emergency stop.
- 5 Define the signal number to use for measurement, 1298 for axis position. The value is given in radians.
- 6 Start the logging in TuneMaster.
- 7 Start the test program on the controller.



Tip

Use the tool and zone definitions for the respective variant in this document to get results that are comparable with this document.

Continues on next page

2.8.3 IRB 5710-110/2.3

Used tooldata

```
PERS tooldata P100:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [110, [0,
0, 300], [1, 0, 0, 0], 1.7, 1.7, 1.7]];
PERS tooldata P66:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [73, [0, 0,
200], [1, 0, 0, 0], 0.73, 0.73, 0.73]];
PERS tooldata P33:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [37, [0, 0,
100], [1, 0, 0, 0], 0.18, 0.18, 0.18]];

```

Category 0

The following table describes the stopping distance and time for category 0 stop.

Axis	Distance	Stop time
1	46.7°	0.54 s
2	27.9°	0.35 s
3	28.4°	0.3 s

Category 1, extension zones

For definitions of the zones, see [Extension zones on page 84](#).

The zone border is the mounting interface location for axis 2 and axis 3.

Axis 1

Zone border	Axis 2	Axis 3
z0-z1	-42°	42°
z1-z2	6°	-6°

Axis 2

Zone border	Axis 2	Axis 3
z0-z1	48°	30°
z1-z2	90°	-30°

Axis 3

Only one zone exists.



Continues on next page

2 Technical data for IRB 5710

2.8.3 IRB 5710-110/2.3



Continued

Category 1, Axis 1, Extension zone 0, stopping distance and stopping time

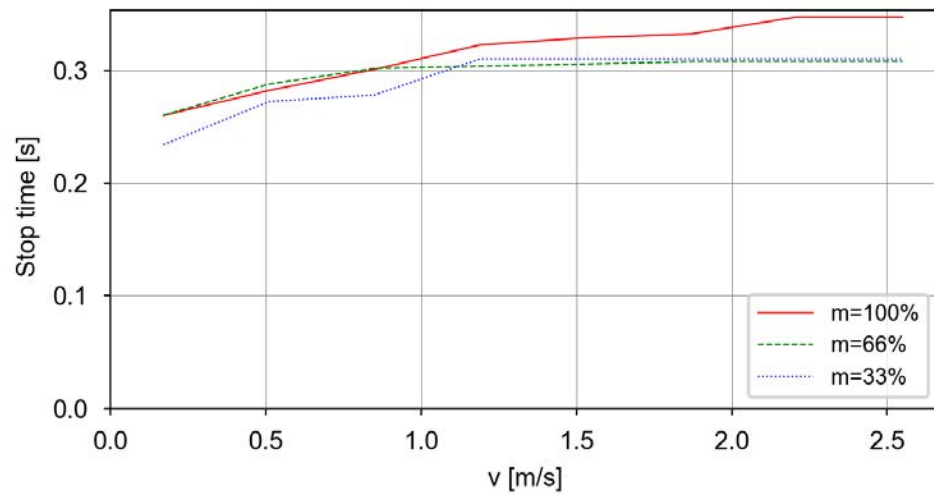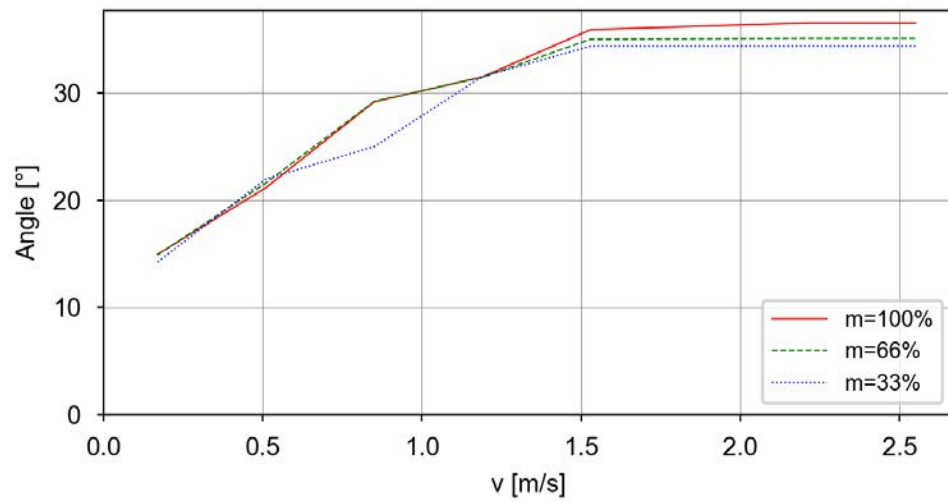

Continues on next page

Category 1, Axis 1, Extension zone 1, stopping distance and stopping time

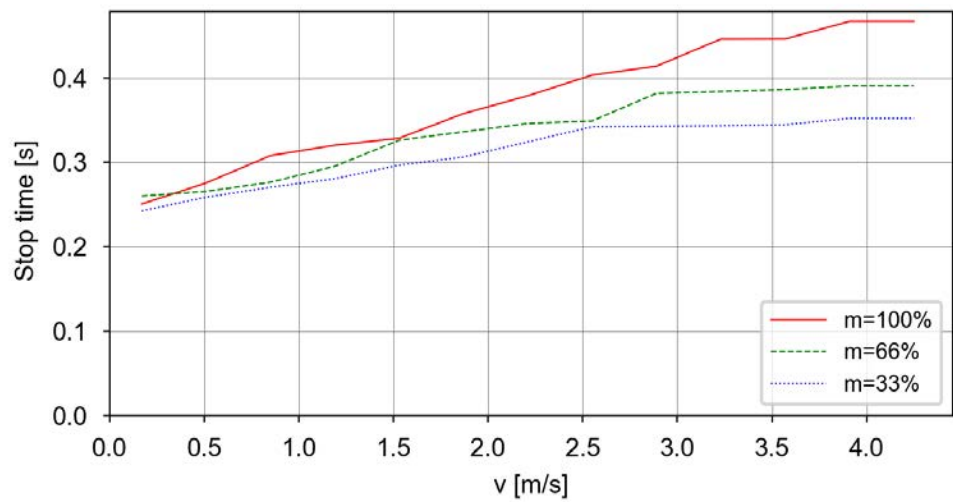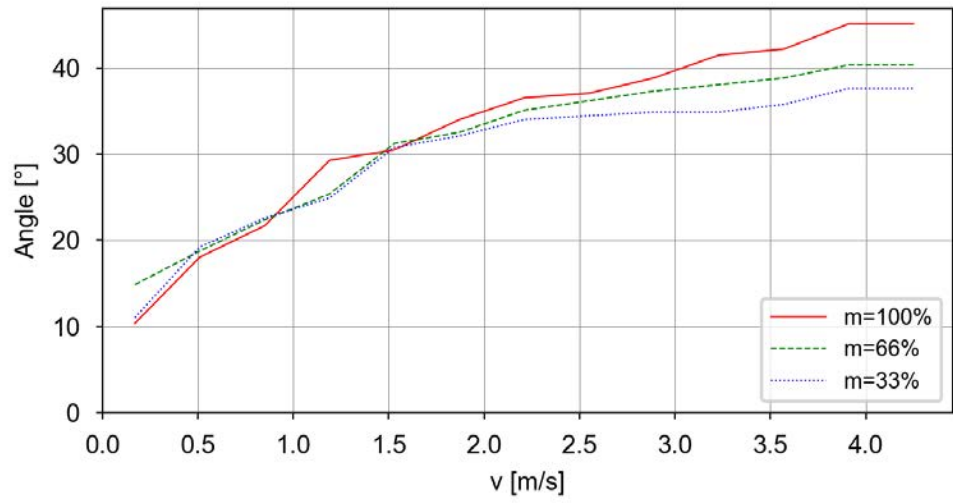



Continues on next page

2 Technical data for IRB 5710

2.8.3 IRB 5710-110/2.3



Continued

Category 1, Axis 1, Extension zone 2, stopping distance and stopping time

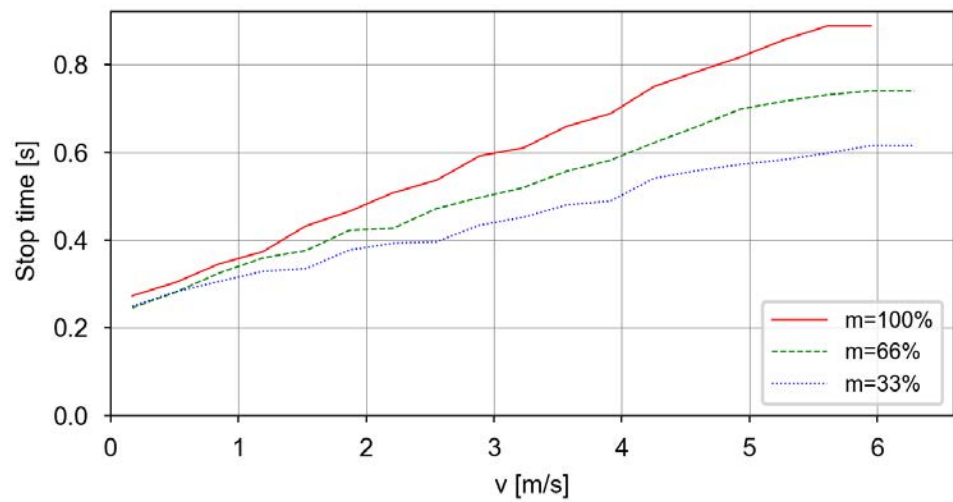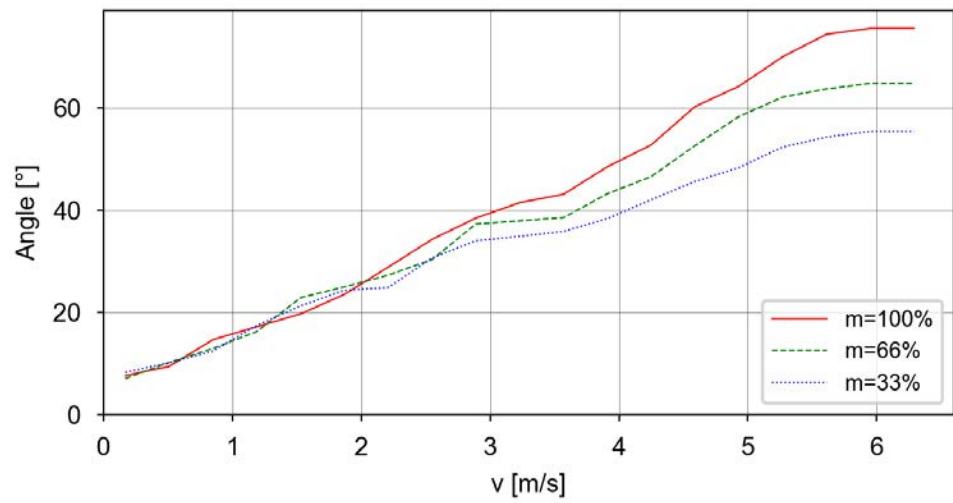

Continues on next page

Category 1, Axis 2, Extension zone 0, stopping distance and stopping time

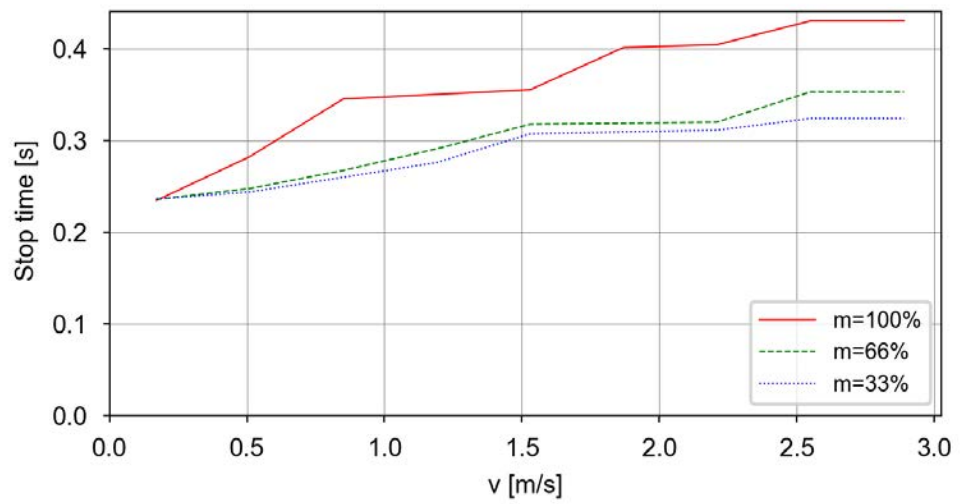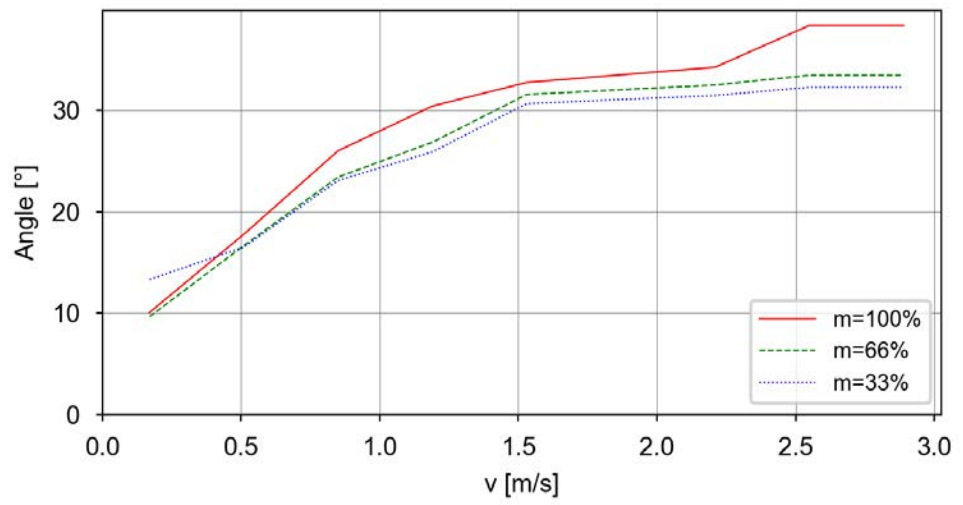



Continues on next page

2 Technical data for IRB 5710

2.8.3 IRB 5710-110/2.3



Continued

Category 1, Axis 2, Extension zone 1, stopping distance and stopping time

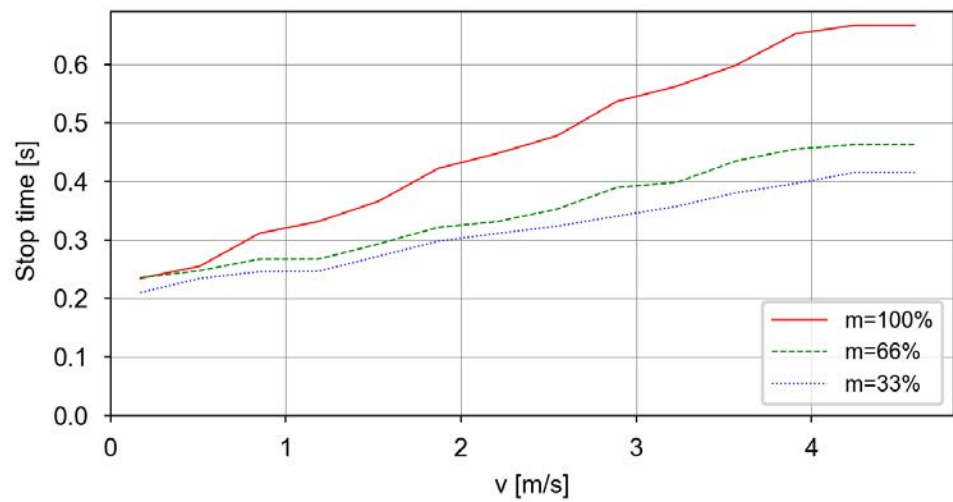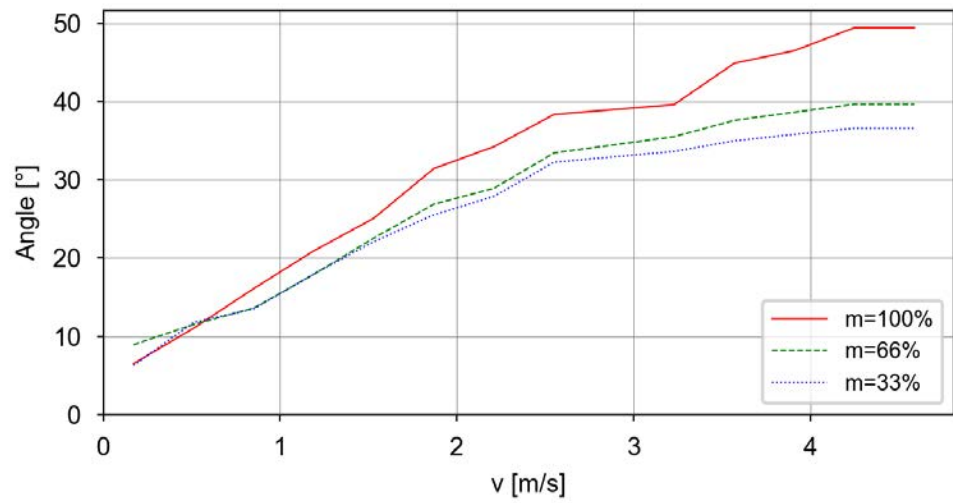

Continues on next page

Category 1, Axis 2, Extension zone 2, stopping distance and stopping time

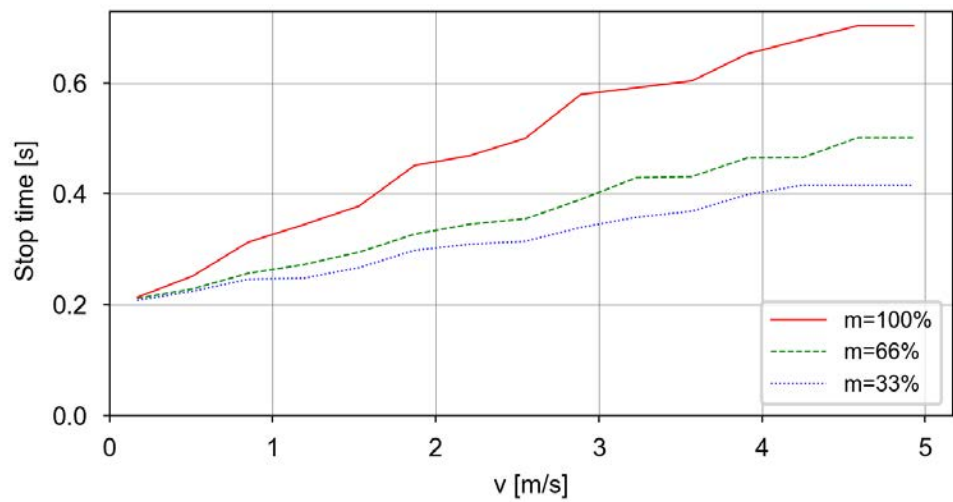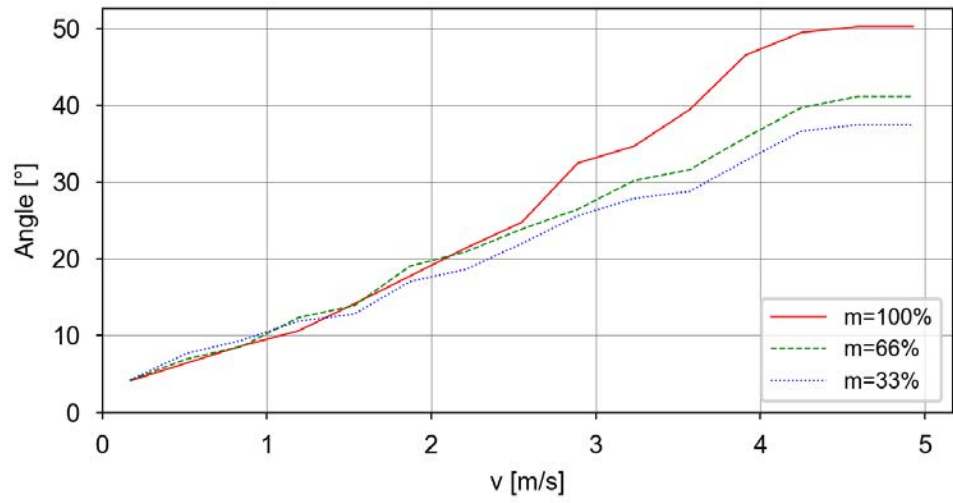



Continues on next page

2 Technical data for IRB 5710

2.8.3 IRB 5710-110/2.3

Continued

Category 1, Axis 3, Extension zone 0, stopping distance and stopping time

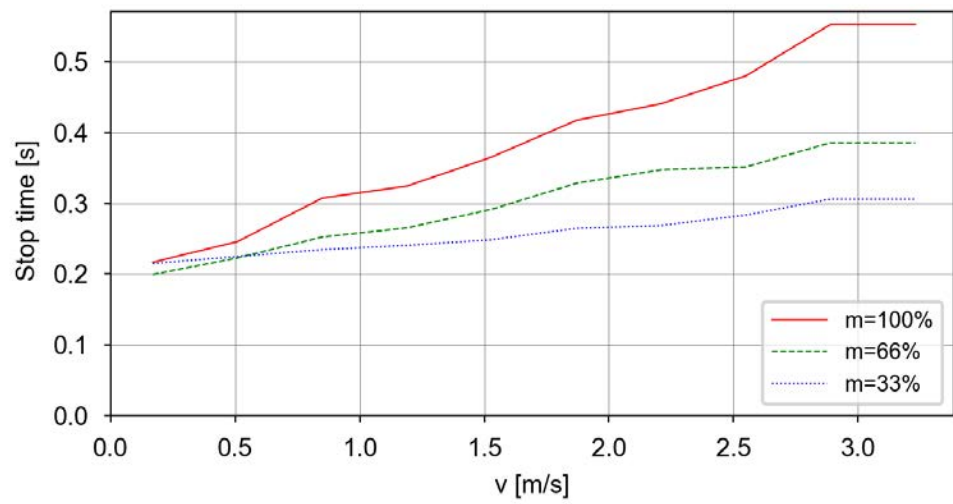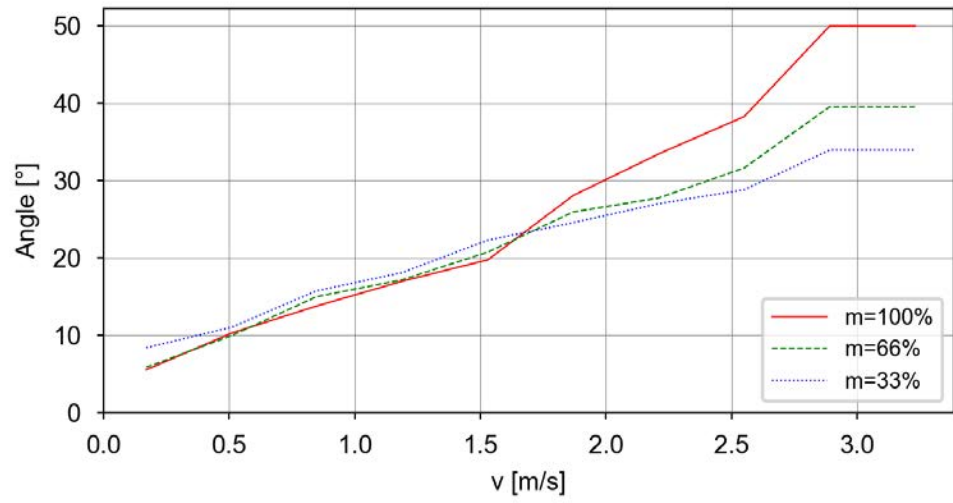

2.8.4 IRB 5710-110/2.3 Inv

Used tooldata

```
PERS tooldata P100:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [110, [0,
0, 300], [1, 0, 0, 0], 1.7, 1.7, 1.7]];
PERS tooldata P66:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [73, [0, 0,
200], [1, 0, 0, 0], 0.73, 0.73, 0.73]];
PERS tooldata P33:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [37, [0, 0,
100], [1, 0, 0, 0], 0.18, 0.18, 0.18]];

```

Category 0

The following table describes the stopping distance and time for category 0 stop.

Axis	Distance	Stop time
1	46.7°	0.54 s
2	29.2°	0.36 s
3	28.6°	0.31 s

Category 1, extension zones

For definitions of the zones, see [Extension zones on page 84](#).

The zone border is the mounting interface location for axis 2 and axis 3.

Axis 1

Zone border	Axis 2	Axis 3
z0-z1	-42°	42°
z1-z2	6°	-6°

Axis 2

Zone border	Axis 2	Axis 3
z0-z1	48°	30°
z1-z2	90°	-30°

Axis 3

Only one zone exists.



Continues on next page

2 Technical data for IRB 5710

2.8.4 IRB 5710-110/2.3 Inv



Continued

Category 1, Axis 1, Extension zone 0, stopping distance and stopping time

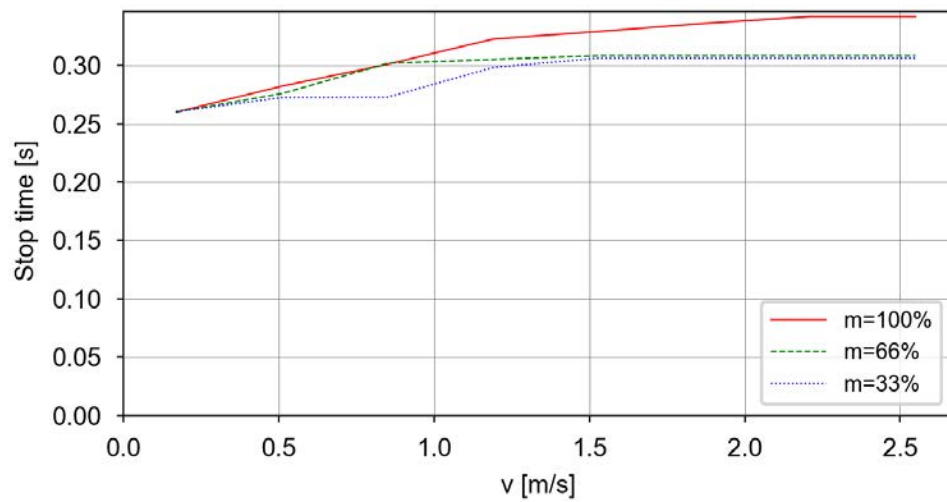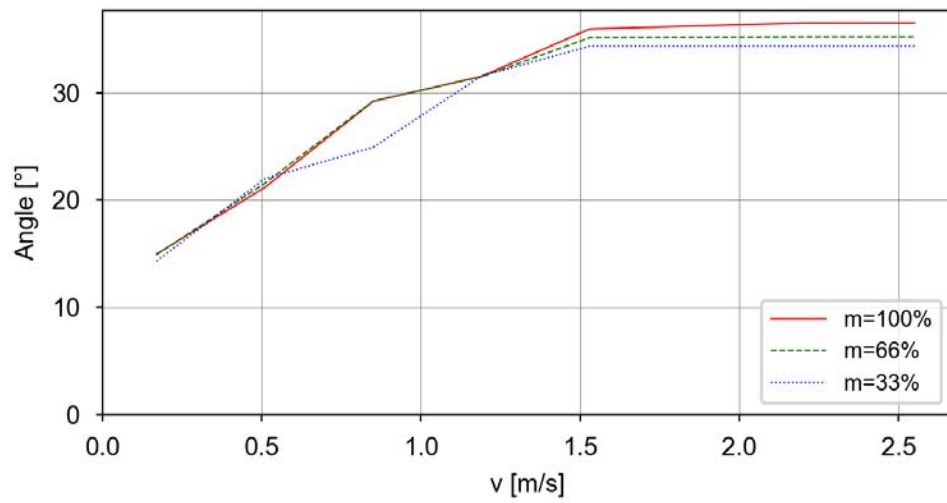

Continues on next page

Category 1, Axis 1, Extension zone 1, stopping distance and stopping time

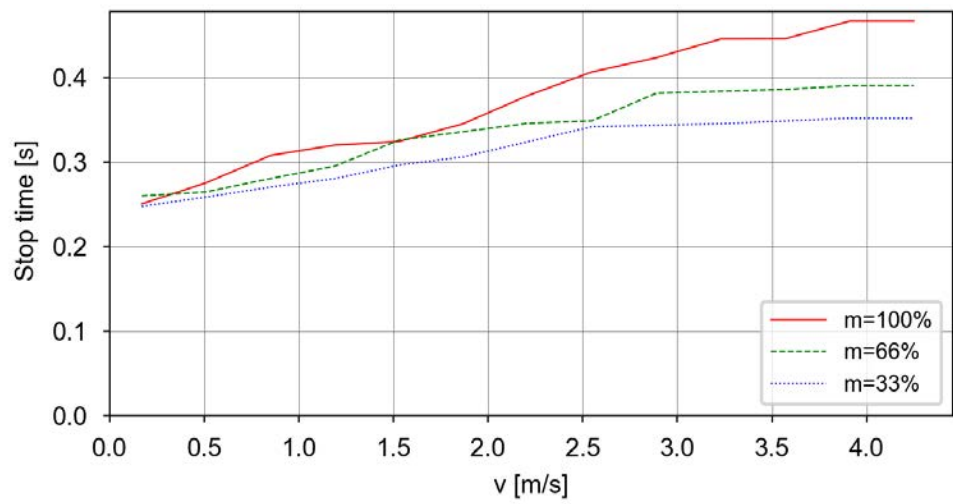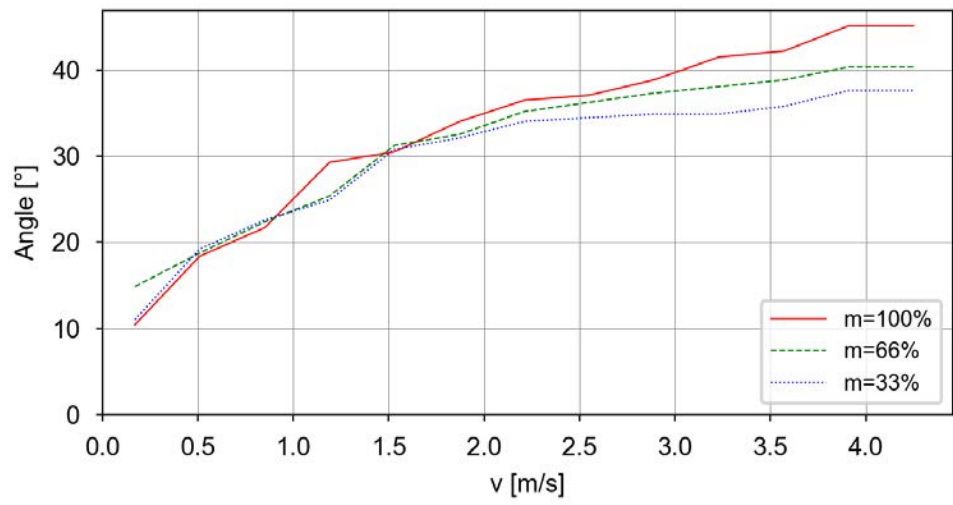



Continues on next page

2 Technical data for IRB 5710

2.8.4 IRB 5710-110/2.3 Inv



Continued

Category 1, Axis 1, Extension zone 2, stopping distance and stopping time

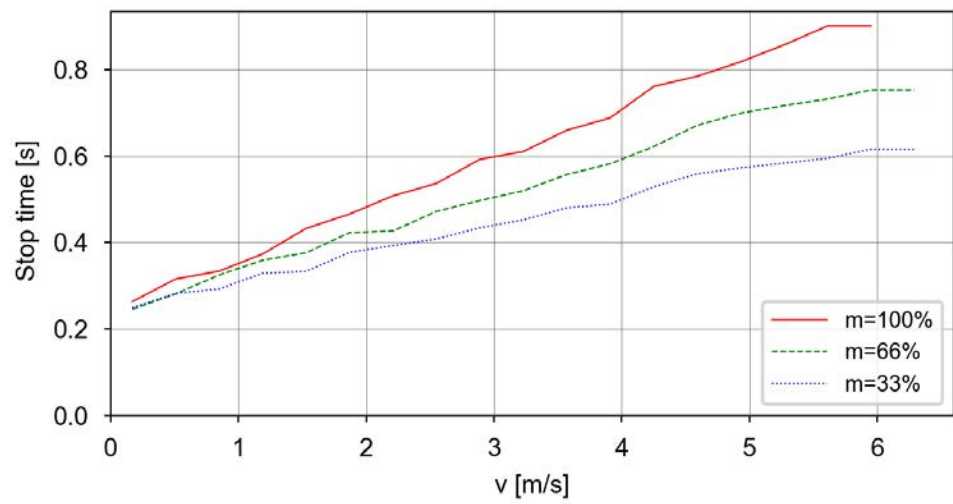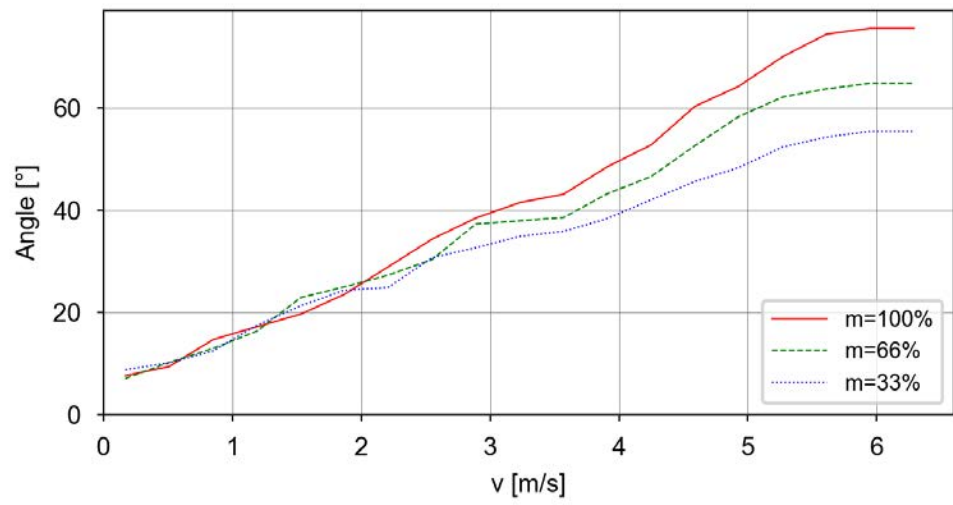

Continues on next page

Category 1, Axis 2, Extension zone 0, stopping distance and stopping time

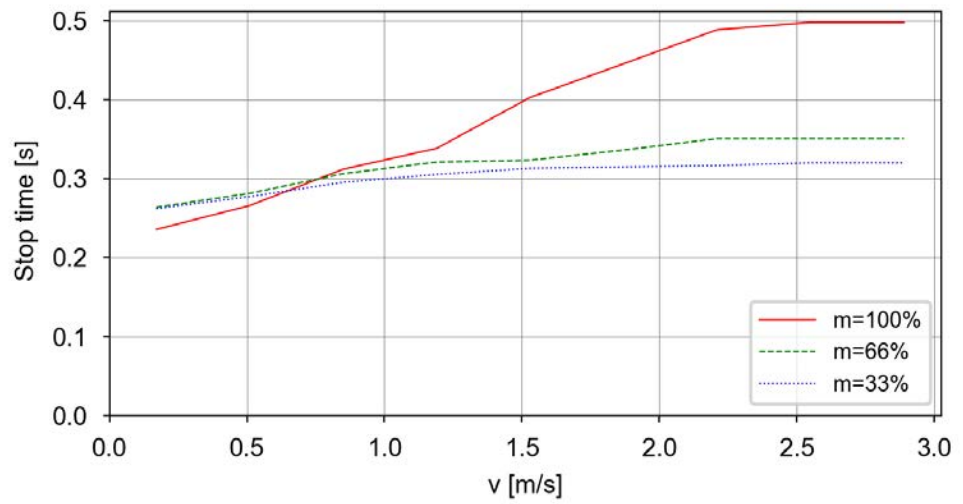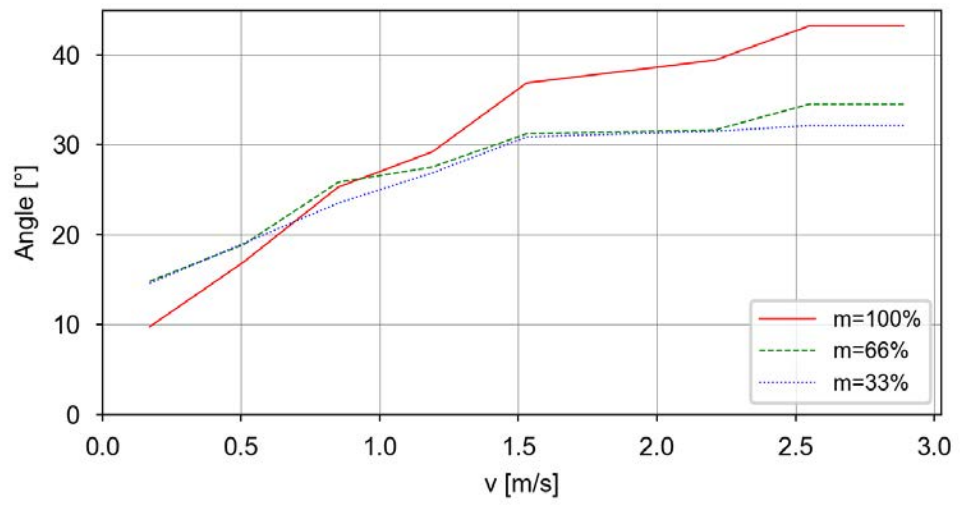



Continues on next page

2 Technical data for IRB 5710

2.8.4 IRB 5710-110/2.3 Inv



Continued

Category 1, Axis 2, Extension zone 1, stopping distance and stopping time

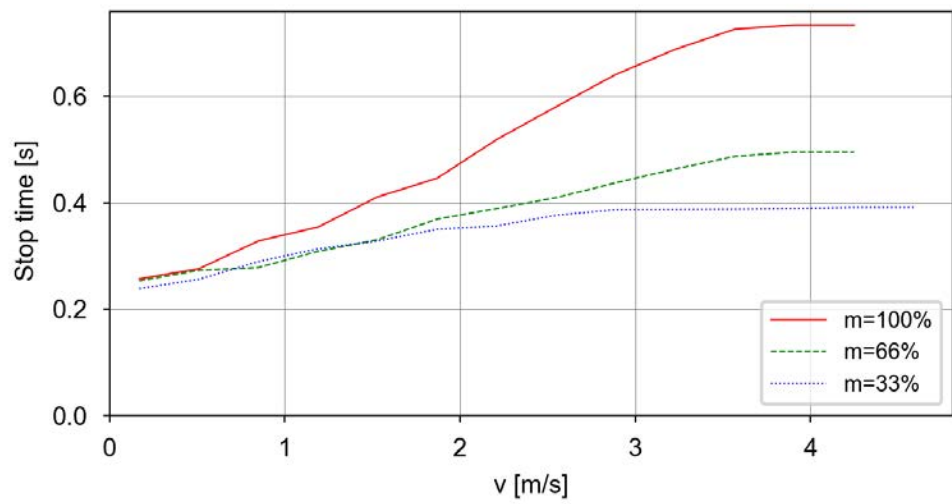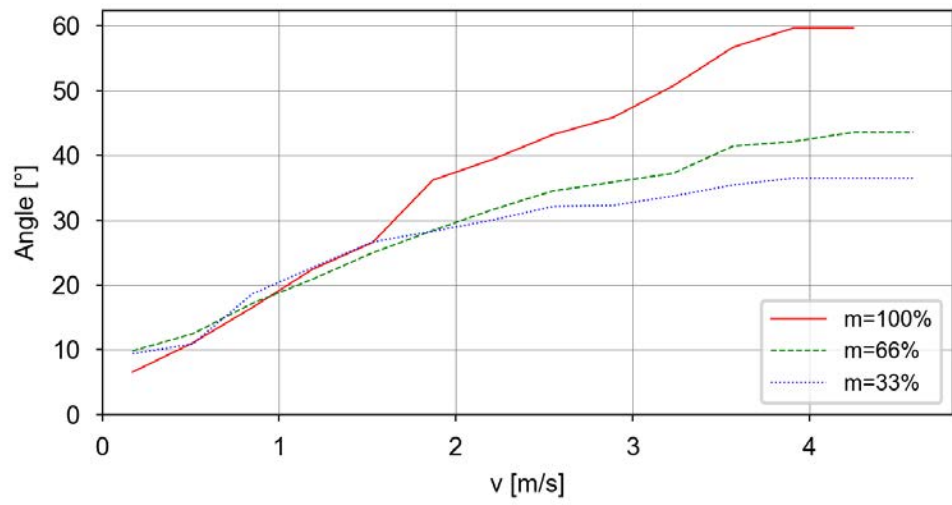

Continues on next page

Category 1, Axis 2, Extension zone 2, stopping distance and stopping time

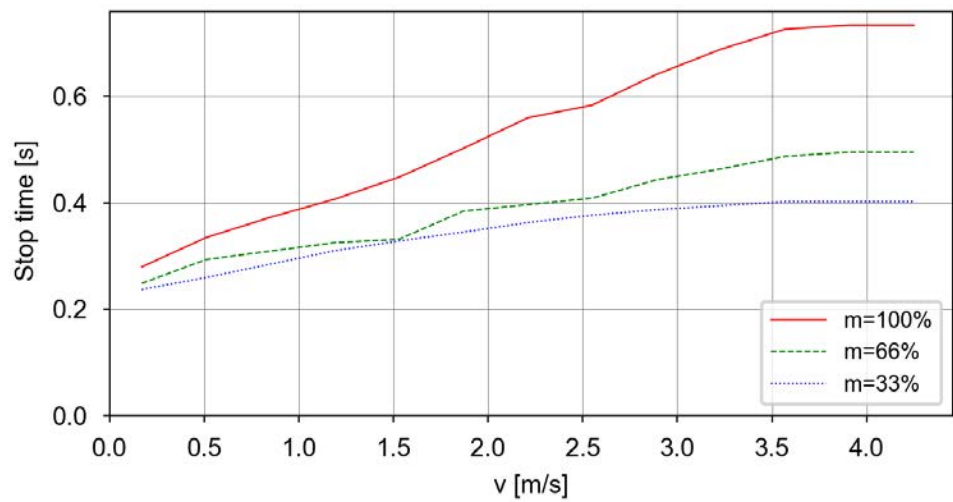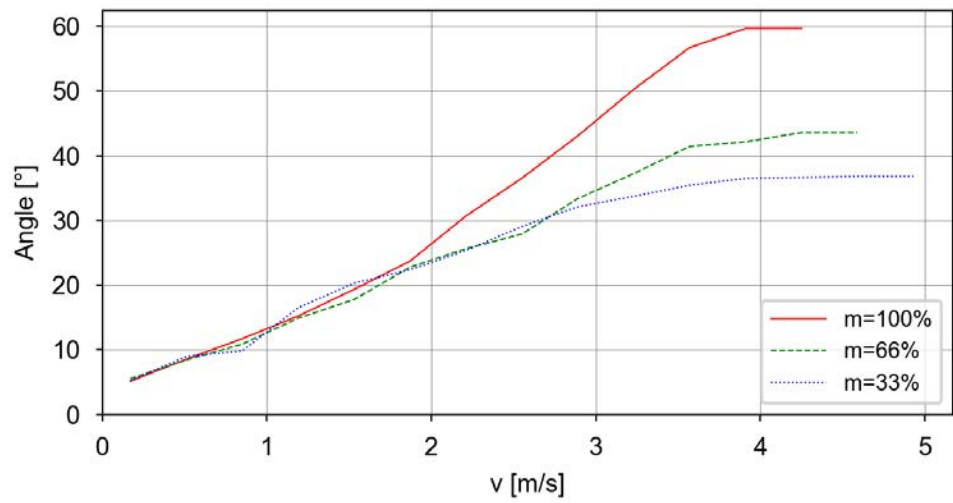



Continues on next page

2 Technical data for IRB 5710

2.8.4 IRB 5710-110/2.3 Inv

Continued

Category 1, Axis 3, Extension zone 0, stopping distance and stopping time

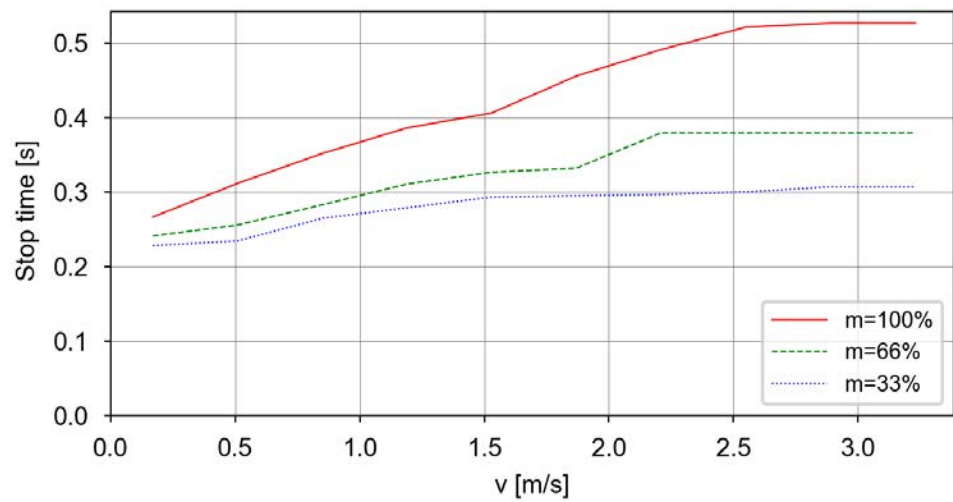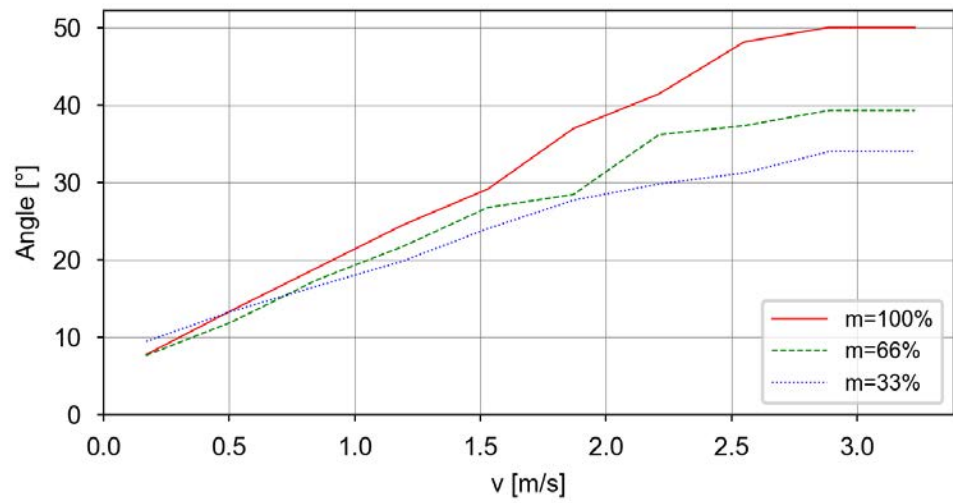

2.8.5 IRB 5710-90/2.7

Used tooldata

```

PERS tooldata P100:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [90, [0,
0, 200], [1, 0, 0, 0], 0.6, 0.6, 0.6]];
PERS tooldata P66:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [60, [0, 0,
133], [1, 0, 0, 0], 0.27, 0.27, 0.27]];
PERS tooldata P33:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [30, [0, 0,
67], [1, 0, 0, 0], 0.067, 0.067, 0.067]];

```

Category 0

The following table describes the stopping distance and time for category 0 stop.

Axis	Distance	Stop time
1	46.9°	0.55 s
2	28.9°	0.37 s
3	30.5°	0.35 s

Category 1, extension zones

For definitions of the zones, see [Extension zones on page 84](#).

The zone border is the mounting interface location for axis 2 and axis 3.

Axis 1

Zone border	Axis 2	Axis 3
z0-z1	-42°	42°
z1-z2	6°	-6°

Axis 2

Zone border	Axis 2	Axis 3
z0-z1	48°	30°
z1-z2	90°	-30°

Axis 3

Only one zone exists.



Continues on next page

2 Technical data for IRB 5710

2.8.5 IRB 5710-90/2.7



Continued

Category 1, Axis 1, Extension zone 0, stopping distance and stopping time

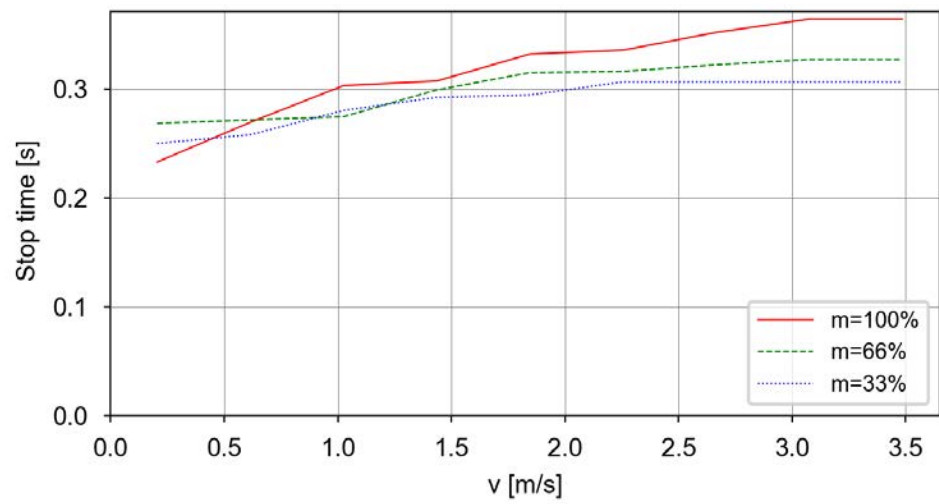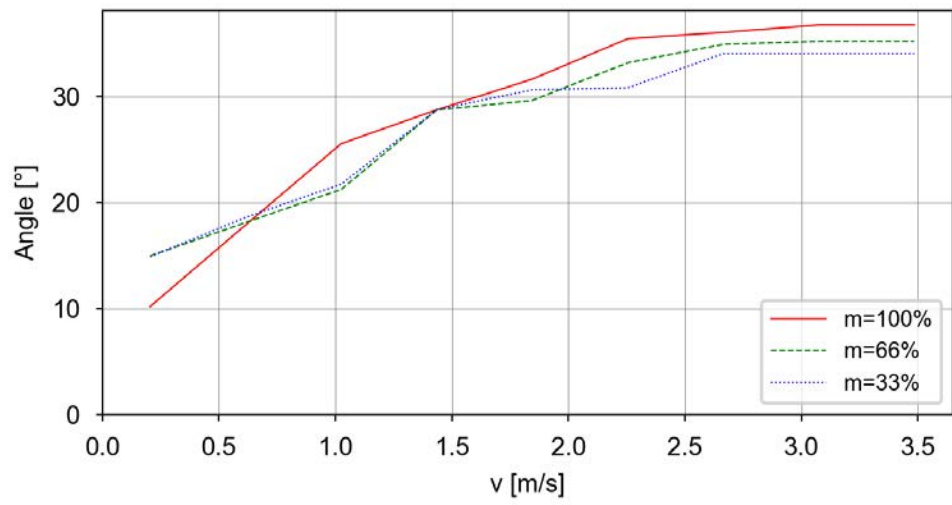

Continues on next page

Category 1, Axis 1, Extension zone 1, stopping distance and stopping time

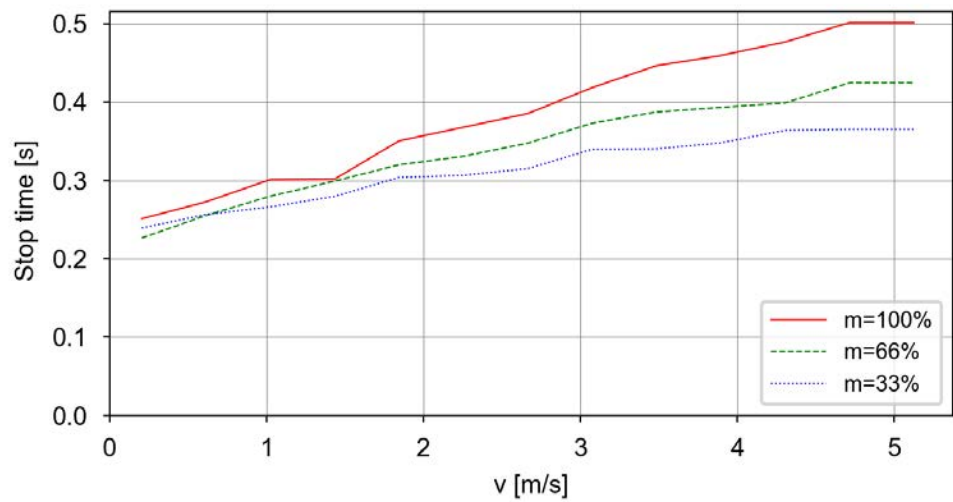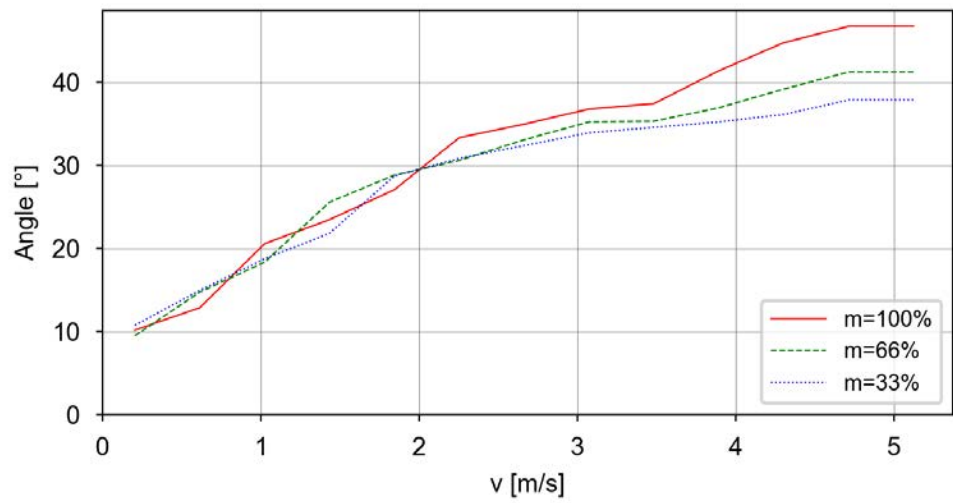



Continues on next page

2 Technical data for IRB 5710

2.8.5 IRB 5710-90/2.7



Continued

Category 1, Axis 1, Extension zone 2, stopping distance and stopping time

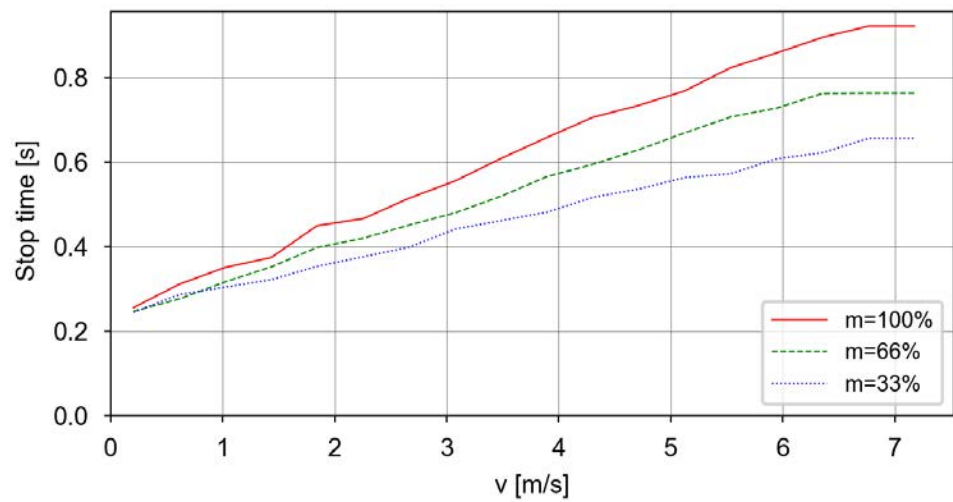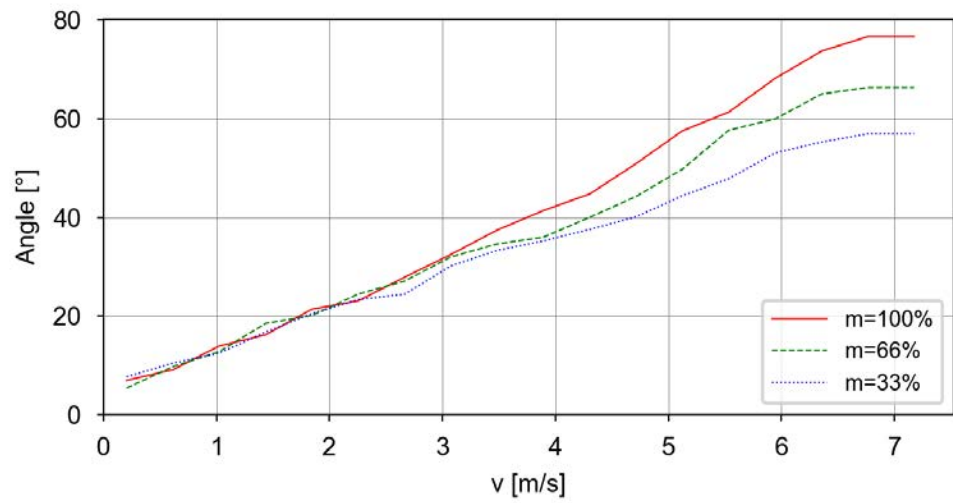

Continues on next page

Category 1, Axis 2, Extension zone 0, stopping distance and stopping time

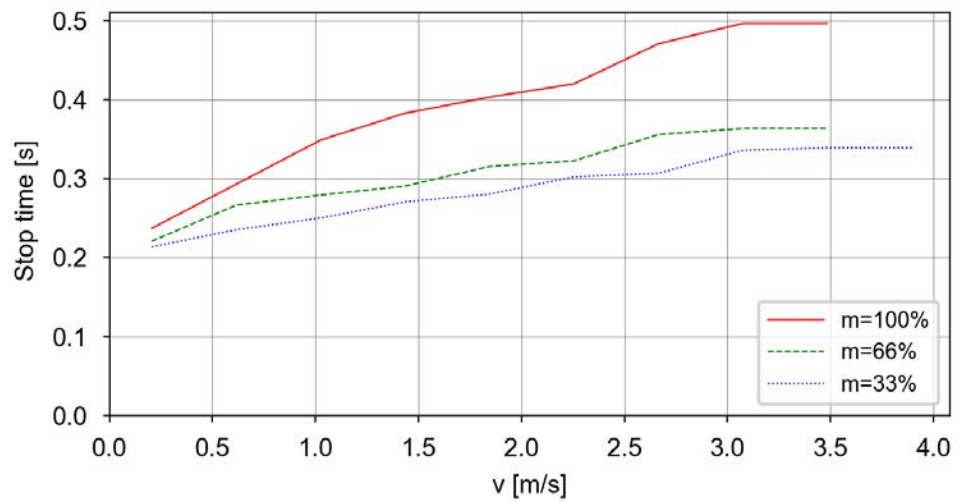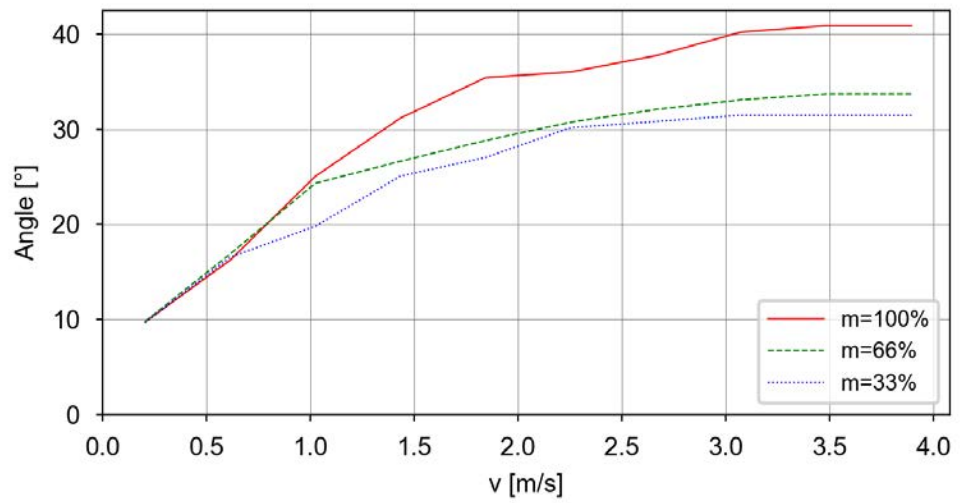



Continues on next page

2 Technical data for IRB 5710

2.8.5 IRB 5710-90/2.7



Continued

Category 1, Axis 2, Extension zone 1, stopping distance and stopping time

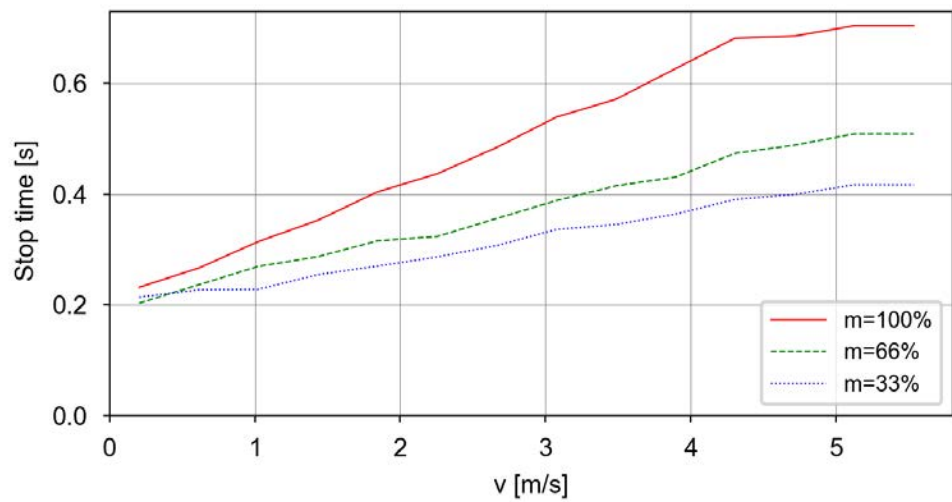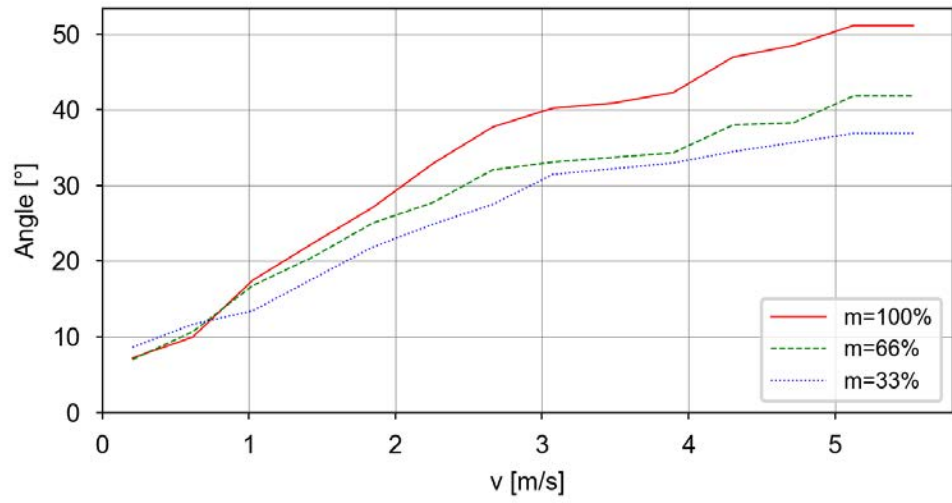

Continues on next page

Category 1, Axis 2, Extension zone 2, stopping distance and stopping time

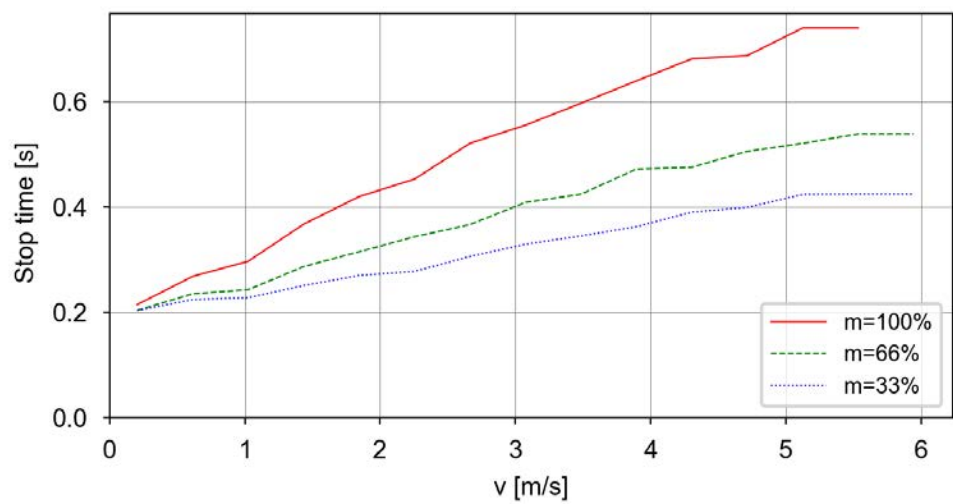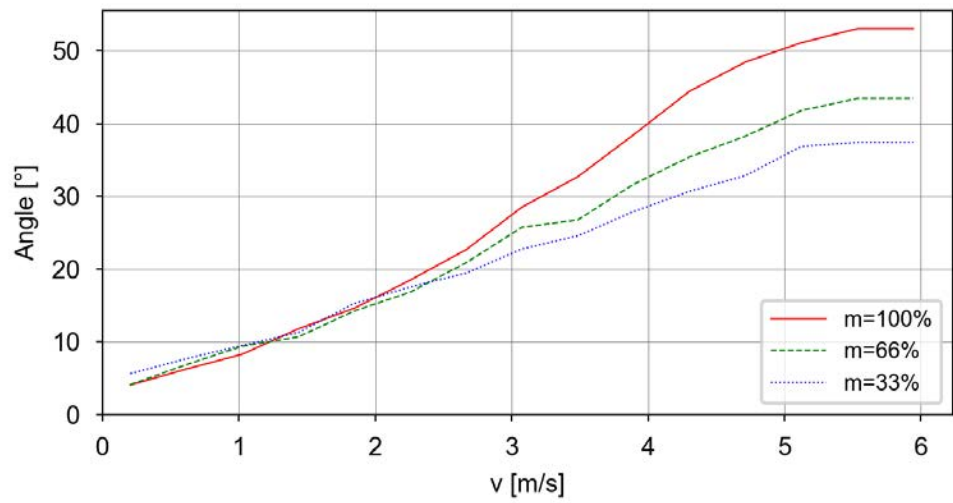



Continues on next page

2 Technical data for IRB 5710

2.8.5 IRB 5710-90/2.7

Continued

Category 1, Axis 3, Extension zone 0, stopping distance and stopping time

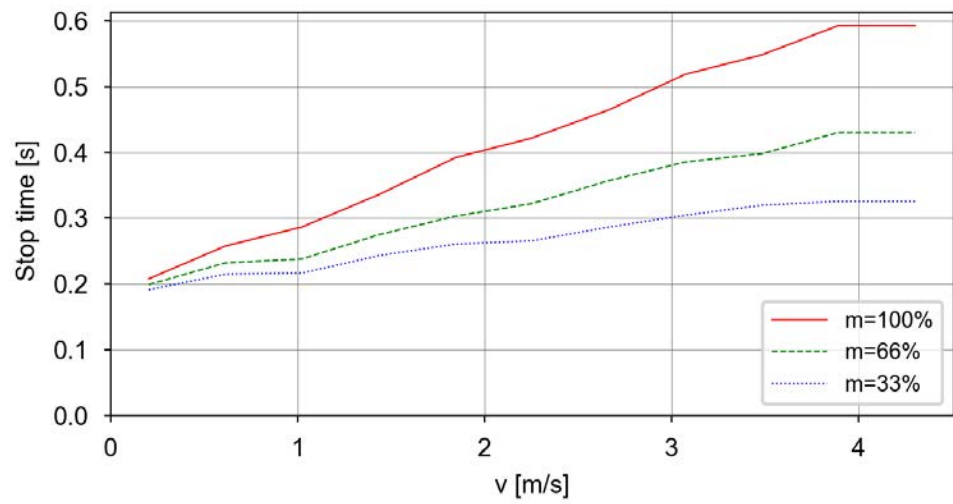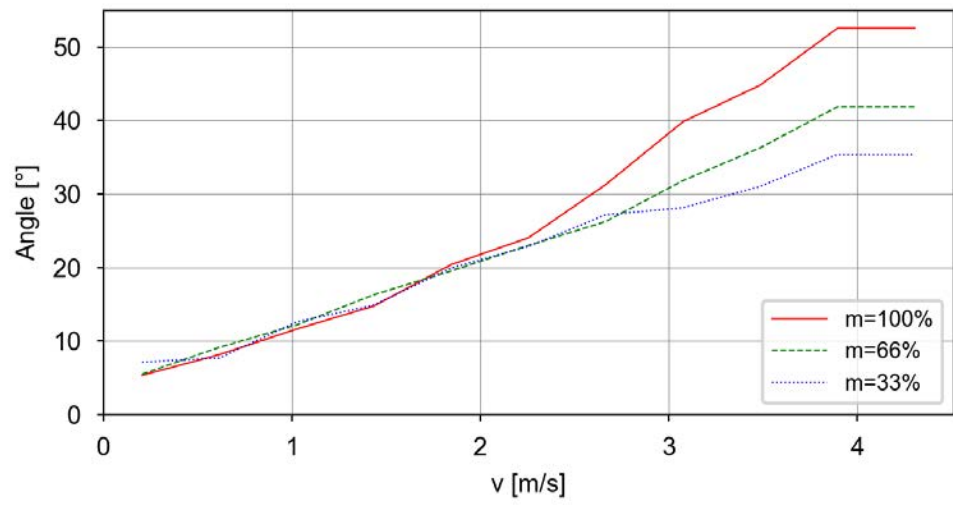

2.8.6 IRB 5710-90/2.7 Inv

Used tooldata

```
PERS tooldata P100:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [90, [0,
0, 200], [1, 0, 0, 0], 0.6, 0.6, 0.6]];
PERS tooldata P66:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [60, [0, 0,
133], [1, 0, 0, 0], 0.27, 0.27, 0.27]];
PERS tooldata P33:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [30, [0, 0,
67], [1, 0, 0, 0], 0.067, 0.067, 0.067]];

```

Category 0

The following table describes the stopping distance and time for category 0 stop.

Axis	Distance	Stop time
1	46.9°	0.55 s
2	28.5°	0.38 s
3	31.6°	0.35 s

Category 1, extension zones

For definitions of the zones, see [Extension zones on page 84](#).

The zone border is the mounting interface location for axis 2 and axis 3.

Axis 1

Zone border	Axis 2	Axis 3
z0-z1	-42°	42°
z1-z2	6°	-6°

Axis 2

Zone border	Axis 2	Axis 3
z0-z1	48°	30°
z1-z2	90°	-30°

Axis 3

Only one zone exists.



Continues on next page

2 Technical data for IRB 5710

2.8.6 IRB 5710-90/2.7 Inv



Continued

Category 1, Axis 1, Extension zone 0, stopping distance and stopping time

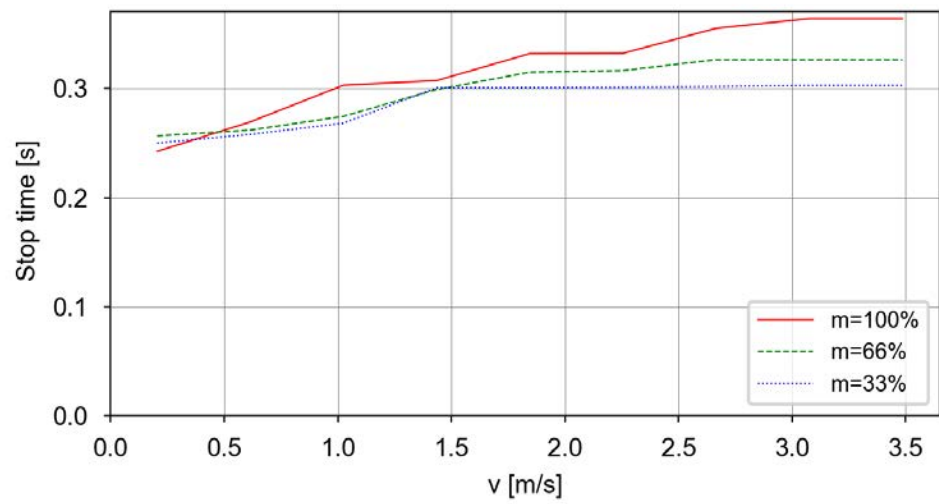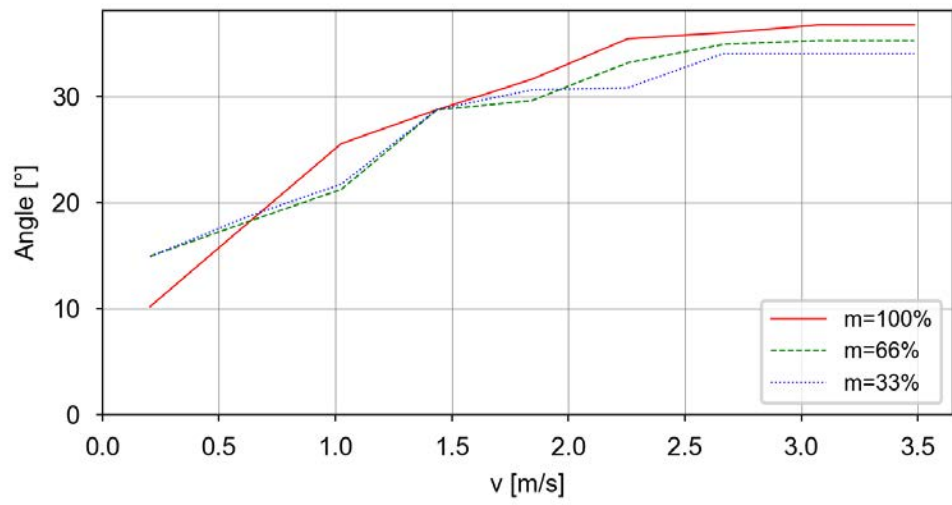

Continues on next page

Category 1, Axis 1, Extension zone 1, stopping distance and stopping time

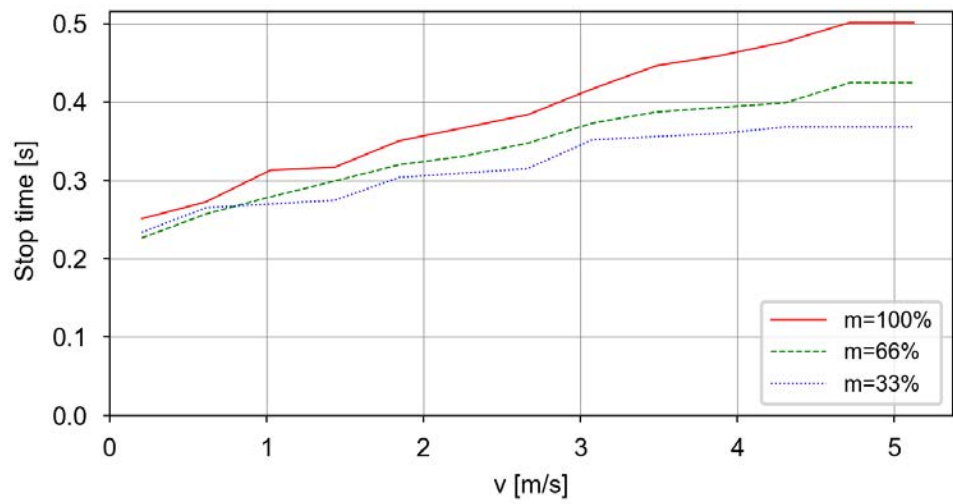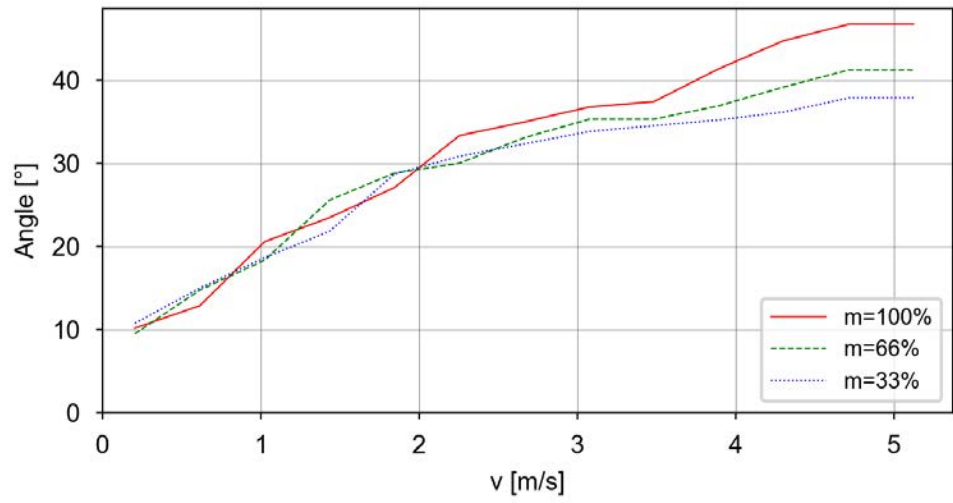



Continues on next page

2 Technical data for IRB 5710

2.8.6 IRB 5710-90/2.7 Inv



Continued

Category 1, Axis 1, Extension zone 2, stopping distance and stopping time

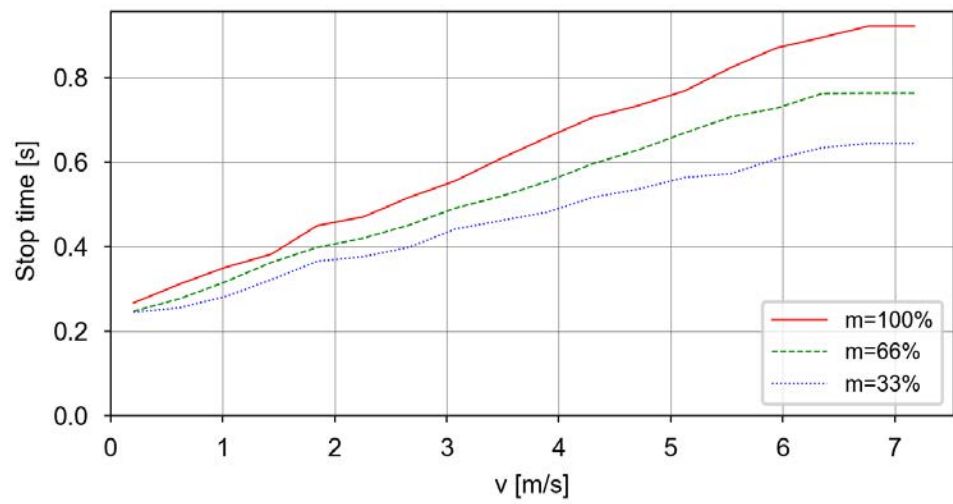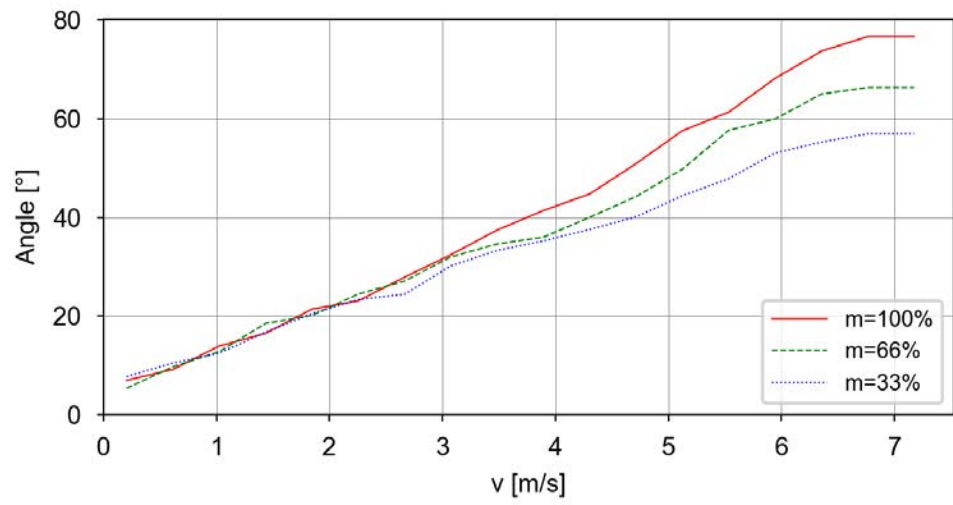

Continues on next page

Category 1, Axis 2, Extension zone 0, stopping distance and stopping time

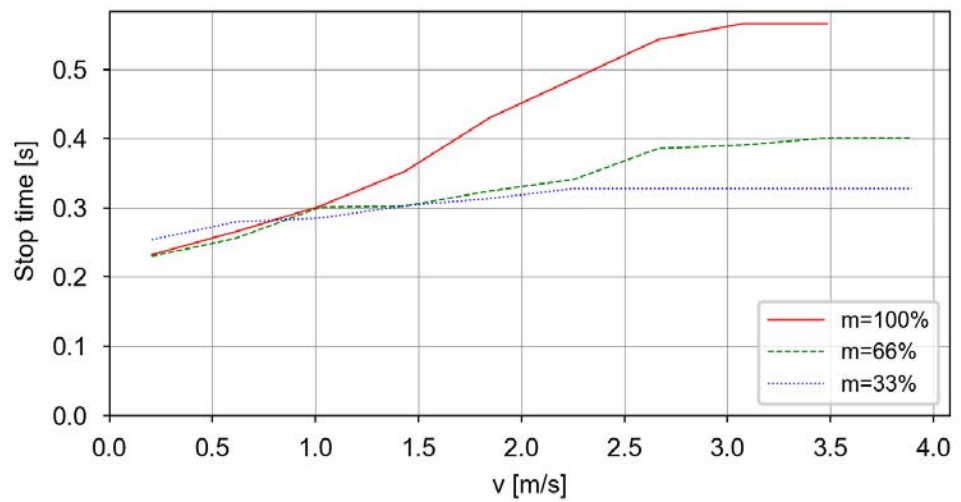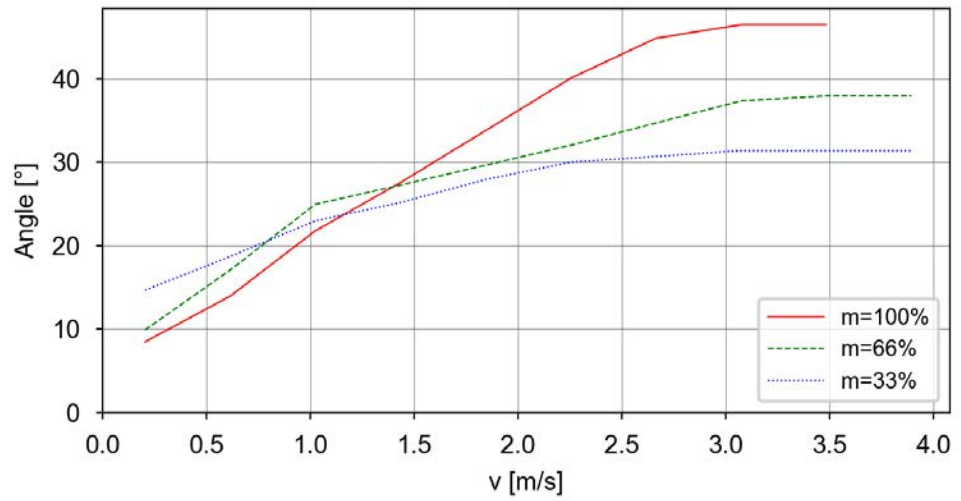



Continues on next page

2 Technical data for IRB 5710

2.8.6 IRB 5710-90/2.7 Inv



Continued

Category 1, Axis 2, Extension zone 1, stopping distance and stopping time

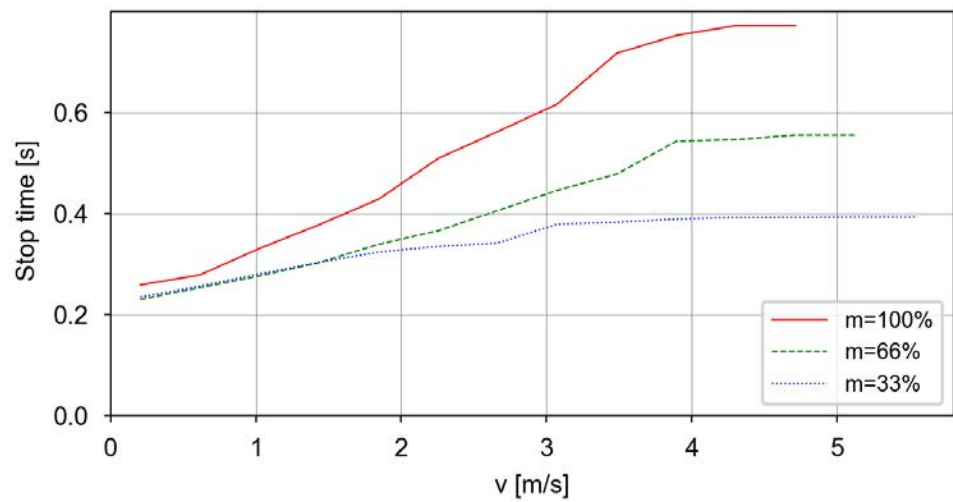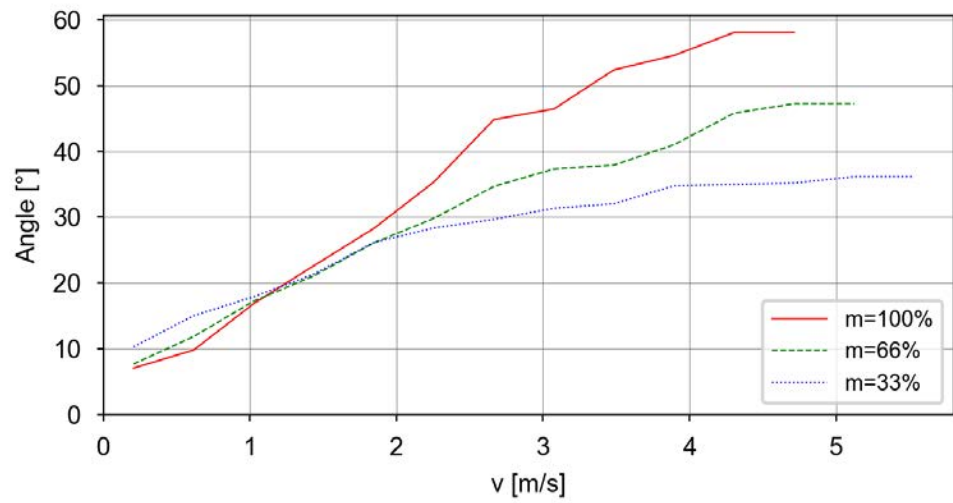

Continues on next page

Category 1, Axis 2, Extension zone 2, stopping distance and stopping time

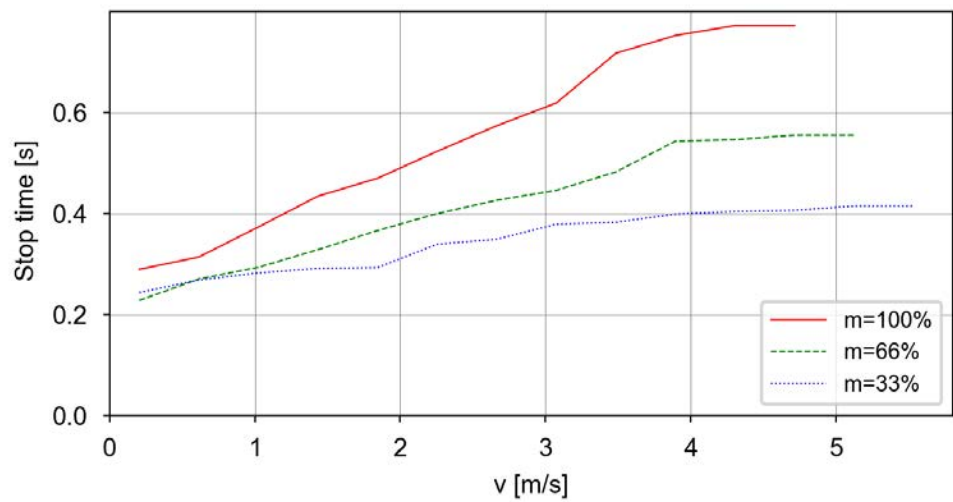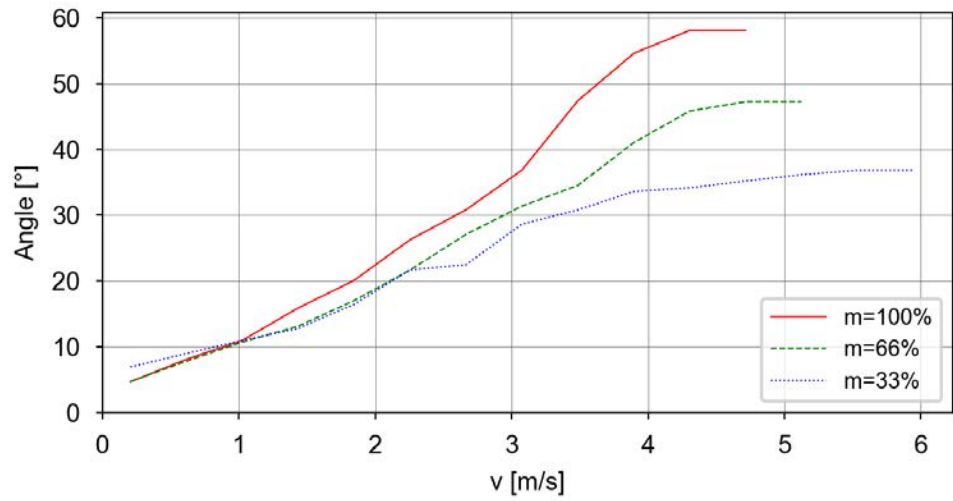



Continues on next page

2 Technical data for IRB 5710

2.8.6 IRB 5710-90/2.7 Inv

Continued

Category 1, Axis 3, Extension zone 0, stopping distance and stopping time

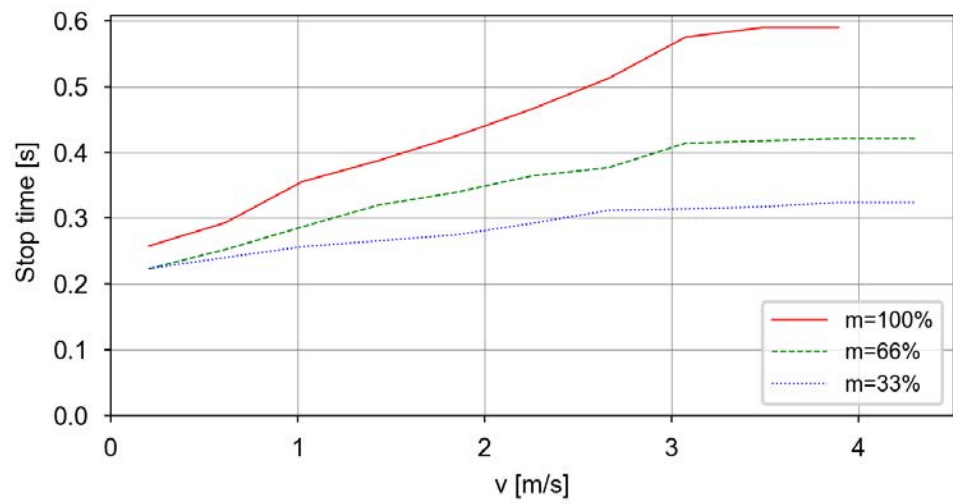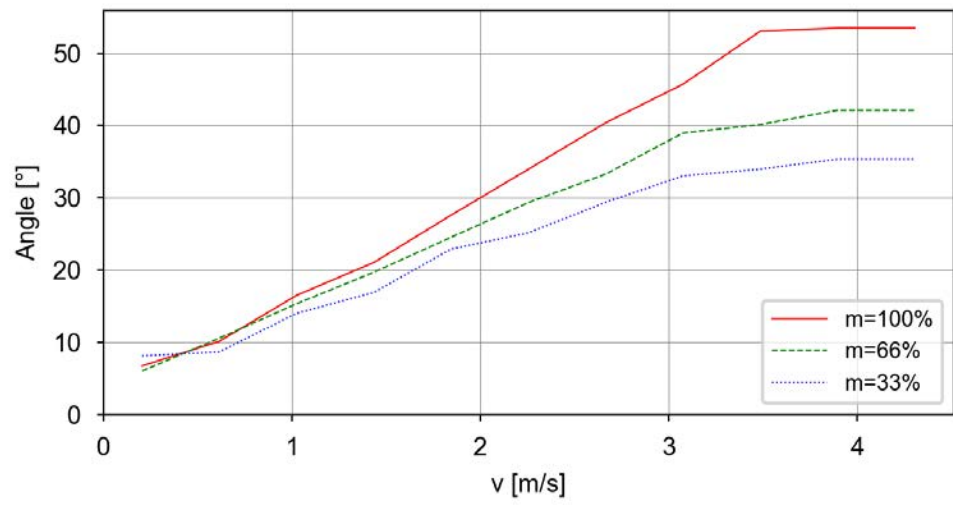

2.8.7 IRB 5710-90/2.3 LID

Used tooldata

```
PERS tooldata P100:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [90, [0,
0, 300], [1, 0, 0, 0], 1.4, 1.4, 1.4]];
PERS tooldata P66:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [60, [0, 0,
200], [1, 0, 0, 0], 0.6, 0.6, 0.6]];
PERS tooldata P33:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [30, [0, 0,
100], [1, 0, 0, 0], 0.15, 0.15, 0.15]];

```

Category 0

The following table describes the stopping distance and time for category 0 stop.

Axis	Distance	Stop time
1	48.1°	0.56 s
2	28.3°	0.36 s
3	29.1°	0.32 s

Category 1, extension zones

For definitions of the zones, see [Extension zones on page 84](#).

The zone border is the mounting interface location for axis 2 and axis 3.

Axis 1

Zone border	Axis 2	Axis 3
z0-z1	-42°	42°
z1-z2	6°	-6°

Axis 2

Zone border	Axis 2	Axis 3
z0-z1	48°	30°
z1-z2	90°	-30°

Axis 3

Only one zone exists.



Continues on next page

2 Technical data for IRB 5710

2.8.7 IRB 5710-90/2.3 LID



Continued

Category 1, Axis 1, Extension zone 0, stopping distance and stopping time

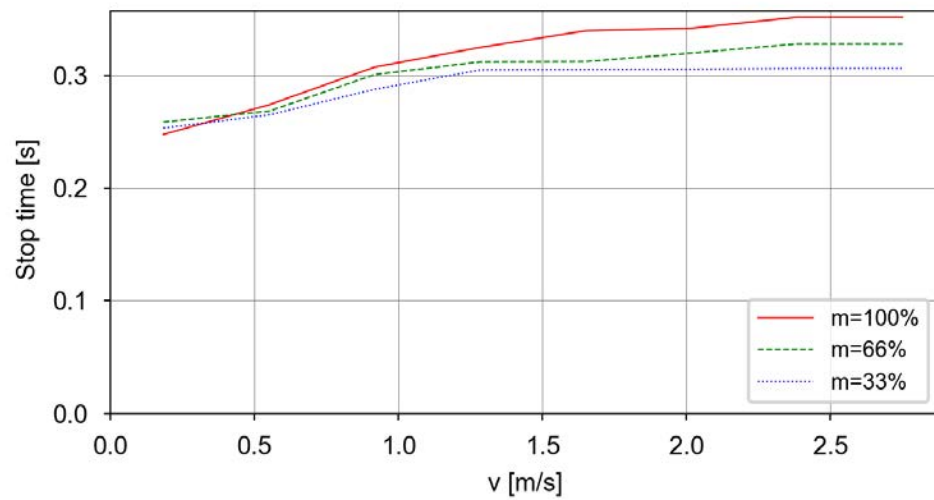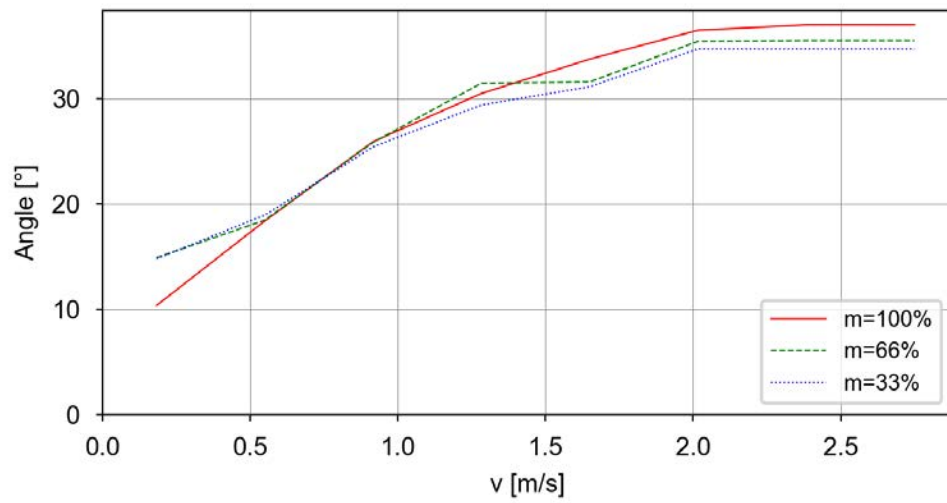

Continues on next page

Category 1, Axis 1, Extension zone 1, stopping distance and stopping time

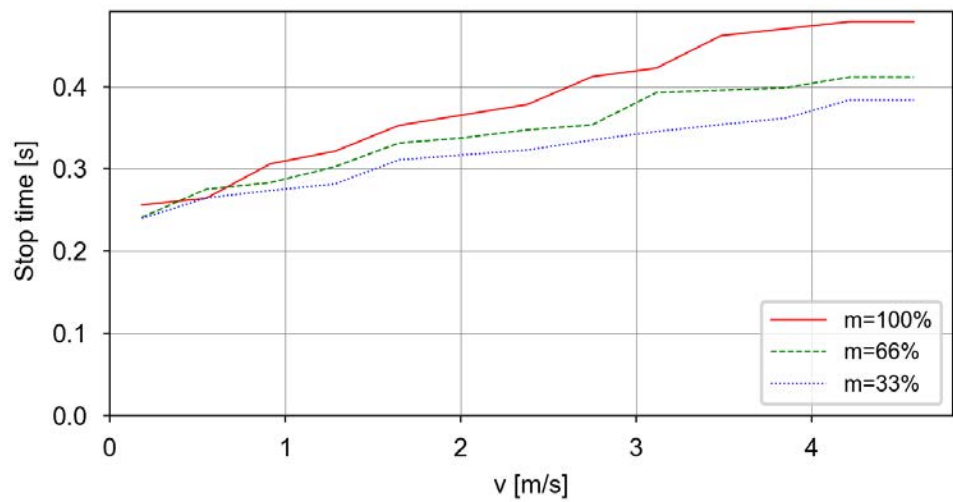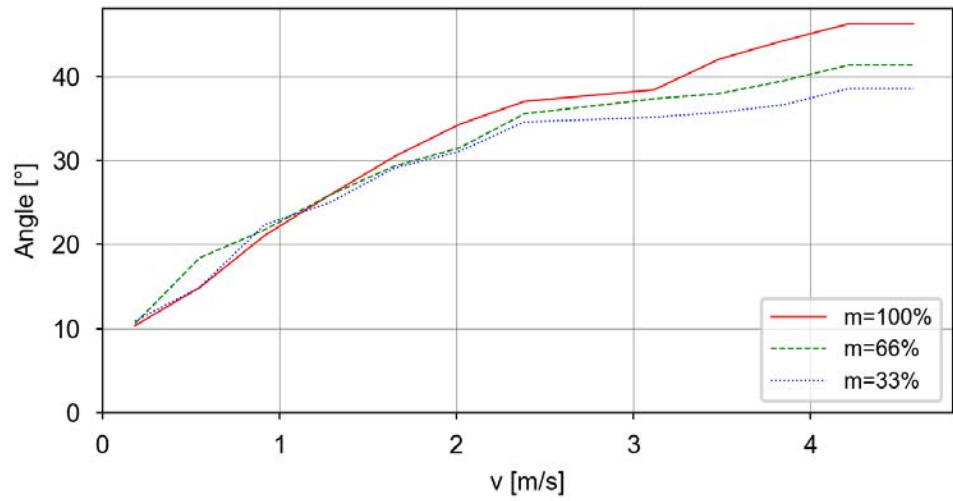



Continues on next page

2 Technical data for IRB 5710

2.8.7 IRB 5710-90/2.3 LID



Continued

Category 1, Axis 1, Extension zone 2, stopping distance and stopping time

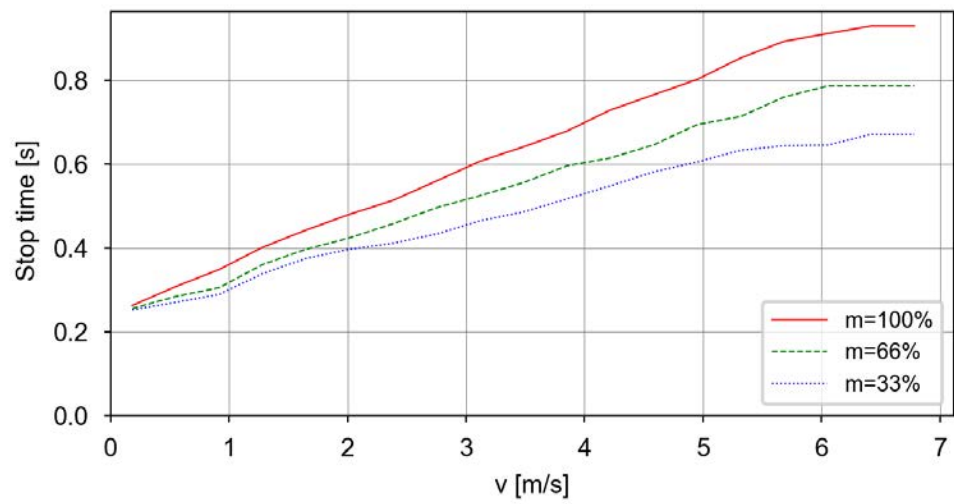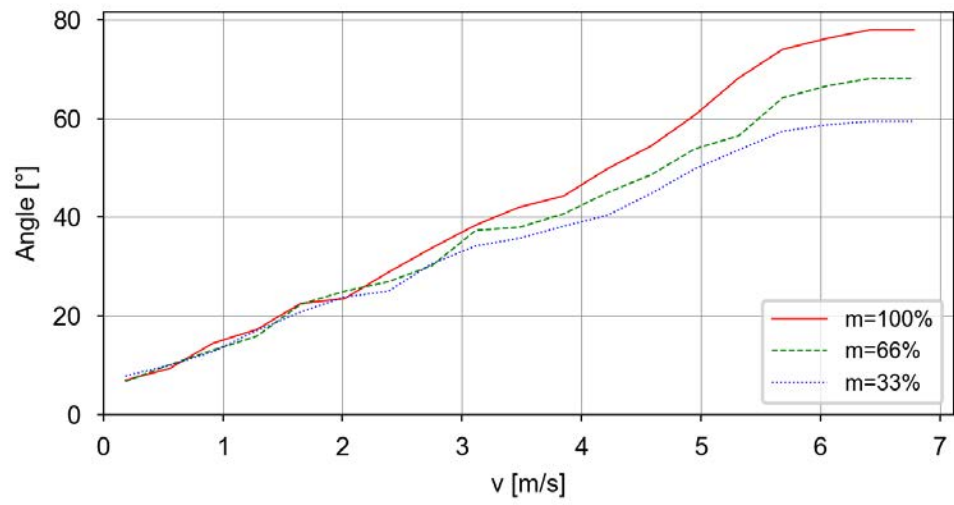

Continues on next page

Category 1, Axis 2, Extension zone 0, stopping distance and stopping time

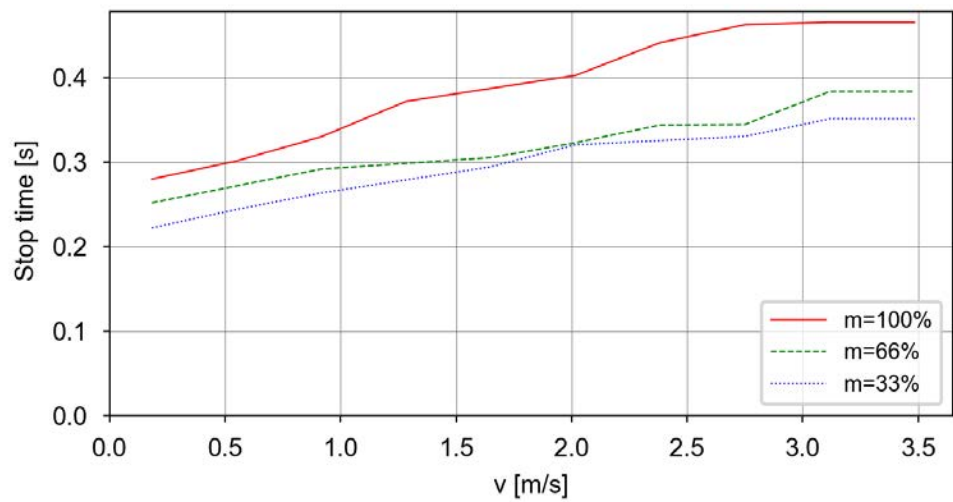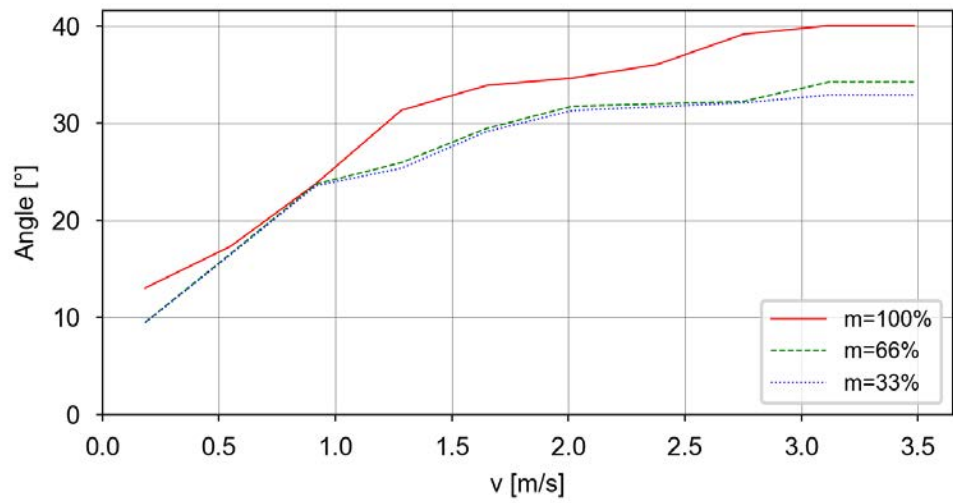



Continues on next page

2 Technical data for IRB 5710

2.8.7 IRB 5710-90/2.3 LID



Continued

Category 1, Axis 2, Extension zone 1, stopping distance and stopping time

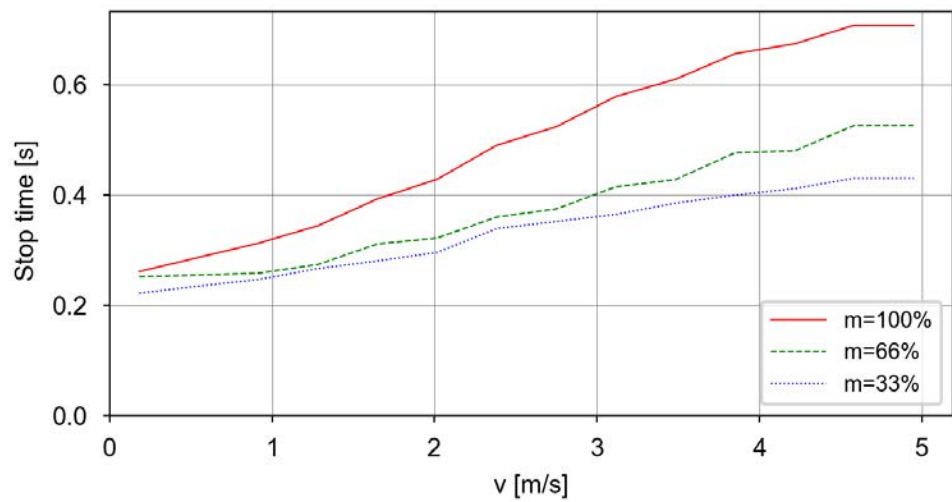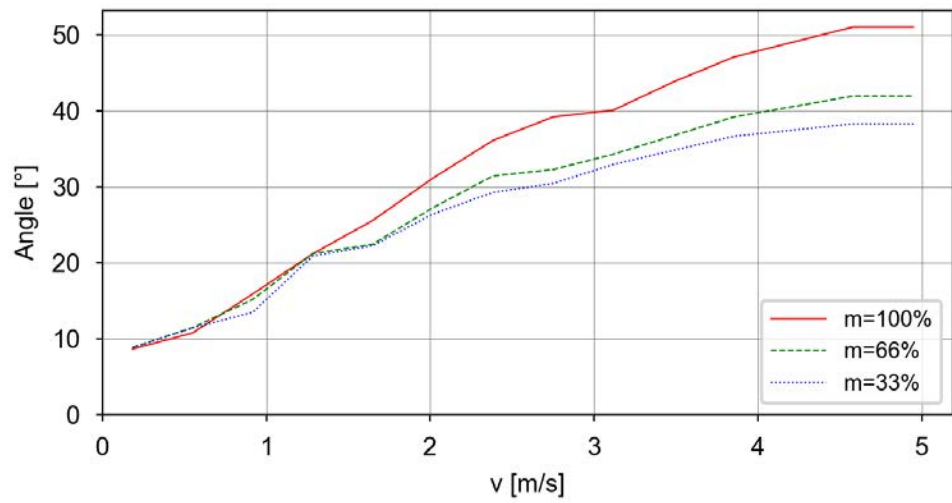

Continues on next page

Category 1, Axis 2, Extension zone 2, stopping distance and stopping time

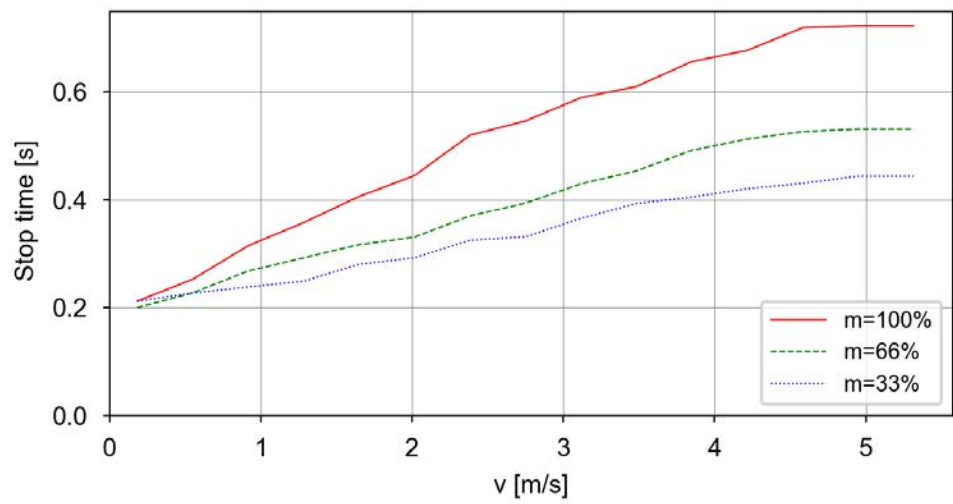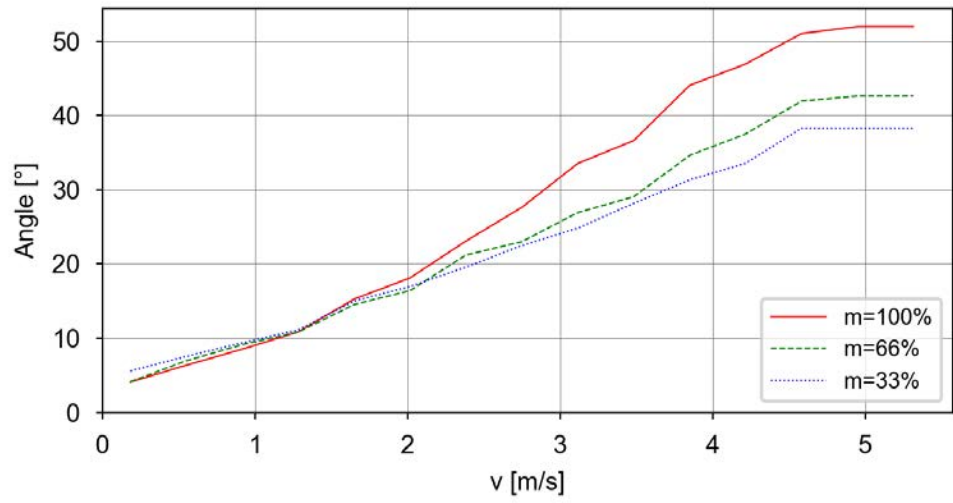



Continues on next page

2 Technical data for IRB 5710

2.8.7 IRB 5710-90/2.3 LID

Continued

Category 1, Axis 3, Extension zone 0, stopping distance and stopping time

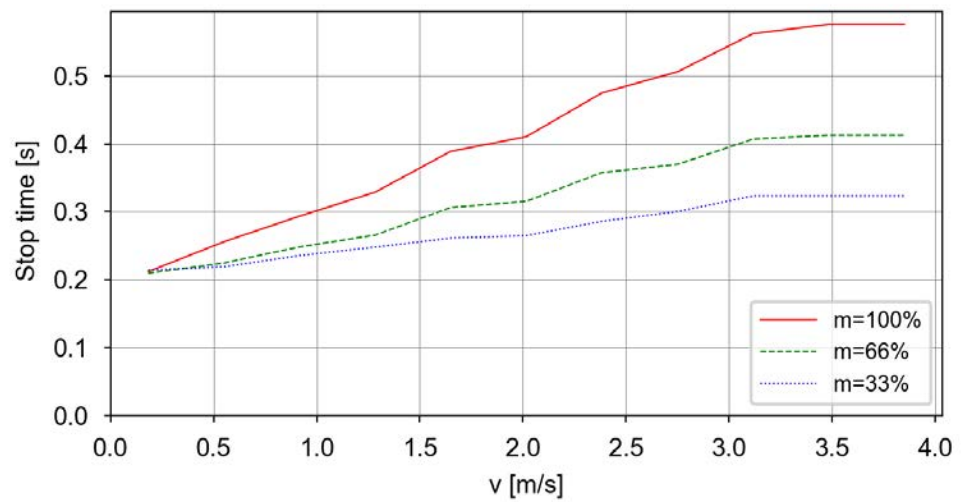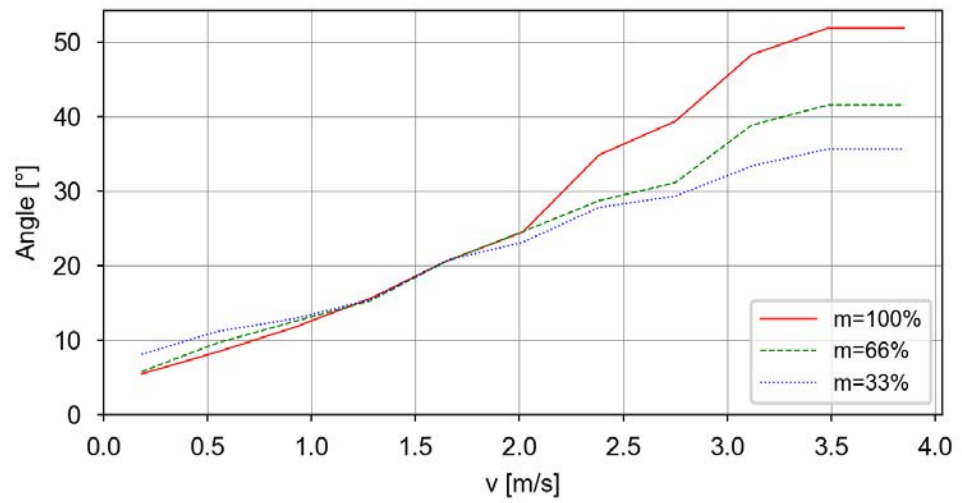

2.8.8 IRB 5710-90/2.3 LID Inv

Used tooldata

```
PERS tooldata P100:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [90, [0,
0, 300], [1, 0, 0, 0], 1.4, 1.4, 1.4]];
PERS tooldata P66:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [60, [0, 0,
200], [1, 0, 0, 0], 0.6, 0.6, 0.6]];
PERS tooldata P33:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [30, [0, 0,
100], [1, 0, 0, 0], 0.15, 0.15, 0.15]];

```

Category 0

The following table describes the stopping distance and time for category 0 stop.

Axis	Distance	Stop time
1	48.1°	0.56 s
2	27.6°	0.36 s
3	30.1°	0.33 s

Category 1, extension zones

For definitions of the zones, see [Extension zones on page 84](#).

The zone border is the mounting interface location for axis 2 and axis 3.

Axis 1

Zone border	Axis 2	Axis 3
z0-z1	-42°	42°
z1-z2	6°	-6°

Axis 2

Zone border	Axis 2	Axis 3
z0-z1	48°	30°
z1-z2	90°	-30°

Axis 3

Only one zone exists.



Continues on next page

2 Technical data for IRB 5710

2.8.8 IRB 5710-90/2.3 LID Inv



Continued

Category 1, Axis 1, Extension zone 0, stopping distance and stopping time

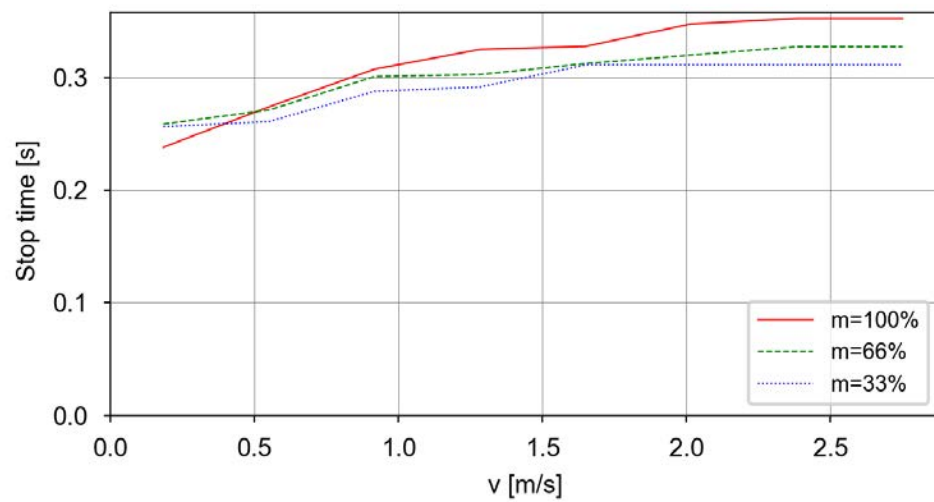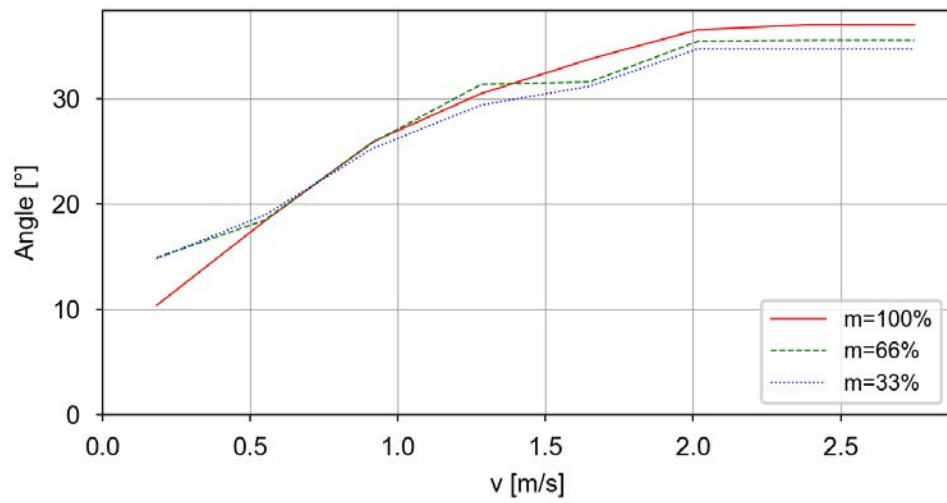

Continues on next page

Category 1, Axis 1, Extension zone 1, stopping distance and stopping time

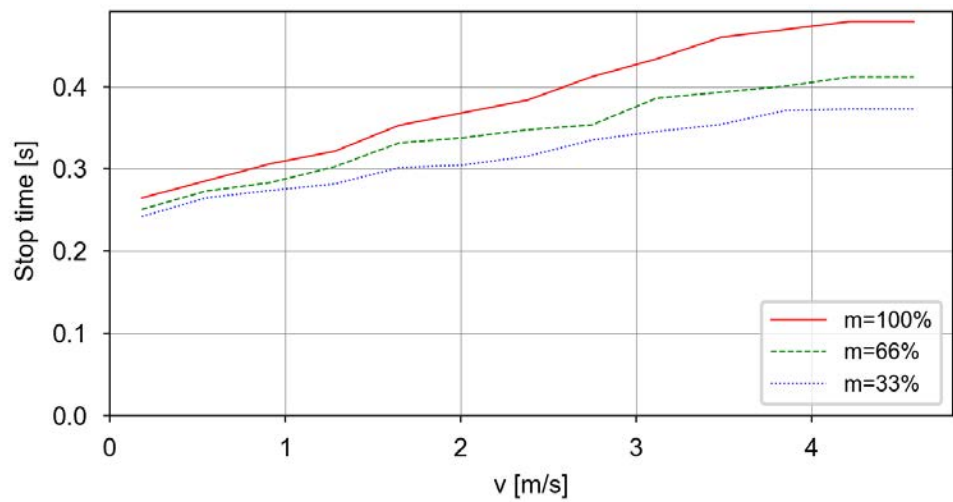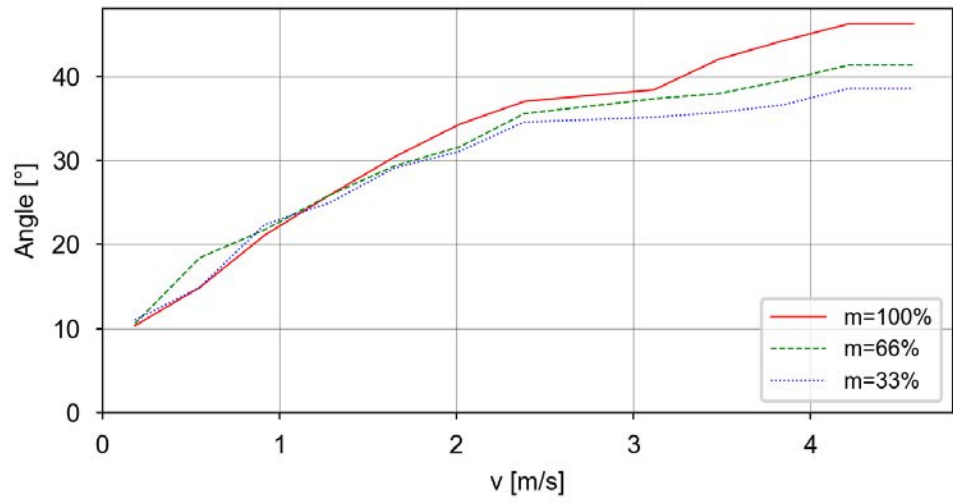



Continues on next page

2 Technical data for IRB 5710

2.8.8 IRB 5710-90/2.3 LID Inv



Continued

Category 1, Axis 1, Extension zone 2, stopping distance and stopping time

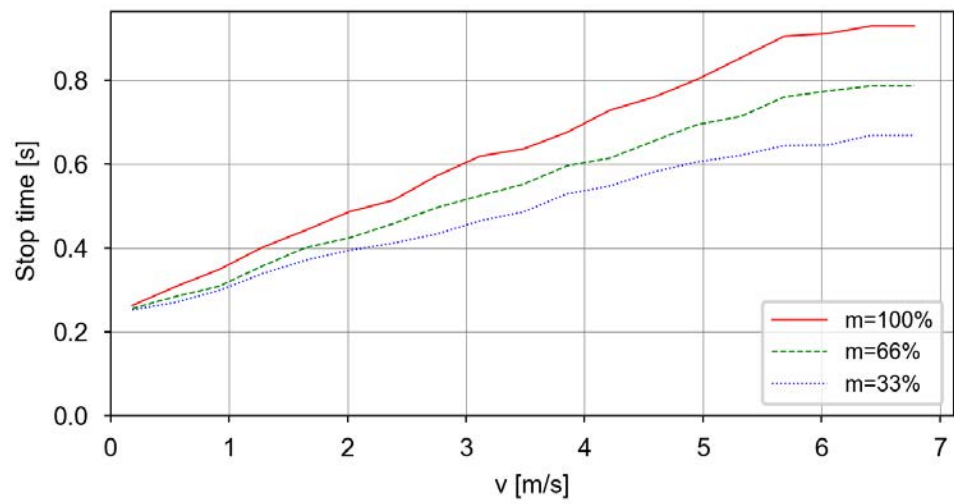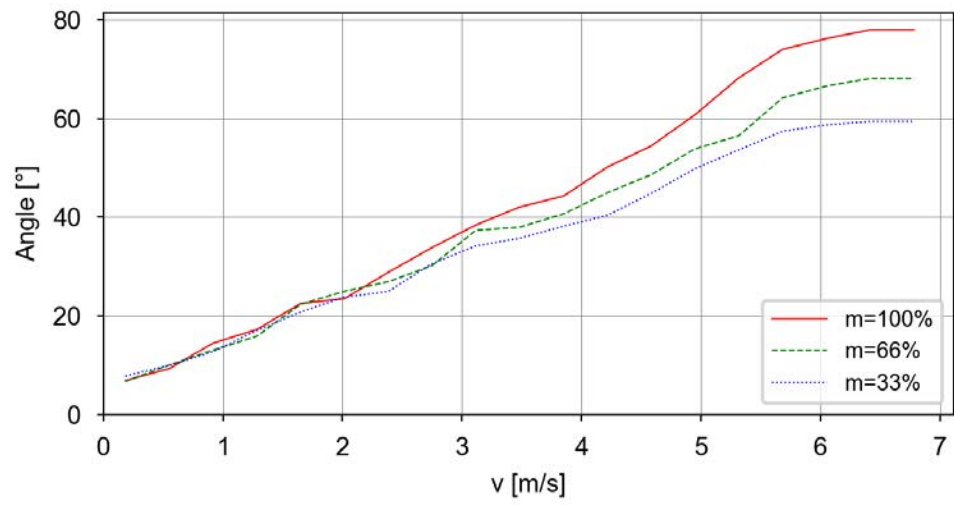

Continues on next page

Category 1, Axis 2, Extension zone 0, stopping distance and stopping time

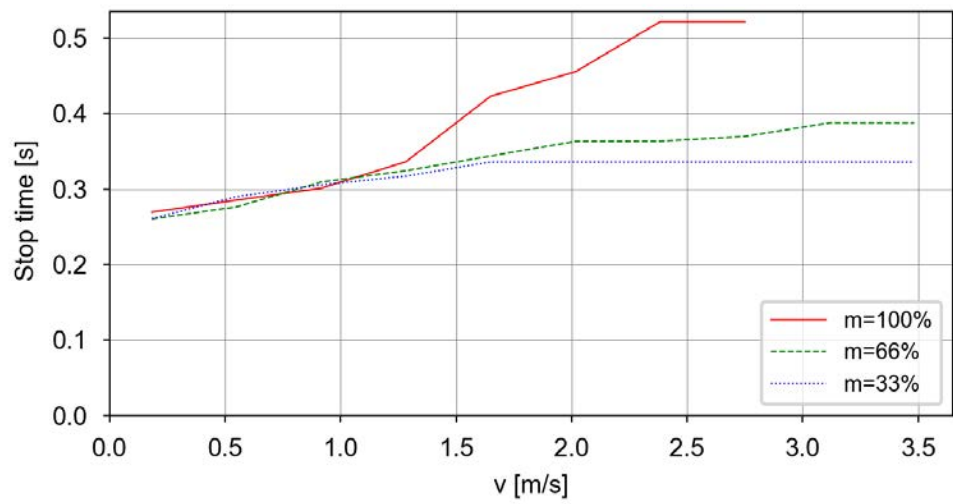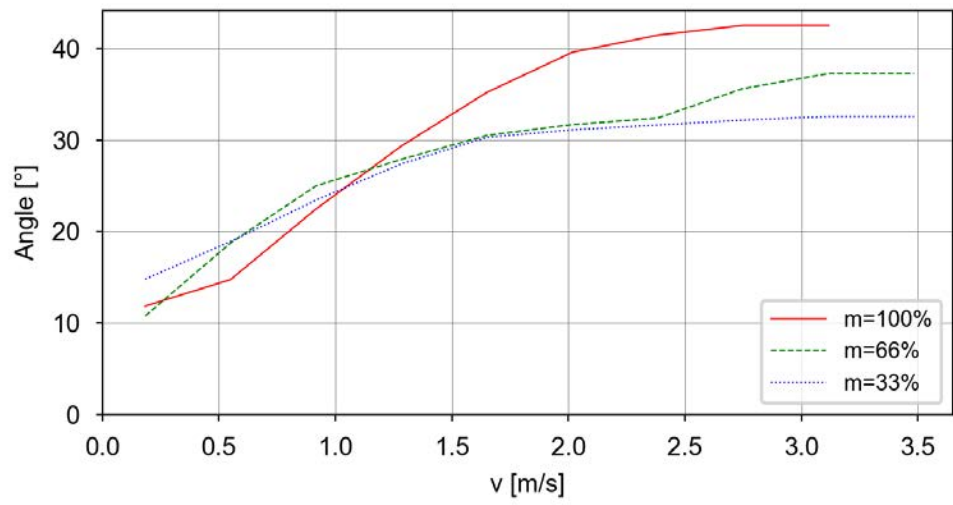



Continues on next page

2 Technical data for IRB 5710

2.8.8 IRB 5710-90/2.3 LID Inv



Continued

Category 1, Axis 2, Extension zone 1, stopping distance and stopping time

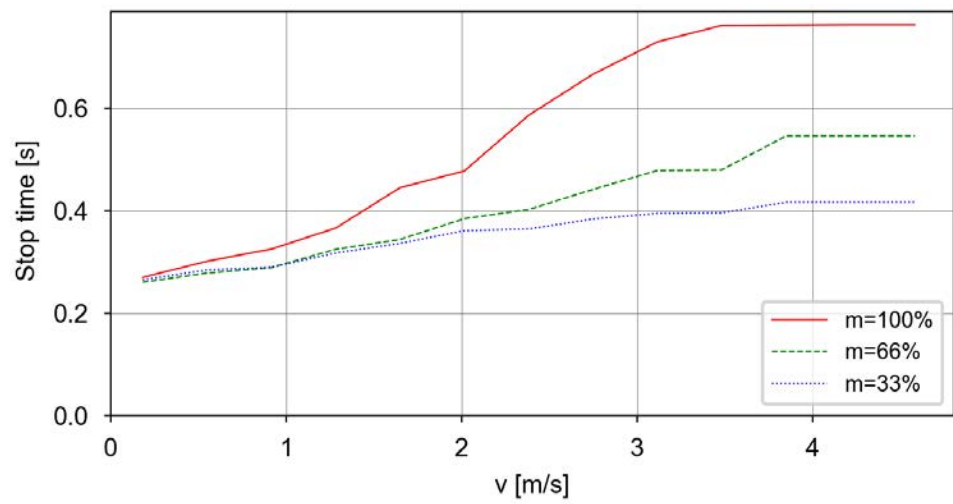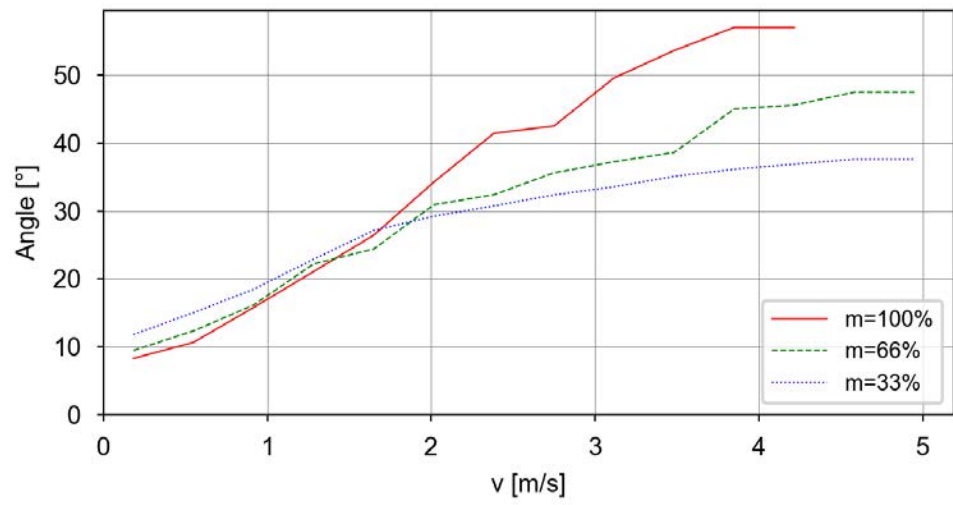

Continues on next page

Category 1, Axis 2, Extension zone 2, stopping distance and stopping time

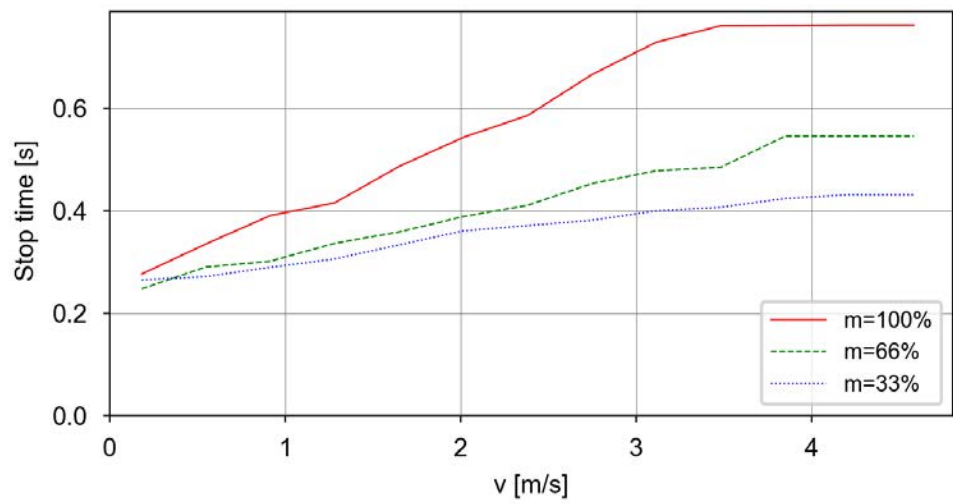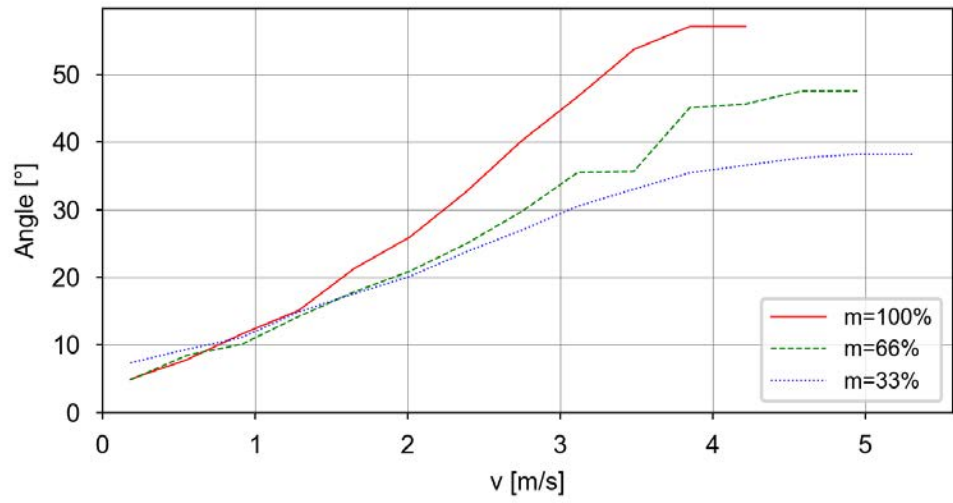



Continues on next page

2 Technical data for IRB 5710

2.8.8 IRB 5710-90/2.3 LID Inv

Continued

Category 1, Axis 3, Extension zone 0, stopping distance and stopping time

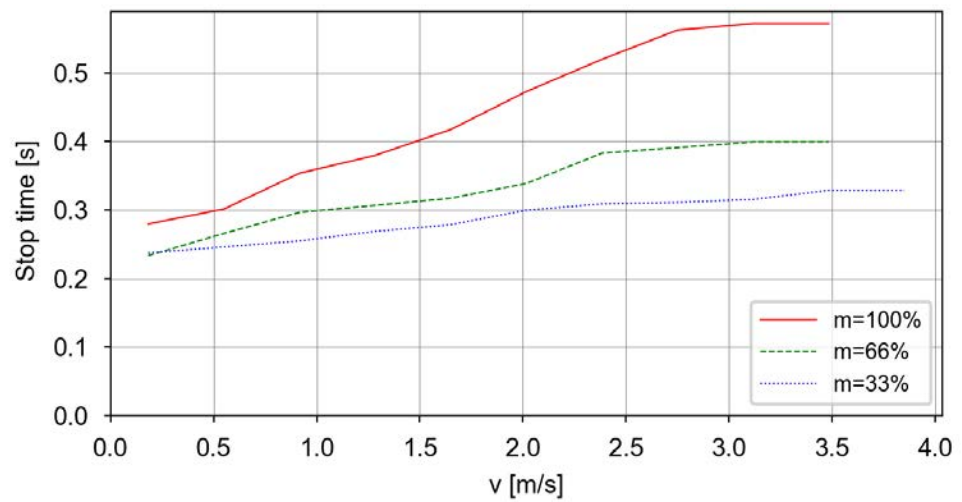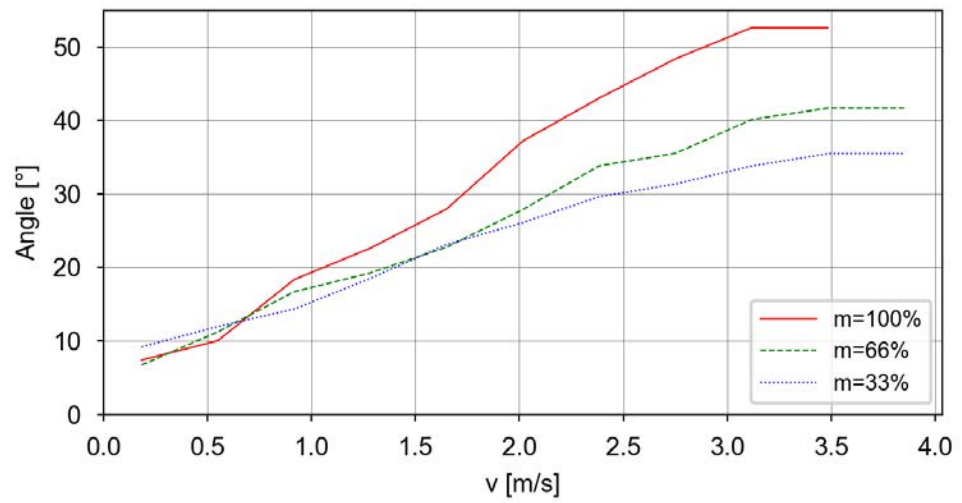

2.8.9 IRB 5710-70/2.7 LID

Used tooldata

```
PERS tooldata P100:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [70, [0,
0, 200], [1, 0, 0, 0], 0.47, 0.47, 0.47]];
PERS tooldata P66:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [47, [0, 0,
133], [1, 0, 0, 0], 0.21, 0.21, 0.21]];
PERS tooldata P33:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [23, [0, 0,
67], [1, 0, 0, 0], 0.052, 0.052, 0.052]];

```

Category 0

The following table describes the stopping distance and time for category 0 stop.

Axis	Distance	Stop time
1	45.9°	0.54 s
2	28.0°	0.36 s
3	30.1°	0.34 s

Category 1, extension zones

For definitions of the zones, see [Extension zones on page 84](#).

The zone border is the mounting interface location for axis 2 and axis 3.

Axis 1

Zone border	Axis 2	Axis 3
z0-z1	-42°	42°
z1-z2	6°	-6°

Axis 2

Zone border	Axis 2	Axis 3
z0-z1	48°	30°
z1-z2	90°	-30°

Axis 3

Only one zone exists.



Continues on next page

2 Technical data for IRB 5710

2.8.9 IRB 5710-70/2.7 LID



Continued

Category 1, Axis 1, Extension zone 0, stopping distance and stopping time

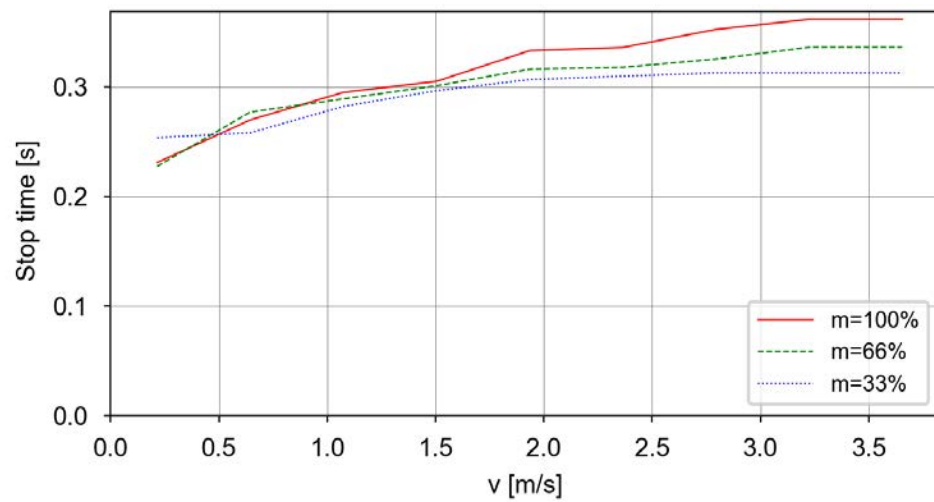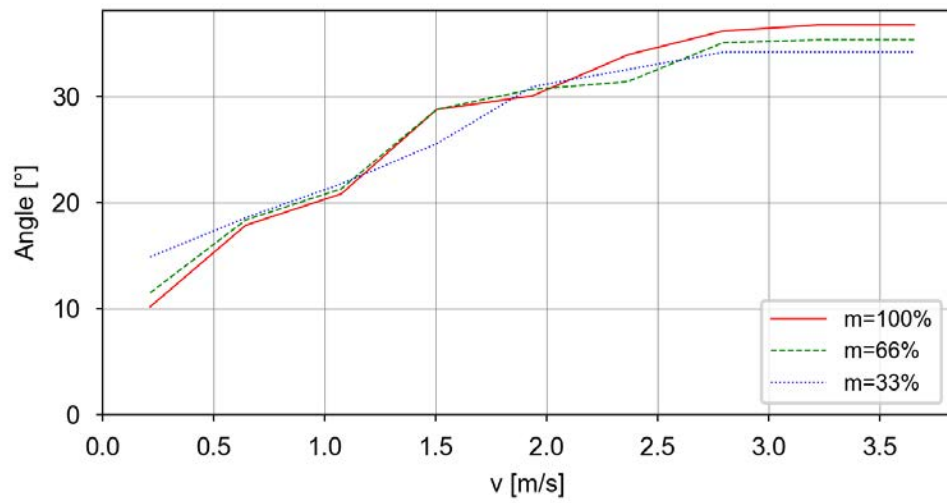

Continues on next page

Category 1, Axis 1, Extension zone 1, stopping distance and stopping time

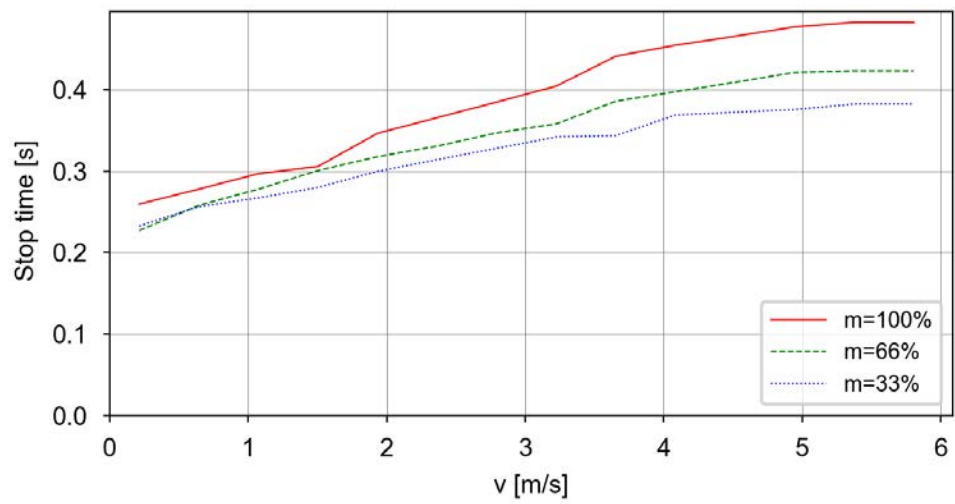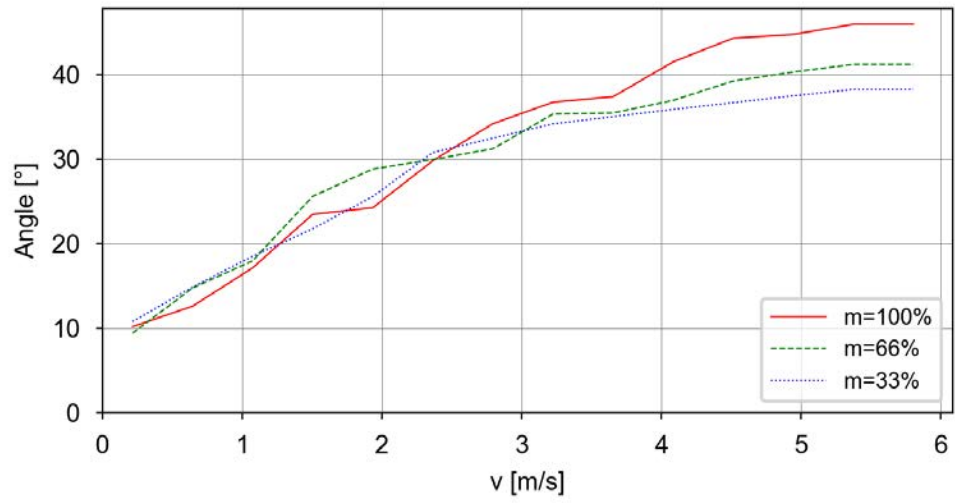



Continues on next page

2 Technical data for IRB 5710

2.8.9 IRB 5710-70/2.7 LID



Continued

Category 1, Axis 1, Extension zone 2, stopping distance and stopping time

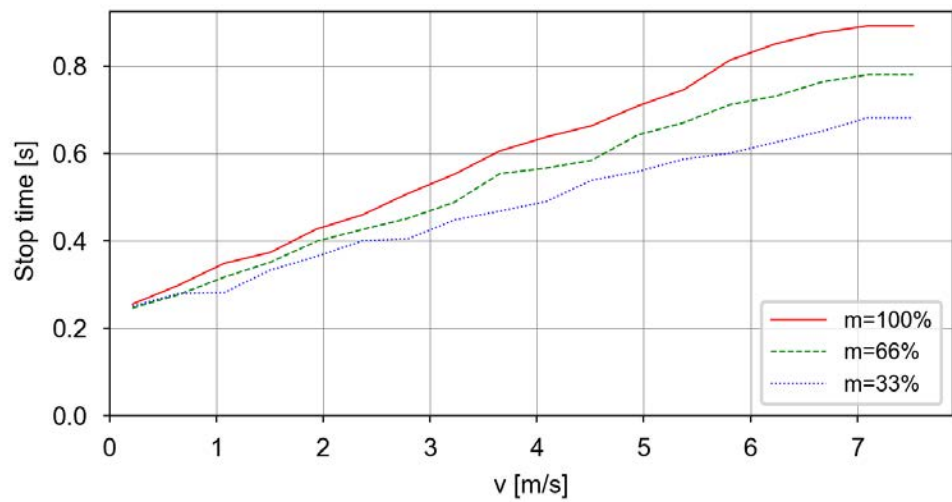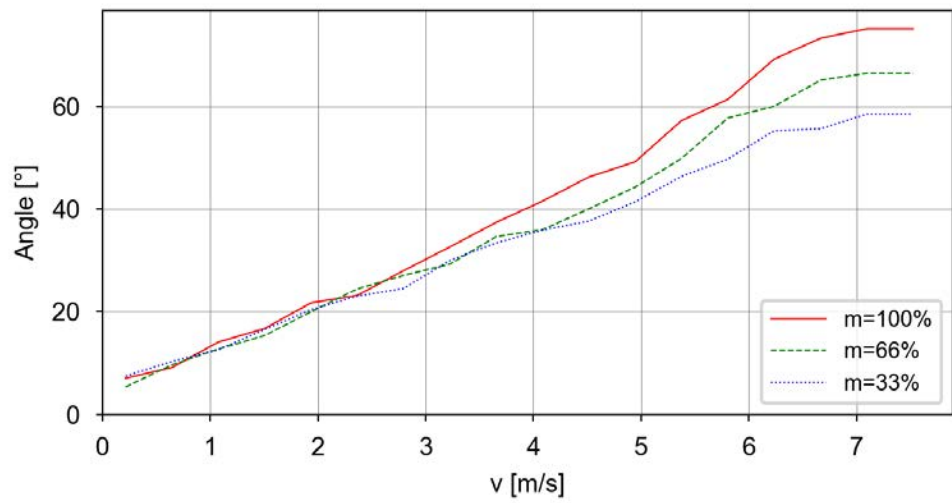

Continues on next page

Category 1, Axis 2, Extension zone 0, stopping distance and stopping time

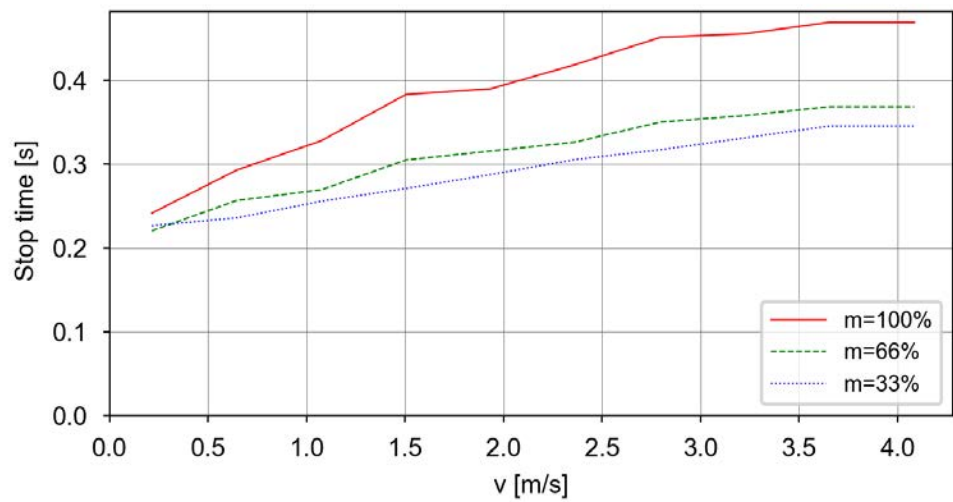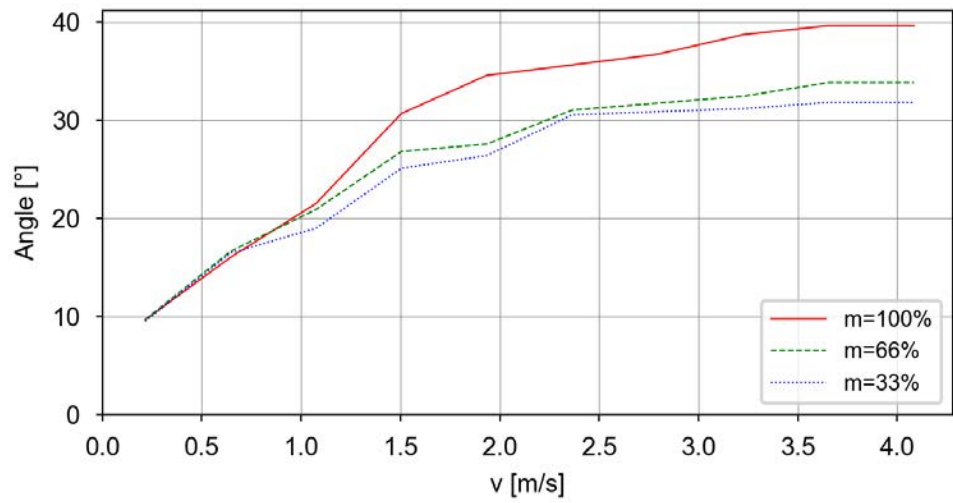



Continues on next page

2 Technical data for IRB 5710

2.8.9 IRB 5710-70/2.7 LID



Continued

Category 1, Axis 2, Extension zone 1, stopping distance and stopping time

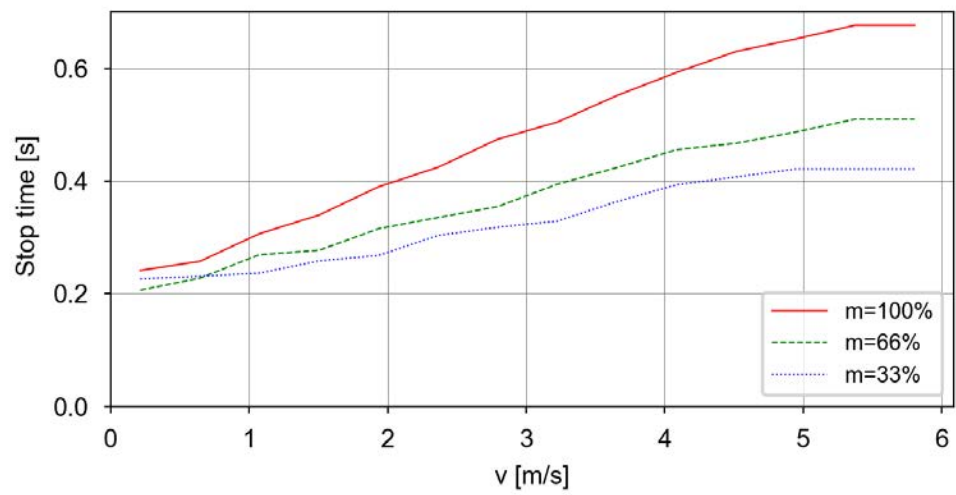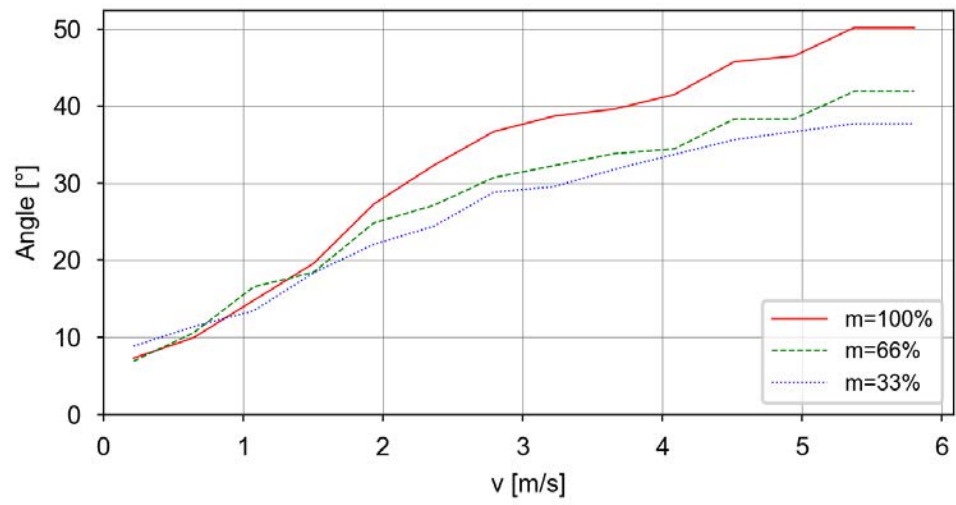

Continues on next page

Category 1, Axis 2, Extension zone 2, stopping distance and stopping time

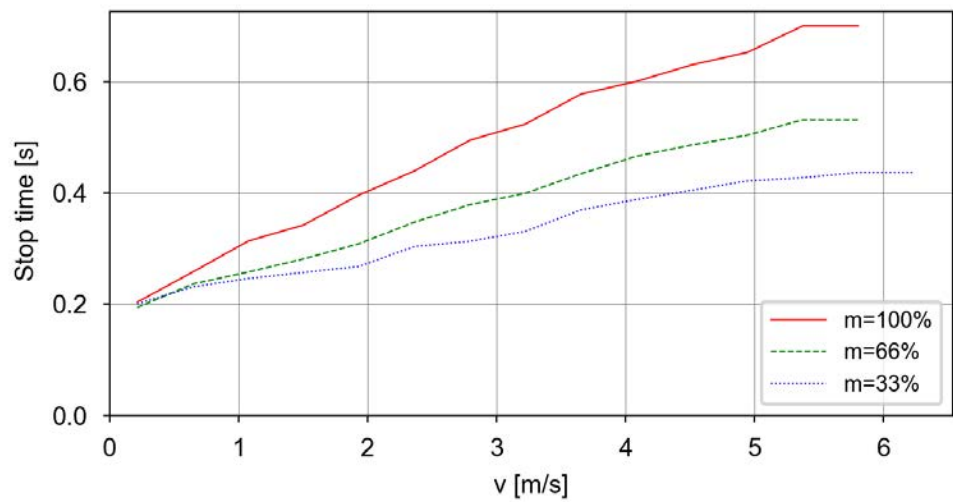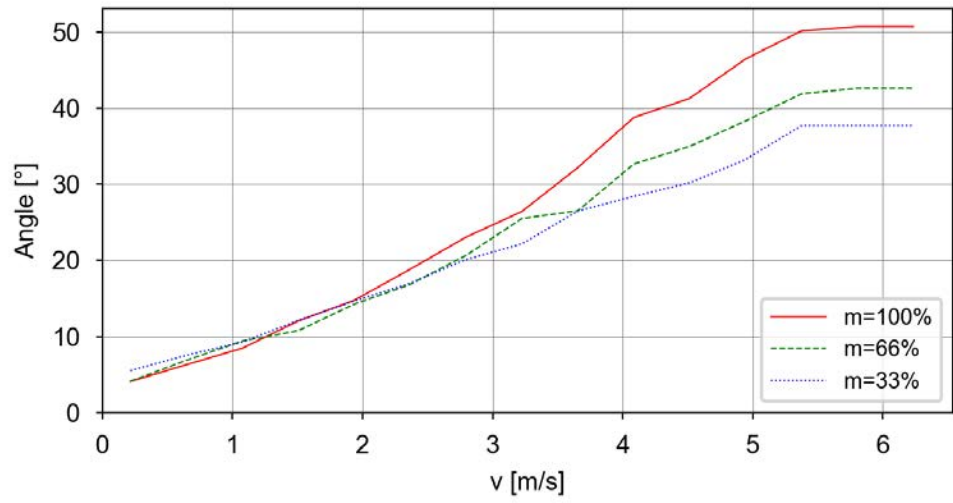



Continues on next page

2 Technical data for IRB 5710

2.8.9 IRB 5710-70/2.7 LID

Continued

Category 1, Axis 3, Extension zone 0, stopping distance and stopping time

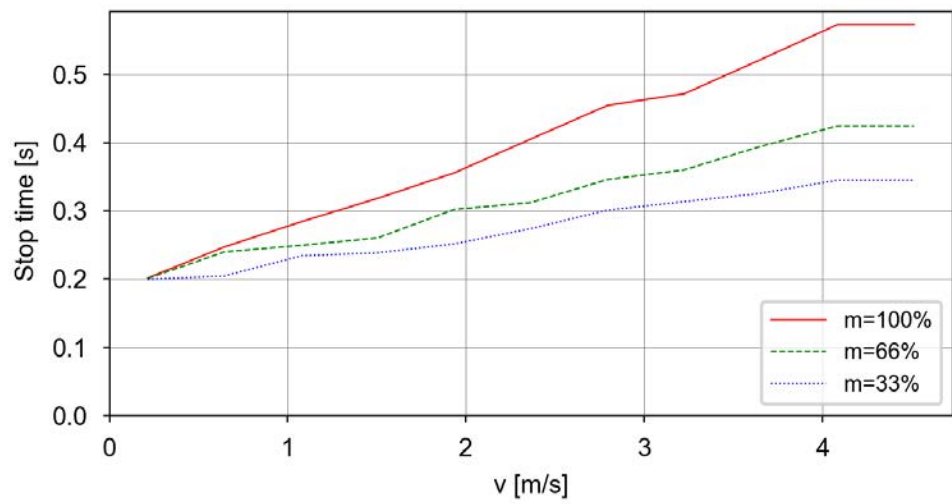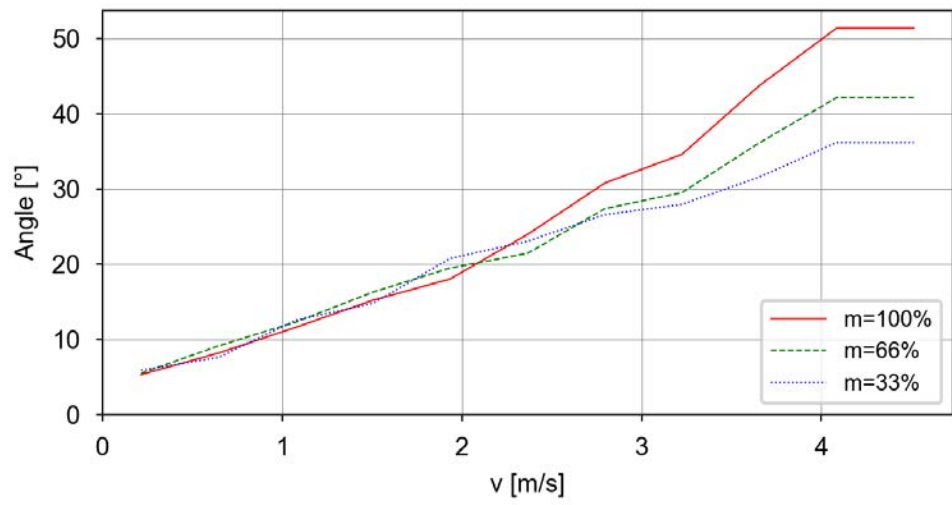

2.8.10 IRB 5710-70/2.7 LID Inv

Used tooldata

```
PERS tooldata P100:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [70, [0,
0, 200], [1, 0, 0, 0], 0.47, 0.47, 0.47]];
PERS tooldata P66:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [47, [0, 0,
133], [1, 0, 0, 0], 0.21, 0.21, 0.21]];
PERS tooldata P33:= [ TRUE, [[0, 0, 0], [1, 0, 0, 0]], [23, [0, 0,
67], [1, 0, 0, 0], 0.052, 0.052, 0.052]];

```

Category 0

The following table describes the stopping distance and time for category 0 stop.

Axis	Distance	Stop time
1	45.9°	0.54 s
2	26.8°	0.36 s
3	30.3°	0.34 s

Category 1, extension zones

For definitions of the zones, see [Extension zones on page 84](#).

The zone border is the mounting interface location for axis 2 and axis 3.

Axis 1

Zone border	Axis 2	Axis 3
z0-z1	-42°	42°
z1-z2	6°	-6°

Axis 2

Zone border	Axis 2	Axis 3
z0-z1	48°	30°
z1-z2	90°	-30°

Axis 3

Only one zone exists.



Continues on next page

2 Technical data for IRB 5710

2.8.10 IRB 5710-70/2.7 LID Inv



Continued

Category 1, Axis 1, Extension zone 0, stopping distance and stopping time

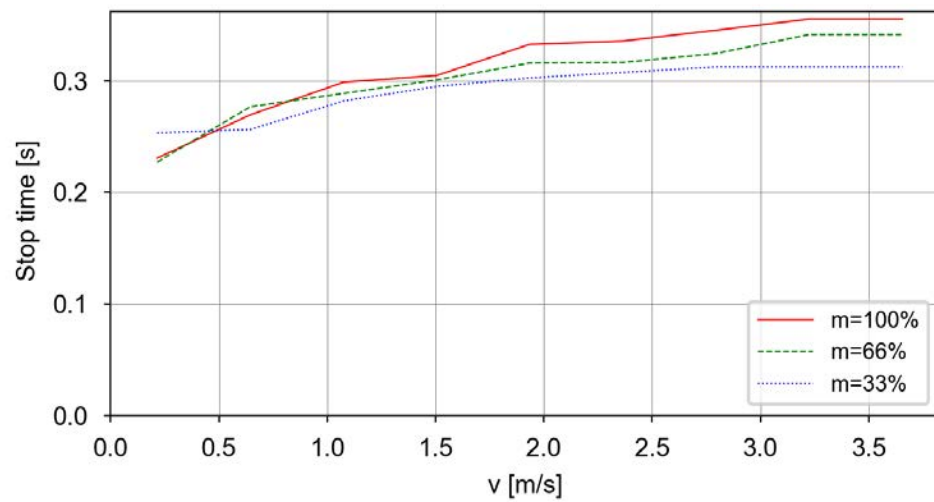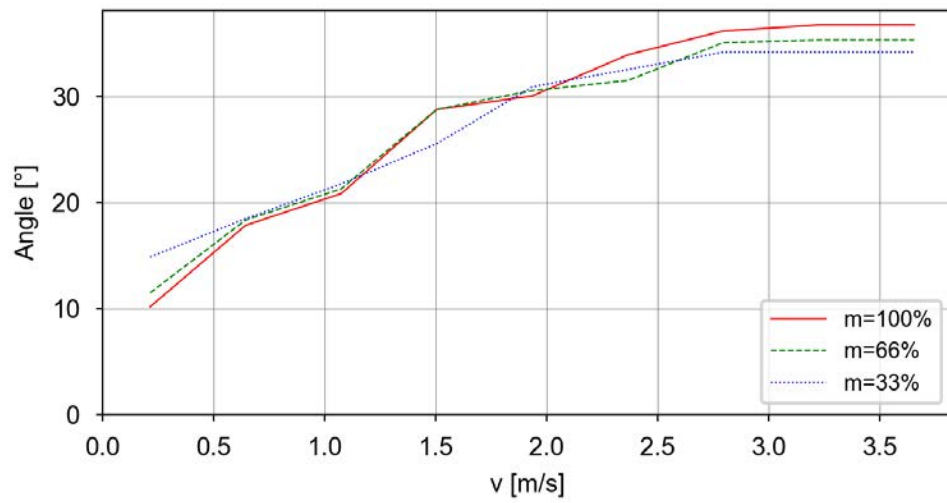

Continues on next page

Category 1, Axis 1, Extension zone 1, stopping distance and stopping time

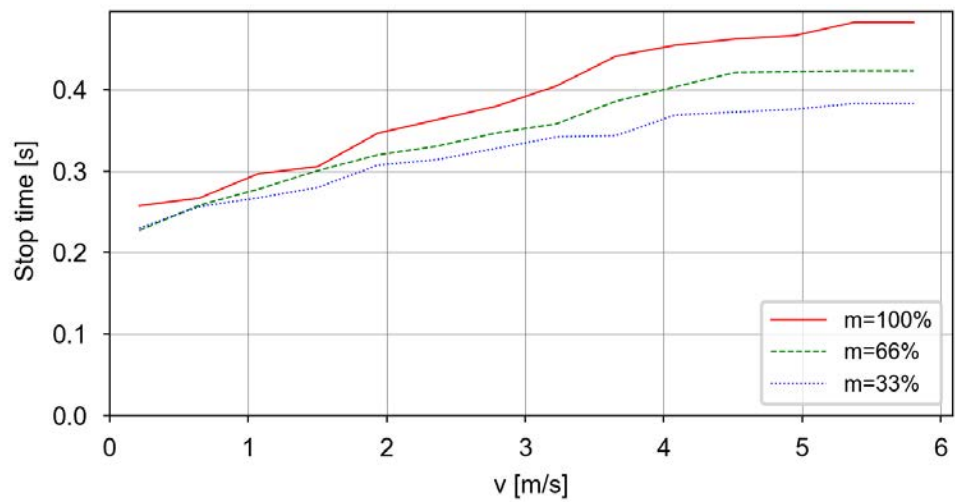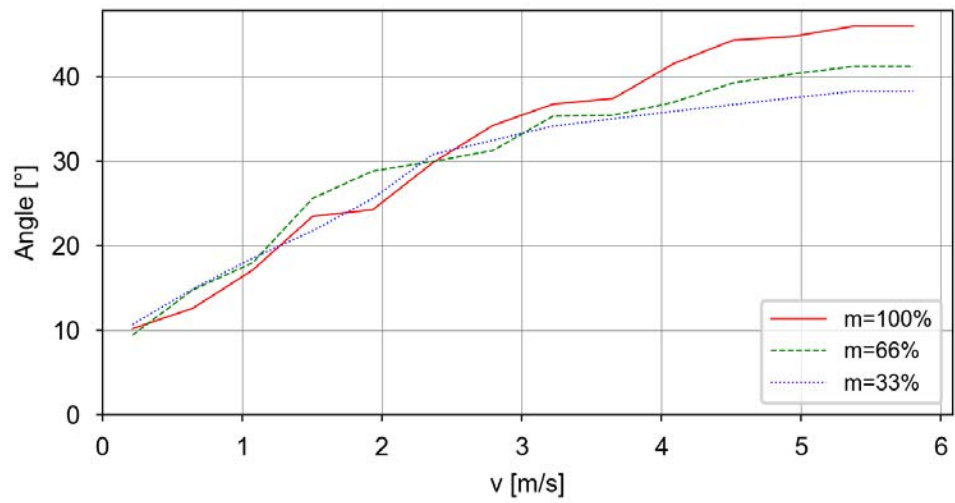



Continues on next page

2 Technical data for IRB 5710

2.8.10 IRB 5710-70/2.7 LID Inv



Continued

Category 1, Axis 1, Extension zone 2, stopping distance and stopping time

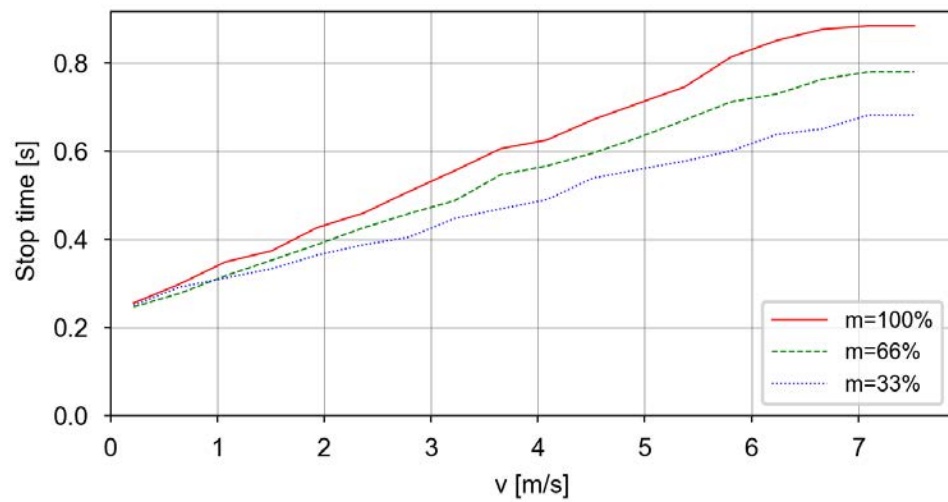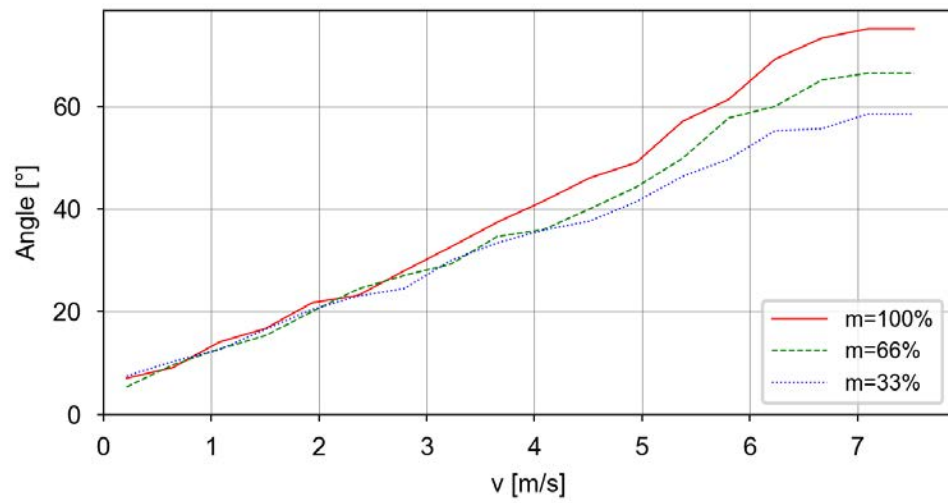

Continues on next page

Category 1, Axis 2, Extension zone 0, stopping distance and stopping time

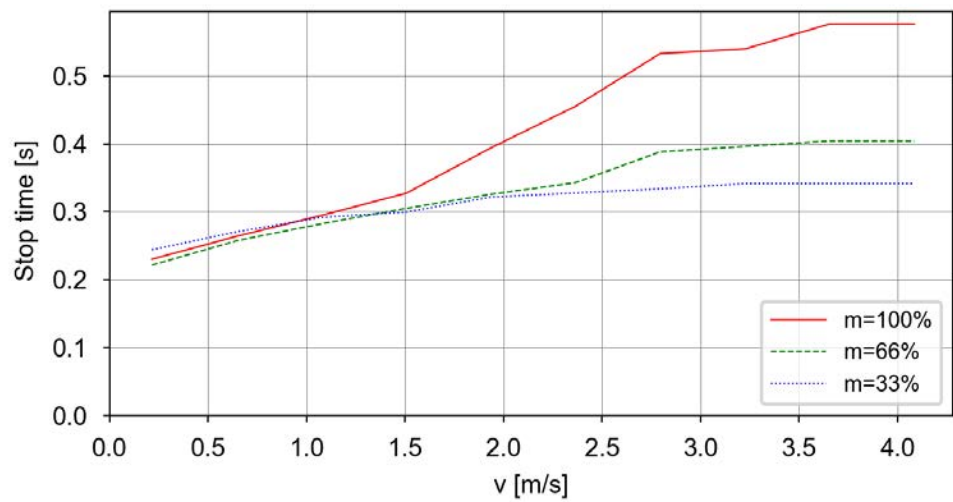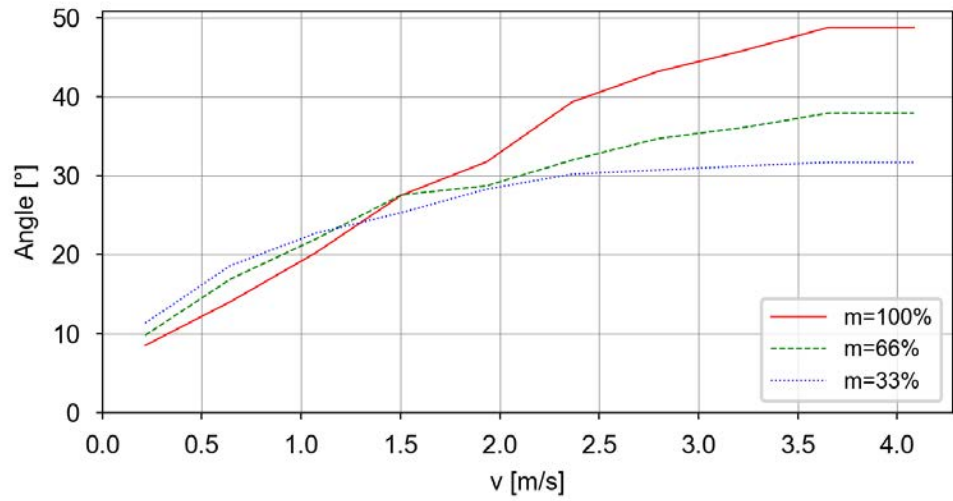



Continues on next page

2 Technical data for IRB 5710

2.8.10 IRB 5710-70/2.7 LID Inv



Continued

Category 1, Axis 2, Extension zone 1, stopping distance and stopping time

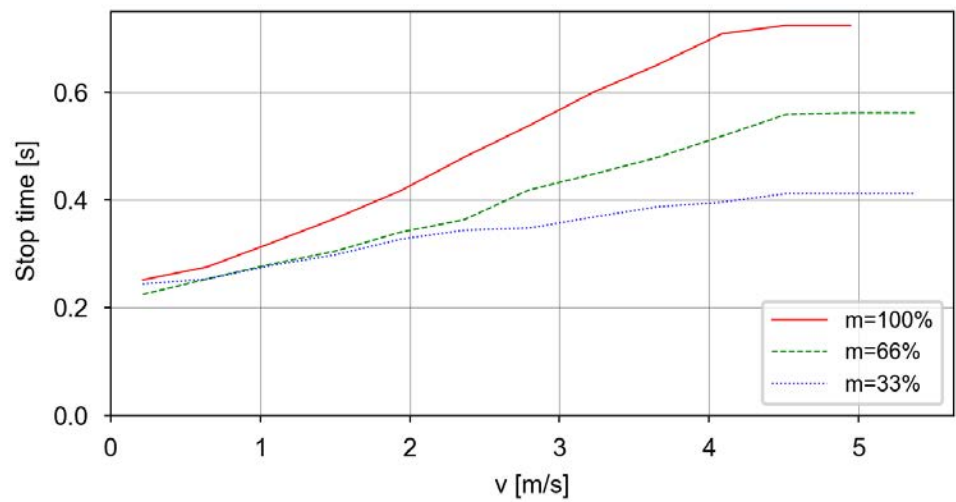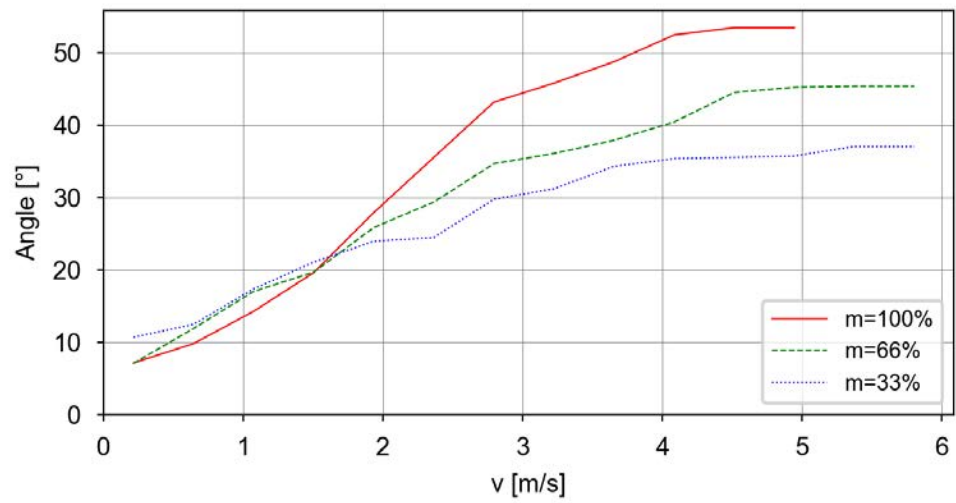

Continues on next page

Category 1, Axis 2, Extension zone 2, stopping distance and stopping time

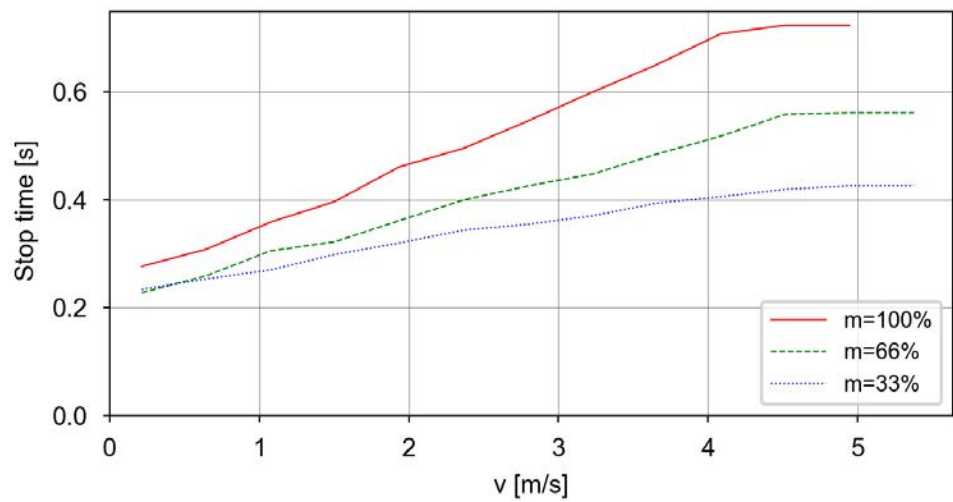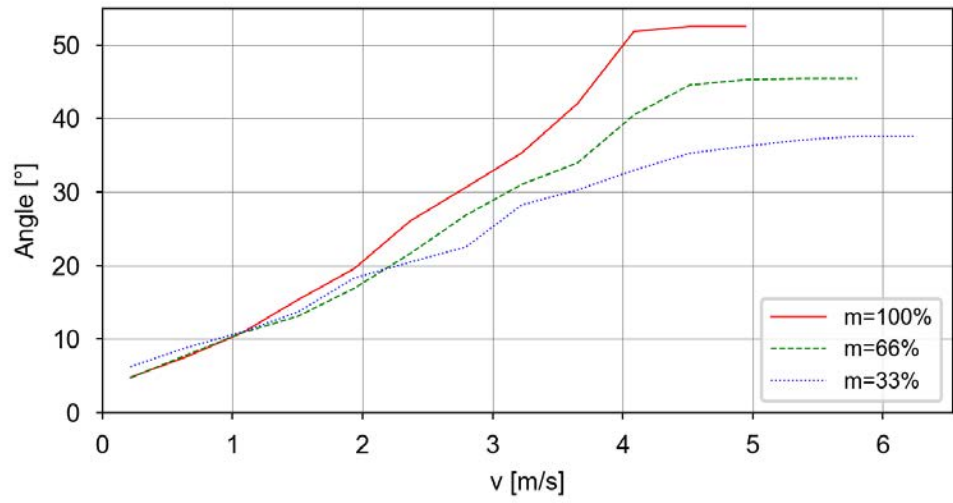



Continues on next page

2 Technical data for IRB 5710

2.8.10 IRB 5710-70/2.7 LID Inv

Continued

Category 1, Axis 3, Extension zone 0, stopping distance and stopping time

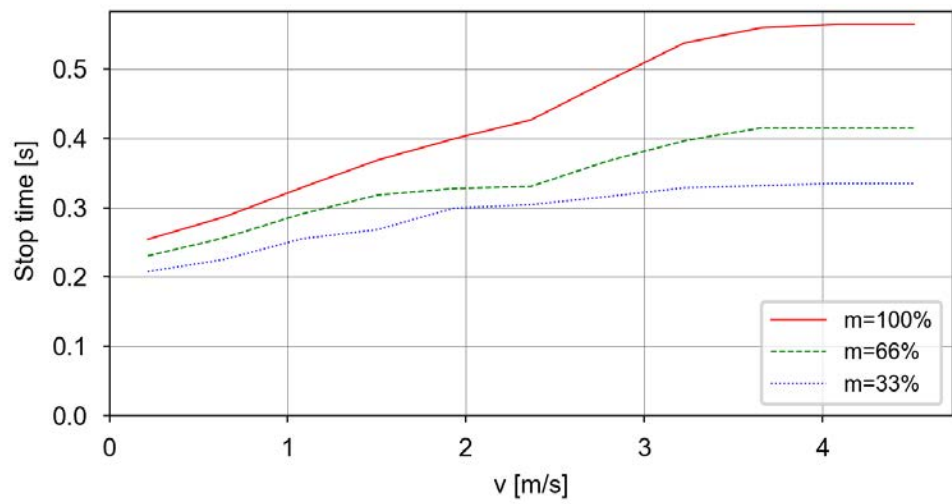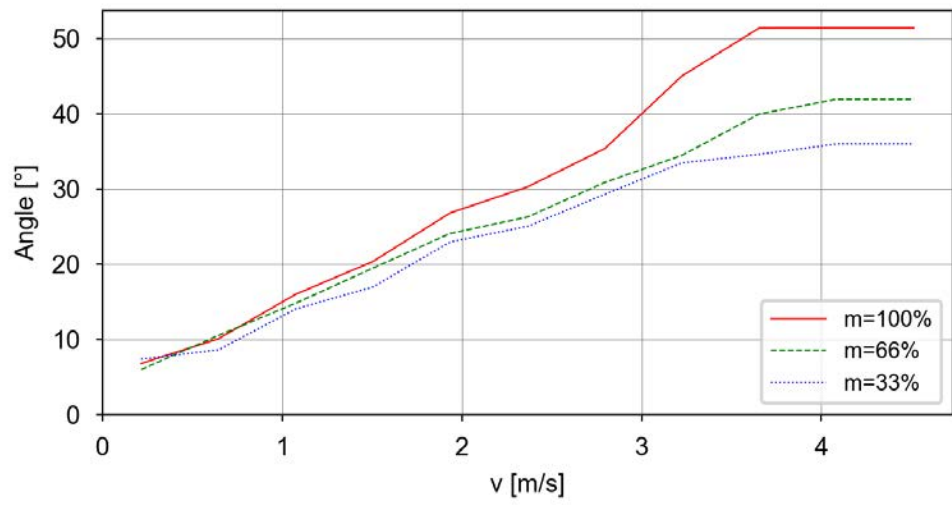

3 Specification of variants and options

3.1 Introduction to variants and options

General

The different variants and options for the IRB 5710 are described in the following sections. The same option numbers are used here as in the specification form.

The variants and options related to the robot controller are described in the product specification for the controller.

3 Specification of variants and options

3.2 Manipulator

3.2 Manipulator

Variants

Option	IRB Type	Handling capacity (kg)	Reach (m)	Remark
3300-122	5710	110	2.3	
3300-123	5710	90	2.7	
3300-124	5710	90	2.3	LeanID
3300-125	5710	70	2.7	LeanID

Requirements

The option 3300-124 and 3300-125 requires option DressPack axis 3-6 [3326-x].

Manipulator color

Option	Color	RAL code ⁱ
209-1	ABB orange standard Standard color with protection option 3352-10 Foundry Plus2 67	RAL 7032
209-202	ABB Graphite White std Standard color with protection option 3350-670 Base 67	RAL 7035
209	RAL code should be specified (ABB non-standard colors)	

ⁱ The colors can differ depending on supplier and the material on which the paint is applied.




Note

Notice that delivery time for painted spare parts will increase for none standard colors.

General

The manipulator could be offered with different colours. The manipulator painted with ABB Graphite White is the standard.

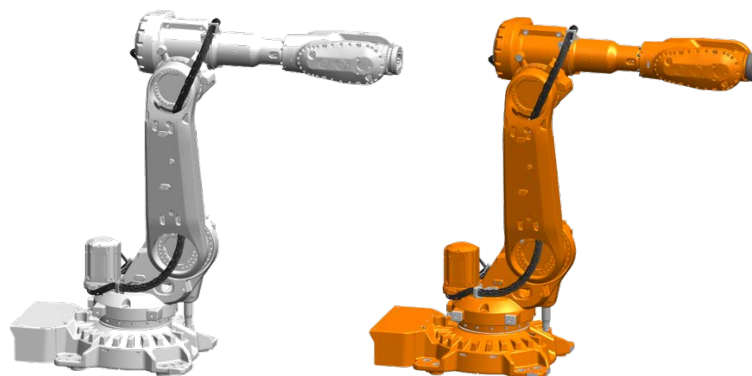

xx2100002590

Continues on next page



Note

Notice that delivery time for painted spare parts will increase for none standard colors.

Continues on next page

3 Specification of variants and options

3.2 Manipulator

Continued

Manipulator protection

Option	Description	Note
3350-670	Base 67	IP67
3352-10	Foundry Plus2 67	IP67


General

The manipulator could be offered with different protection level. The basic design (option Base 67) is well prepared for normal or tough environment. This includes electrical design following the IP67 standard and stainless steel screw used for all add-on parts after painting.

For the extra tough environment like Foundry industries the option Foundry Plus2 67 is recommended. This has on top of the basic robot also added extra protection of cables, extra sealings, protection plugs in customers or unused holes, added rust preventive and special paint / surface treatment.

Continues on next page

The below picture shows additional parts when choosing Foundry Plus2 67.

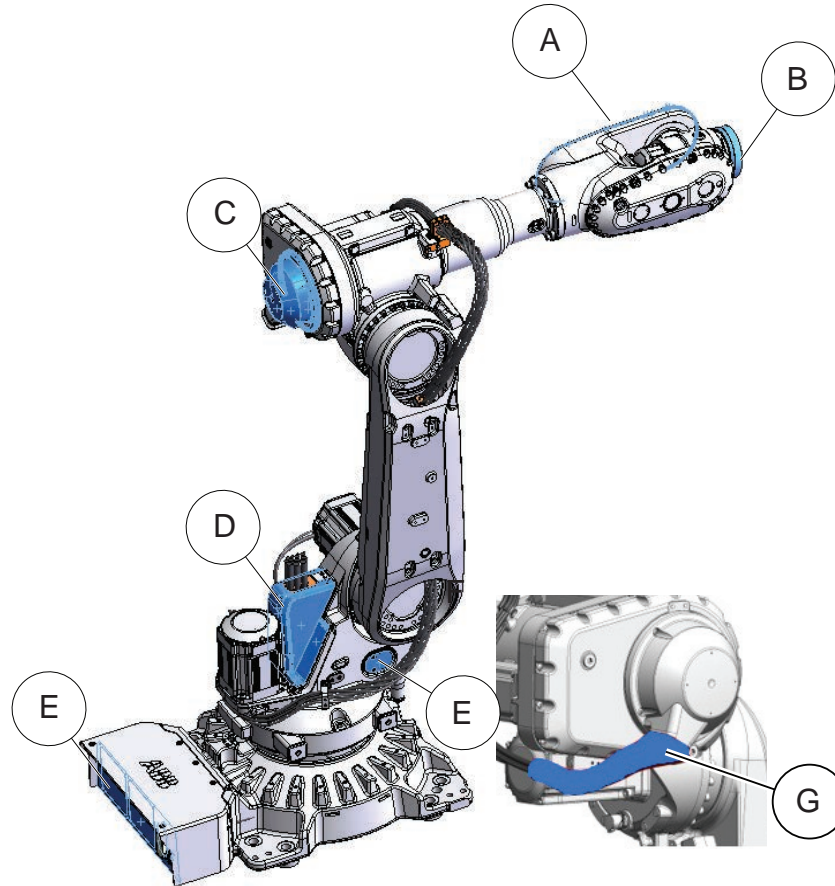

xx2100002591

Pos	Description
A	Rubber gasket
B	Turning disc with Nickel-phosphorus coating
C	Upgraded protective cover (polymer)
D	Protective cover (polymer)
E	Sheet metal in stainless steel
F	Cover (polymer)
G	Cable protection

Requirements

The option *Foundry Plus2* requires option *Upper arm cover* [3316-1].

Continues on next page

3 Specification of variants and options

3.2 Manipulator


Continued

Foundry cable guard

Option	Description
3315-1	Foundry cable guard

General

The manipulator could be equipped with additional cable guards for extra tough environmental conditions with as example metals spits, frequent weld spatter. These additional cover will prolong cable lifetime and simplify service/maintenance as the robot are kept more clean under the covers.

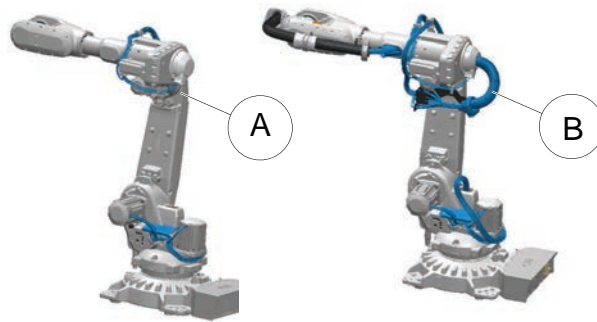

xx2100002623

Pos	Description
A	Foundry cable guard without DressPack
B	Foundry cable guard with DressPack

Continues on next page

Upper arm cover

Option	Description
3316-1	Upper arm cover

General

The manipulator could be equipped with additional upper arm covers for environmental conditions where you want to further seal of the upper arm in wet or dirty conditions. These additional cover will prolong cable lifetime and simplify service / maintenance as the robot are kept more clean under the covers.



xx2100002592

Requirements

This option is mandatory to order with *DressPack axis 3-6 options* [3326-x].

Continues on next page

3 Specification of variants and options

3.2 Manipulator

Continued

Mounting position

Option	Description
3317-1	Inverted

General

The manipulator could be placed inverted to add more flexibility in layout design. The option is prepared for inverted assembly from factory.



xx2100002593



Limitations

This option is not possible to order with *AbsAcc Floor mounted* [3101-1].

Continues on next page

Fork lift device

The manipulator can be delivered with forklift devices, allowing a forklift to be used when moving the manipulator.

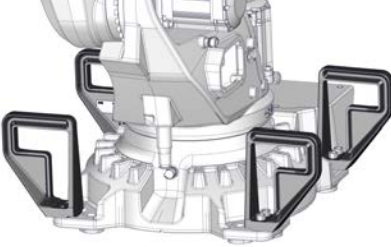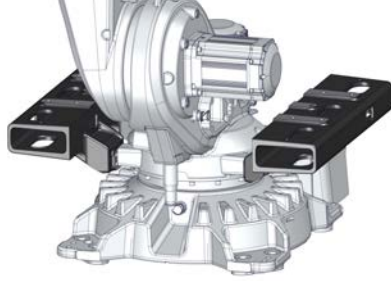Option	Description	
3318-1	<p>Forklift device on base</p> <p>Forklift pockets placed on the base gives a low lifting point.</p>	 <p>xx2300001244</p>
3318-2	<p>Forklift device on frame</p> <p>Fork lift pockets placed on the frame gives a more balanced lifting point. This can be used together with special tool to invert a robot.</p>	 <p>xx2300001243</p>

Limitations

The option *Fork lift on base* [3318-1] is not possible to order with *Inverted* [3317-1].

Continues on next page

3 Specification of variants and options

3.2 Manipulator

Continued


Limited working range

Option	Description
3323-1	Axis 1 adjustable 15°

General

The manipulator could be equipped with adjustable mechanical stops to mechanically limit the working range of axis 1.

For detailed information see [Installing movable mechanical stops on axis 1 \(option 3323-1\) on page 55](#).

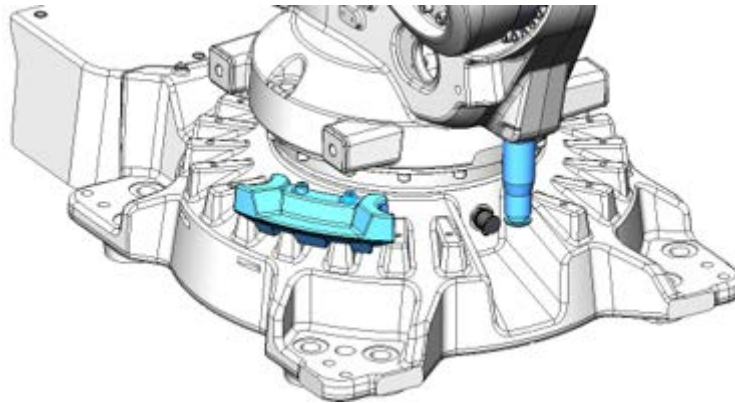

xx2100002595

Extended working range

Option	Description
3324-1	The option extends the working range on axis 1 from $\pm 170^\circ$ to $\pm 220^\circ$.



CAUTION

The option *Extended work range* enables an extension of the working range for axis 1, through a software configuration. With this option installed, the working range can exceed the range limited by the mechanical stop on axis 1. The working range shall be limited through the option *SafeMove*.

A risk analysis must be done to ensure that no risks remain when using option *Extended work range*, to limit the working range, and before removing the mechanical stops.

For information about the option *SafeMove*, see *Application manual - Functional safety and SafeMove*.

If the mechanical stop is removed, then the manipulator should have a marking for this, for example, a label. If the robot is delivered with the option *Extended work range*, then such a label is included on delivery.

Limitations

This option is not possible to order with *Inverted* [3317-1].

This option is not possible to order with DressPack options for spotwelding.

Continues on next page

Requirements

This option requires option *SafeMove* [3043-x].

3 Specification of variants and options

3.3 Floor cables


3.3 Floor cables

Manipulator cable - Length

Option	Description
3200-2	7m
3200-3	15m
3200-4	22m
3200-5	30m

Bending radius for static floor cables

The minimum bending radius is 10 times the cable diameter for static floor cables.

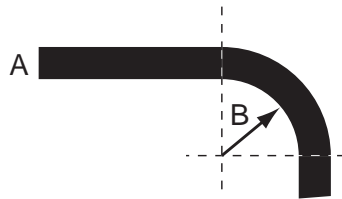

xx1600002016

A	Diameter
B	Diameter x10

3.4 Application

3.4.1 Overview of DressPack options

General

The DressPack is built in sections with connection interfaces in between. The cables for customer connection are partly integrated in the robot and the connectors are placed at axis 6, axis 3, and at the base. Depending on what signals are required, there are different variants available (Parallel, EtherNet) with corresponding connections at axis 6, axis 3, and at the base interface.

Parallel	PROC1 (1/2" Hose for compressed air) & CP/CS Hose (1/2") for compressed air is included in all DressPack variants. There is one inlet at the base (M22x1.5), one outlet at axis 3 (M22x1.5), and a free end at axis 6.
EtherNet	PROC1, CP/CS, EtherNet & FE (functional earth)

Requirements

Upper arm DressPack requires lower arm DressPack.

LID manipulator variants can only use LID DressPack.

LID manipulator variants require both lower and upper arm DressPack.


3 Specification of variants and options

3.4.2 DressPack for material handling

3.4.2 DressPack for material handling

Connection interfaces

Below is an overview showing the DressPack connection points. For detailed information see *Circuit diagram - IRB 5710/IRB 5720*, listed in [References on page 7](#).

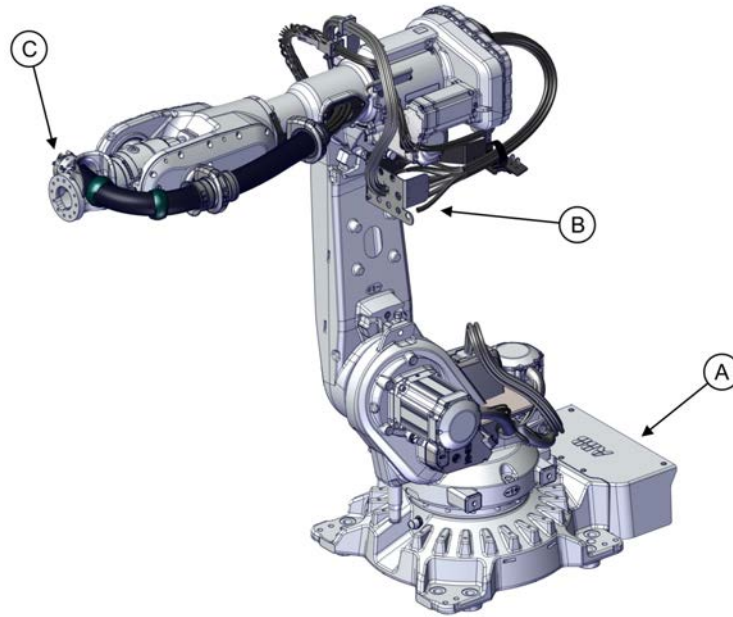

xx2300001382

A	Base
B	Axis 3
C	Axis 6

Manipulator DressPack MH

Base to axis 3	Axis 3 to axis 6
3325-11	3326-11 (MH3)
	3326-30 (LeanID empty conduit)
	3326-31 (LeanID - MH)
3325-13	3326-13 (MH3)
	3326-30 (LeanID empty conduit)
	3326-33 (LeanID - MH)

DressPack MH base to axis 3

Option	Description	Note	Connectors
3325-11	MH Parallel	Lower arm MH	Customer power (CP), customer signal (CS), and PROC1

Continues on next page


3 Specification of variants and options

3.4.2 DressPack for material handling

Continued

Option	Description	Note	Connectors
3325-13	MH EtherNet	Lower arm MH Includes parallel signals. Supports ProfiNet, EtherNet-IP.	Customer power (CP), customer signal (CS), ETHERNET, PROC1, and functional earth (FE)

Connection plate at base for DressPack MH

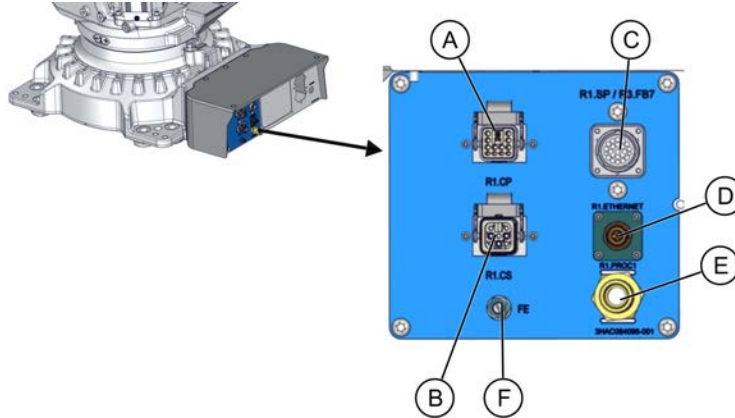

xx2300000241

A	Customer power (CP)
B	Customer signal (CS)
C	ETHERNET
D	PROC1 (1/2" hose)
E	Functional earth (FE)

For corresponding parts of the tool, see [Connector kits manipulator on page 177](#).


Continues on next page

3 Specification of variants and options

3.4.2 DressPack for material handling

Continued

Connection plate at axis 3 for DressPack MH, MH3 and LeanID MH

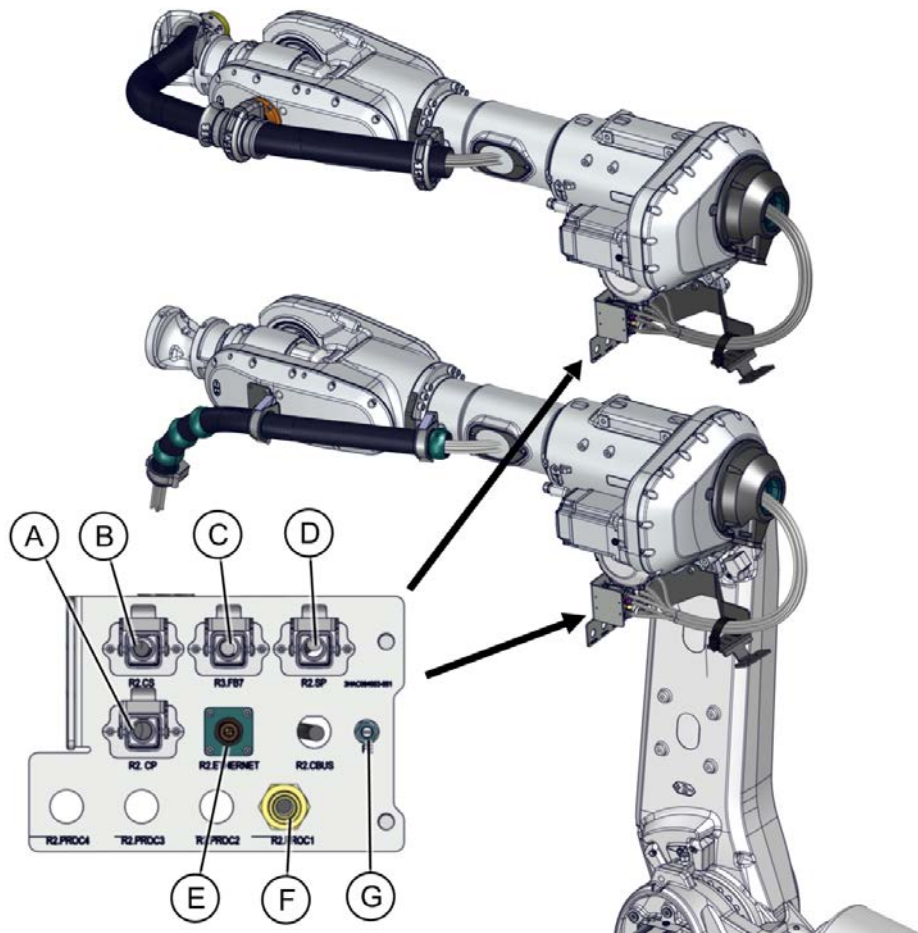

xx2300000246

A	Customer power (CP)
B	Customer signal (CS)
C	ETHERNET
D	PROC 1 (1/2" hose)
E	Functional earth (FE)

For corresponding parts of the tool, see [Connector kits manipulator on page 177](#).

DressPack axis 3 to axis 6

Option	Description	Note	Connectors
3326-11	MH3 Parallel	Upper arm MH3	Customer power (CP), customer signal (CS), and PROC1
3326-13	MH3 EtherNet	Upper arm MH3 Includes parallel signals, Supports ProfiNet, EtherNet-IP	Customer power (CP), customer signal (CS), ETHERNET, PROC1, and functional earth (FE)
3326-30	MH LID Empty Conduit	LeanID	

Continues on next page

3 Specification of variants and options

3.4.2 DressPack for material handling


Continued

Option	Description	Note	Connectors
3326-31	MH LID Parallel	LeanID MH	Customer power (CP), customer signal (CS), and PROC1
3326-33	MH LID EtherNet	LeanID MH Includes parallel signals, Supports ProfiNet, EtherNet/IP	Customer power (CP), customer signal (CS), ETHERNET, PROC1, and functional earth (FE)

End connectors at axis 6 for DressPack MH3 and LeanID MH

MH3: Hose and cable free length, 1,000 mm

LID: Hose and cable free length, 1,000 mm

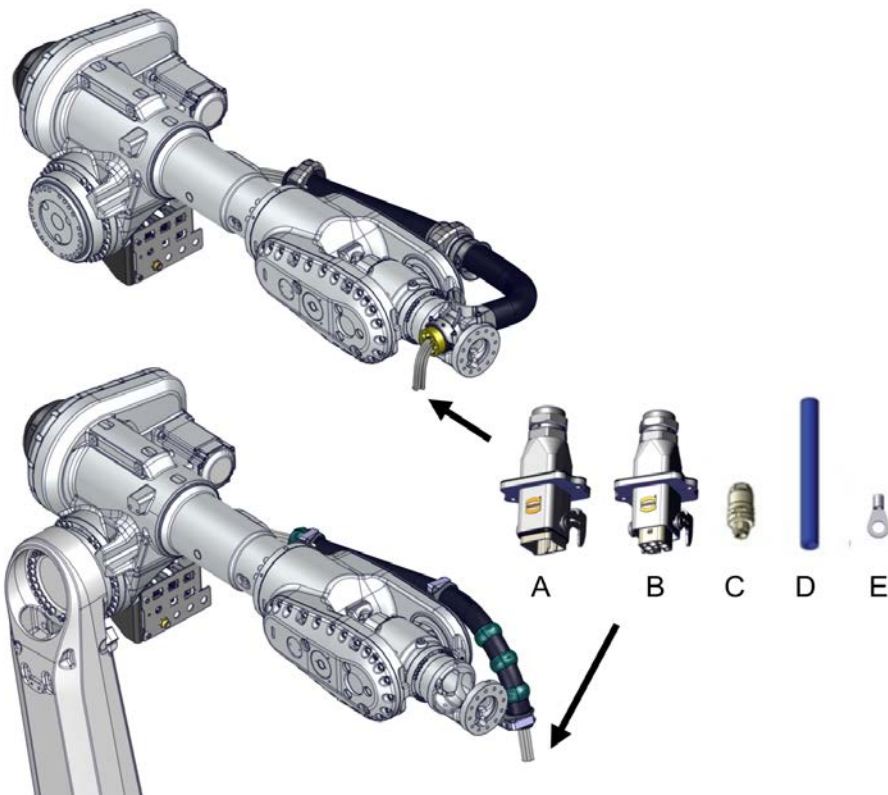

xx2300000247

A	Customer power (CP)
B	Customer signal (CS)
C	ETHERNET
D	PROC 1 (1/2" hose)
E	FE (functional earth)

For corresponding parts of the tool, see [Connector kits manipulator on page 177](#).


3 Specification of variants and options

3.4.3 DressPack for spotwelding

3.4.3 DressPack for spotwelding

Connection interfaces

Below is an overview showing the DressPack connection points. For detailed information see *Circuit diagram - IRB 5710/IRB 5720*, listed in [References on page 7](#).

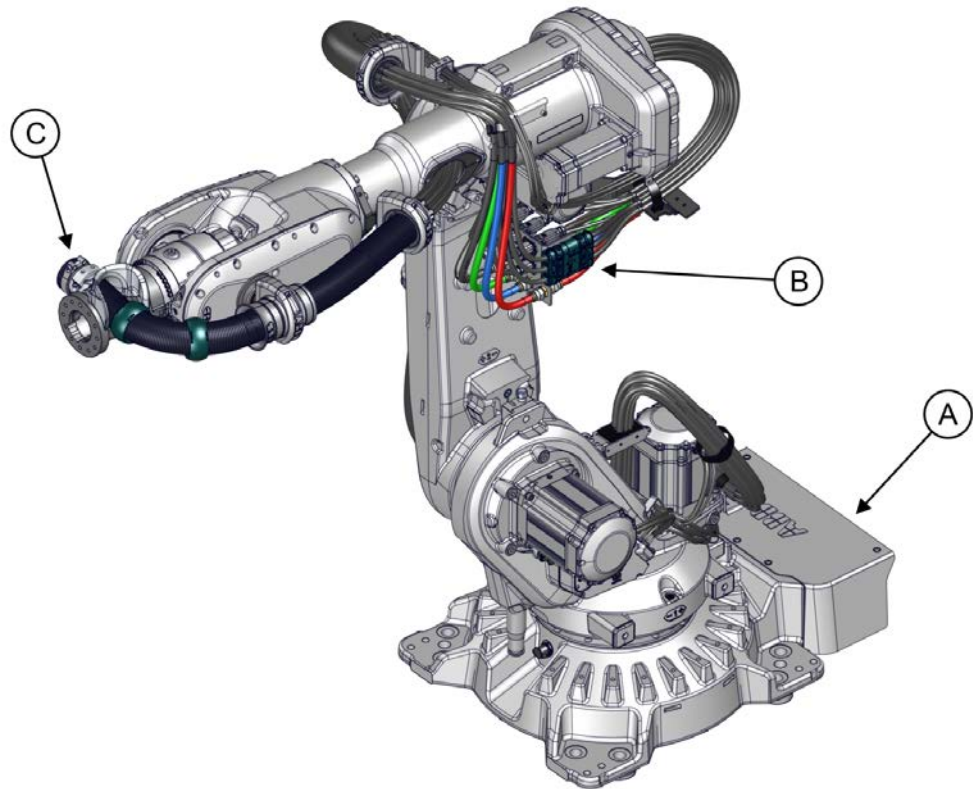

xx2300001381

A	Base
B	Axis 3
C	Axis 6

Manipulator DressPack SW

Base to axis 3	Axis 3 to axis 6
3325-61	3326-61 (LeanID SW)
	3326-50 (LeanID Empty Conduit)
3325-63	3326-63 (LeanID SW)
	3326-50 (LeanID Empty Conduit)

Continues on next page


3 Specification of variants and options

3.4.3 DressPack for spotwelding Continued

DressPack SW base to axis 3

Option	Description	Note	Connectors
3325-61	SW Parallel-Servo	Lower arm SW	Customer power (CP), customer signal (CS), Servo power (SP), Servo feedback (FB)
3325-63	SW Ethernet-Servo	Lower arm SW Includes parallel signals. Supports ProfiNet, Ether- tIP	Customer power (CP), customer signal (CS), Servo power (SP), Servo feedback (FB)

Connection plate at base for DressPack SW

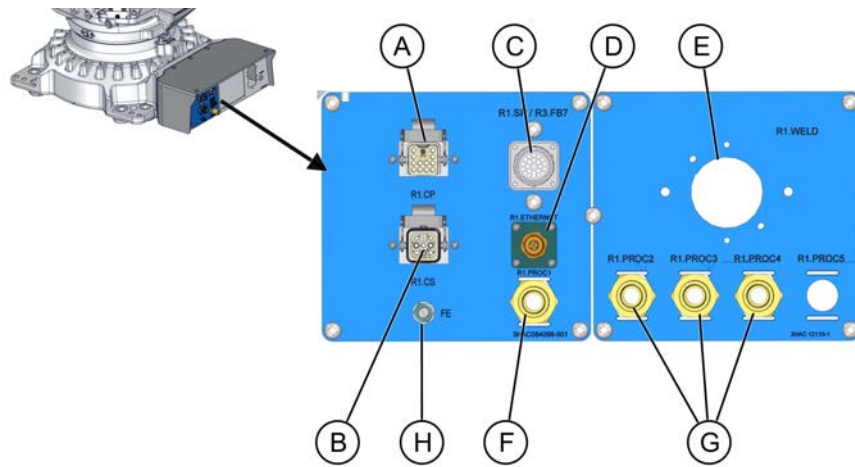

xx2300000250

A	Customer power (CP)
B	Customer signal (CS)
C	Servo Power (SP)
D	ETHERNET
E	WELD3 x 35 mm ² (spot welding)
F	PROC1 (1/2" hose)
G	PROC2-4 (spot welding 1/2", M22 x 1.5, 24 degree seal)
H	Functional earth (FE)

For corresponding parts of the tool, see [Connector kits manipulator on page 177](#).


Continues on next page

3 Specification of variants and options

3.4.3 DressPack for spotwelding

Continued

Connection plate at axis 3 for DressPack SW and LeanID SW

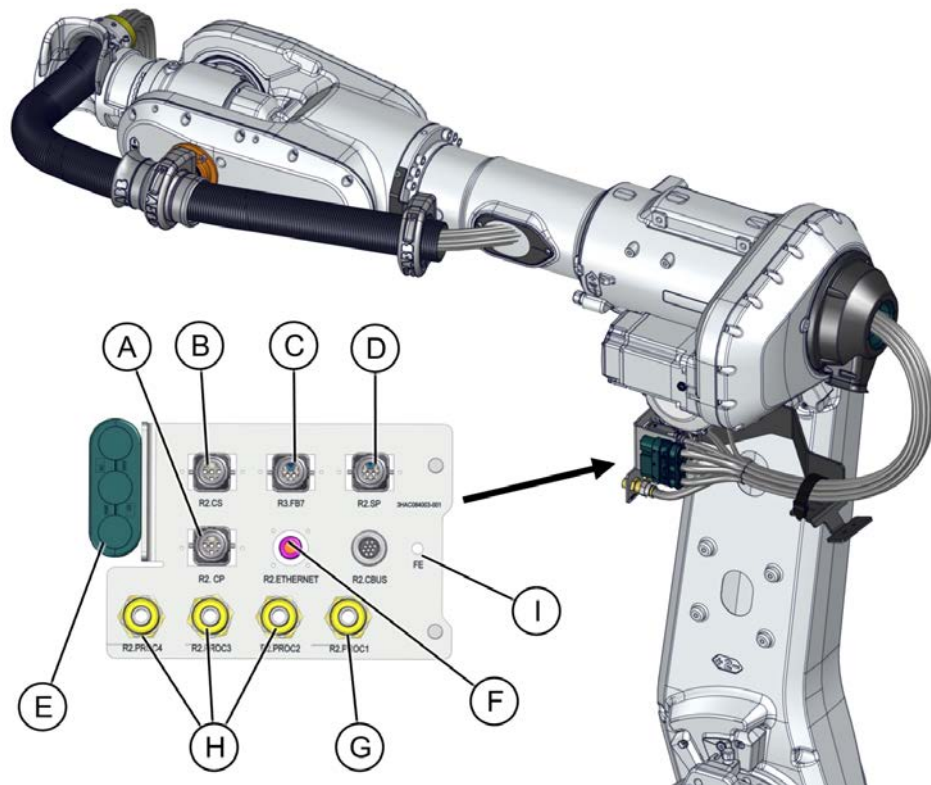

xx2300000251

A	Customer power (CP)
B	Customer signal (CS)
C	Servo feedback (FB)
D	Servo power (SP)
E	ETHERNET
F	WELD3 x 25 mm ² (spot welding)
G	PROC1 (1/2" hose)
H	PROC2-4 (spot welding 1/2", M22 x 1.5, 24 degree seal)
I	Functional earth (FE)

For corresponding parts of the tool, see [Connector kits manipulator on page 177](#).

DressPack axis 3 to axis 6

Option	Description	Note	Connectors
3326-50	LeanID Empty Conduit	Upper arm	
3326-61	SW LID Parallel-Servo	Upper arm SW LID	Customer power (CP), customer signal (CS)

Continues on next page

3 Specification of variants and options

3.4.3 DressPack for spotwelding

Continued

Option	Description	Note	Connectors
3326-63	SW LID EtherNet-Servo	Upper arm SW LID Includes parallel signals. Supports ProfiNet, EtherNet-IP	Customer power (CP), customer signal (CS)

End connectors at axis 6 for DressPack LeanID SW

For corresponding parts of the tool, see [Connector kits manipulator on page 177](#).


3 Specification of variants and options

3.4.4 Configuration result of DressPack options

3.4.4 Configuration result of DressPack options

DressPack options for material handling (MH)

The DressPack contents will differ depending on selected options. See table for signal content below.

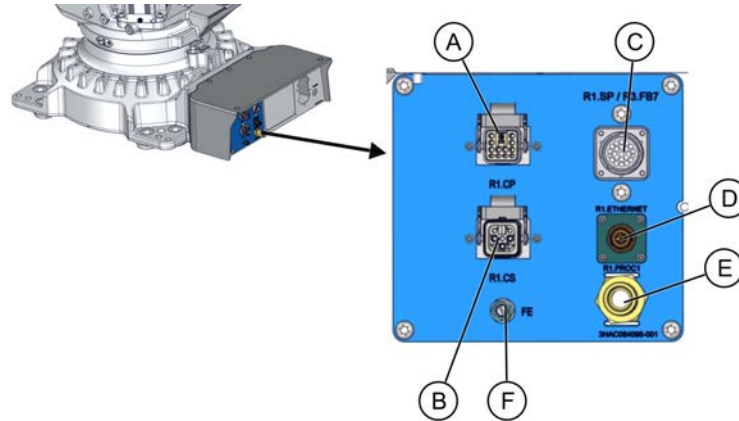

xx2300000241

A	Customer power (CP)
B	Customer signal (CS)
C	ETHERNET
D	PROC1 (1/2" hose)
E	Functional earth (FE)

	Type	At terminals in cabinet	At connection point; base, axis 3, or axis 6	Cable/part area	Allowed capacity
A	Customer Power (CP)				
	Utility power	2+2	2+2	0.75 mm ²	250 V AC, 5 A rms
	Protective earth		1	0.75 mm ²	250 V AC
B	Customer Signal (CS)				
	Signals	13	13	0.2 mm ²	50 V DC, 1 A rms
	Signals separate shielded	8	8 (4x2)	0.2 mm ²	50 V DC, 1 A rms
D	Customer bus (Ethernet)				
	Bus signals	4	4	0.4 mm ²	Ethernet CAT 5e, 100 Mbit ⁱ
E	Media				
	Air (PROC 1)		1	12.5 mm inner diameter	Max. air pressure 16 bar/230 PSI
F	Functional Earthⁱⁱ		1	10 mm ²	600 V AC RMS

ⁱ Ethernet with wire colors according to PROFINET standard, M12-connectors.

ⁱⁱ When EtherNet is selected.

Continues on next page


3 Specification of variants and options

3.4.4 Configuration result of DressPack options

Continued

DressPack options for spotwelding (SW)

The DressPack contents will differ depending on selected options. See table for signal content below.

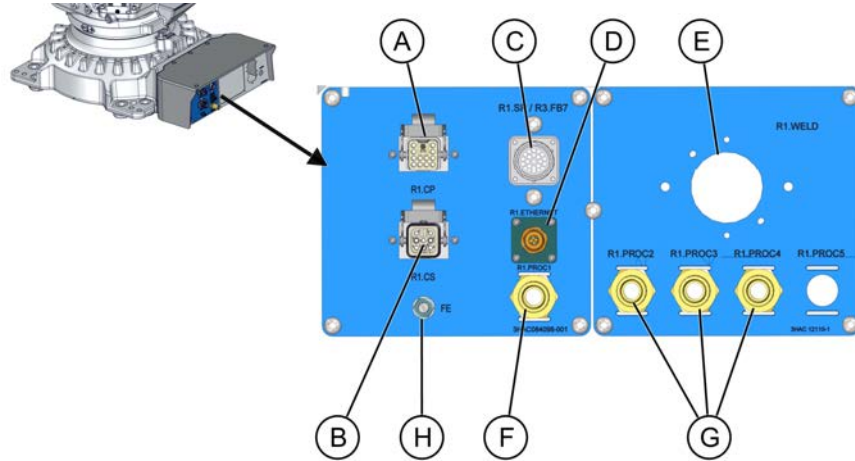

xx2300000250

A	Customer power (CP)
B	Customer signal (CS)
C	Servo Power (SP)
D	ETHERNET
E	WELD3 x 35 mm ² (spot welding)
F	PROC1 (1/2" hose)
G	PROC2-4 (spot welding 1/2", M22 x 1.5, 24 degree seal)
H	Functional earth (FE)

	Type	At terminals in cabinet	At connection point; base, axis 3, or axis 6	Cable/part area	Allowed capacity
A	Customer Power (CP)				
	Utility power	3	3	1.5 mm ²	250 V AC, 5 A rms
	Protective earth	1	1	1.5 mm ²	250 V AC
	Utility power	4	4	0.5 mm ²	50 V DC, 1 A rms
B	Customer Signal (CS)				
	Signals shielded		8 (4x2)	0.24 mm ²	30 V AC, 42 V DC, 1 A rms
C	Servo motor signals (SP)				
	Servo motor power	At drive	3	1.5 mm ²	600 VAC, 12 A rms
	Protective earth	At drive	1	1.5 mm ²	600 VAC
	Signals twisted pair for resolver		6	0.23 mm ²	50 V DC, 1 A rms
	Brake		2	0.5 mm ²	50 V DC, 1 A rms
	Temperature control/PTC		2	0.5 mm ²	50 V DC, 1 A rms

Continues on next page

3 Specification of variants and options

3.4.4 Configuration result of DressPack options

Continued

	Type	At terminals in cabinet	At connection point; base, axis 3, or axis 6	Cable/part area	Allowed capacity
D	Customer bus (Ethernet)				
	Bus signals	4	4	0.4 mm ²	Ethernet CAT 5e, 100 Mbit ⁱ
E	Welding power (WELD3 x 35 mm²)				
	Lower and upper arm		2	35 mm ² ii	600 VAC, 150 A rms at 20°C (68°F)
	Protective earth (lower and upper arm)		1		
F	Media				
	Air (PROC 1)		1	12.5 mm inner diameter	Max. air pressure 16 bar/230 PSI
G	Media				
	(PROC2-4)		3	12.5 mm inner diameter M22 x 1.5, 24 degree seal	Max. air pressure 16 bar/230 PSI
H	Functional Earth iii		1	10 mm ²	600 V AC RMS

i Ethernet with wire colors according to PROFINET standard, M12-connectors.

ii For LeanID upper arm 25 mm², 135 A rms

iii When EtherNet is selected.

Empty conduit options

The dimension and requirements for empty cable conduit options are described in the product manual for the DressPack, see [References on page 7](#).

3 Specification of variants and options

3.4.5.1 Base - Connector kits

3.4.5.1 Base - Connector kits

Available options

Option	Name	DressPack options		
		3325-11/13	3325-51/53	3325-61/63
3330-2	CP/CS, Proc 1 base	X	X	
3331-1	Weld Proc 2-4 base		X	X
3332-1	FB7 on base			



Note

Servo power connector kits are not available.

Option 3330-2, CP/CS, Proc 1 on base

This option offers a kit with connectors. This must be assembled by the customer. The kit contains the following components.

CP

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, female, 12p		Harting
8	Crimp contact female	For 0.5 mm ²	
8	Crimp contact female	For 1.0 mm ²	
8	Crimp contact female	For 1.5 mm ²	
8	Crimp contact female	For 2.5 mm ²	
2	Coding pin, Han		Harting
1	Screw M3 with seal		Harting

CS

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, female, 8p		Harting
8	Crimp contact female	For 0.14–0.37 mm ²	
1	Screw M3 with seal		Harting

Media

Amount	Description	Size, material, etc.	Brand
1	Hose coupling	1/2", M22 x 1.5 Brass	

Ethernet

Amount	Description	Size, material, etc.	Brand
1	M12 Connector, Male, D-code	For 0.14–0.34 mm ²	

Continues on next page

3 Specification of variants and options

3.4.5.1 Base - Connector kits

Continued

Option 3331-1, Weld Proc 2-4 base

This option offers a kit with connectors. This must be assembled by the customer. The kit contains the following components.

WELD

Amount	Description	Size, material, etc.	Brand
1	Welding connector, female	For 3x35 mm ²	Stäubli
1	Shrinking hose with glue	20 mm	
1	End-housing		Stäubli
1	Cable gland	For cable diameter 24-28 mm	
1	Reducing coupling	PG36/PG29	
4	Hose fitting	1/2", M22 x 1.5 Brass	
1	Adapter	M50x1.5 / PG 36	

Option 3332-1, FB7 on base

This option offers a kit with connectors. This must be assembled by the customer. The kit contains the following components.

FB

Amount	Description	Size, material, etc.	Brand
1	Connector, 8p, Male	UTOW	
15	Pin	For 0.13–0.26 mm ²	
1	Shrink boot adapter		
1	Bottle shaped shrink boot		

3 Specification of variants and options

3.4.5.2 Axis 3 - Connector kits

3.4.5.2 Axis 3 - Connector kits

Available options

Option	Name	DressPack options		
		3326-11/13	3326-51/53	3326-61/63
3333-2	CP/CS bus, Proc 1 axis 3	X		
3333-3	CP/CS Proc1, Servo & FB			X

Option 3333-2, CP/CS/CBus, Proc 1 axis 3

This option offers a kit with connectors. This must be assembled by the customer. The kit contains the following components.

CP

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, male, 12p		Harting
8	Crimp contact male	For 0.5 mm ²	
8	Crimp contact male	For 1.0 mm ²	
8	Crimp contact male	For 1.5 mm ²	
8	Crimp contact male	For 2.5 mm ²	
2	Coding pin, Han		Harting
1	Screw M3 with seal		Harting

CS

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, male, 8p		Harting
8	Crimp contact male	For 0.14–0.37 mm ²	
1	Screw M3 with seal		Harting

Media

Amount	Description	Size, material, etc.	Brand
1	Hose coupling Parker Push lock	1/2", M22 x 1.5 Brass	

Ethernet

Amount	Description	Size, material, etc.	Brand
1	M12 Connector, Male, D-code	For 0.14–0.34 mm ²	

Continues on next page

3 Specification of variants and options

3.4.5.2 Axis 3 - Connector kits

Continued

Option 3333-3, CP/CS Proc1, Servo & FB

This option offers a kit with connectors. This must be assembled by the customer. The kit contains the following components.

CP

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, male, 12p		Harting
8	Crimp contact male	For 0.5 mm ²	
8	Crimp contact male	For 1.0 mm ²	
8	Crimp contact male	For 1.5 mm ²	
8	Crimp contact male	For 2.5 mm ²	
2	Coding pin, Han		Harting
1	Screw M3 with seal		Harting

CS

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, male, 8p		Harting
8	Crimp contact male	For 0.14–0.37 mm ²	
1	Screw M3 with seal		Harting

Media

Amount	Description	Size, material, etc.	Brand
1	Hose coupling Parker Push lock	1/2", M22 x 1.5 Brass	

Ethernet

Amount	Description	Size, material, etc.	Brand
1	M12 Connector, Male, D-code	For 0.14–0.34 mm ²	

SP

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, male, 12p		Harting
8	Crimp contact male	For 0.5 mm ²	
8	Crimp contact male	For 1.0 mm ²	
8	Crimp contact male	For 1.5 mm ²	
8	Crimp contact male	For 2.5 mm ²	
2	Coding pin, Han		Harting
1	Screw M3 with seal		Harting

Continues on next page

3 Specification of variants and options

3.4.5.2 Axis 3 - Connector kits

Continued

FB

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, male, 8p		Harting
8	Crimp contact male	For 0.14–0.37 mm ²	
1	Screw M3 with seal		Harting
1	Coding pin, Han D, female		Harting

3.4.5.3 Axis 6 - Connector kits

Available options

Option	Name	DressPack options		
		3326-11/13	3326-51/53	3326-61/63
3334-2	CP/CS bus axis 6	X	X	
3334-3	CP/CS Proc1, Servo & FB			X
3335-1	Weld Proc 2-4 ax- is6		X	X

Option 3334-2, CP/CS/CBus, Proc 1 axis 6

This option offers a kit with connectors. This must be assembled by the customer. The kit contains the following components.

CP

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, male, 12p		Harting
8	Crimp contact male	For 0.5 mm ²	
8	Crimp contact male	For 1.0 mm ²	
8	Crimp contact male	For 1.5 mm ²	
8	Crimp contact male	For 2.5 mm ²	
2	Coding pin, Han		Harting
1	Screw M3 with seal		Harting

CS

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, male, 8p		Harting
8	Crimp contact male	For 0.14–0.37 mm ²	
1	Screw M3 with seal		Harting

Media

Amount	Description	Size, material, etc.	Brand
1	Hose coupling Parker Push lock	1/2", M22 x 1.5 Brass	

Ethernet

Amount	Description	Size, material, etc.	Brand
1	M12 Connector, Female, D-code	For cable diameter 5.7–8.8 mm ²	Harting
4	Socket		

Continues on next page

3 Specification of variants and options

3.4.5.3 Axis 6 - Connector kits

Continued

Option 3334-3, CP/CS Proc 1, Servo & FB

This option offers a kit with connectors. This must be assembled by the customer. The kit contains the following components.

CP

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, male, 12p		Harting
8	Crimp contact male	For 0.5 mm ²	
8	Crimp contact male	For 1.0 mm ²	
8	Crimp contact male	For 1.5 mm ²	
8	Crimp contact male	For 2.5 mm ²	
2	Coding pin, Han		Harting
1	Screw M3 with seal		Harting

CS

Amount	Description	Size, material, etc.	Brand
1	Hood pegs, Han 3A		Harting
1	Insert, male, 8p		Harting
8	Crimp contact male	For 0.14–0.37 mm ²	
1	Screw M3 with seal		Harting

Media

Amount	Description	Size, material, etc.	Brand
1	Hose coupling Parker Push lock	1/2", M22 x 1.5 Brass	

Ethernet

Amount	Description	Size, material, etc.	Brand
1	M12 Connector, Female, D-code	For cable diameter 5.7–8.8 mm ²	Harting
4	Socket	For 0.13–0.33 mm ²	

SP

Amount	Description	Size, material, etc.	Brand
1	M23 Hybrid Panel Connector, 8p, Male	For cable diameter 7.0–12.0 mm ²	Hummel
4	Crimp pin 1 mm, AWG 24-17	For 0.25–1.0 mm ²	
4	Crimp pin 2 mm, AWG 18-24	For 0.75–2.5 mm ²	
4	Crimp pin 2 mm, AWG 14-12	For 2.5–4.0 mm ²	

Continues on next page

3 Specification of variants and options

3.4.5.3 Axis 6 - Connector kits

Continued

FB

Amount	Description	Size, material, etc.	Brand
1	M23 Signal Panel Connector, 12p, Male	For cable diameter 7.0–12.0 mm ²	Hummel
12	Pin AWG 28-20	For 0.08–0.56 mm ²	
12	Pin AWG 26-17	For 0.14–1.0 mm ²	
12	Pin AWG 18-16	For 0.75–1.5 mm ²	

Option 3335-1, Weld Proc 2-4 axis6

This option offers a kit with connectors. This must be assembled by the customer. The kit contains the following components.

WELD

Amount	Description	Size, material, etc.	Brand
1	Welding connector	RobiFix-B-L	Stäubli
3	Socket	For 25 mm ²	Stäubli

Media

Amount	Description	Size, material, etc.	Brand
4	Hose coupling Parker Push lock	1/2", M22 x 1.5 Brass	

3 Specification of variants and options

3.4.6 Application floor cables RobotWare - OS

3.4.6 Application floor cables

Parallel cable - Length

Option	Description
3201-2	7 m
3201-3	15 m
3201-5	30 m

Ethernet cable - Length



Note

Occupies 1 Ethernet port.

Option	Description	Note
3202-2	7 m	
3202-3	15 m	
3202-5	30 m	

Servo cable 1 axis - Length

Option	Description	Note
3206-2	7 m	
3206-3	15 m	
3206-5	30 m	

Warranty

For the selected period of time, ABB will provide spare parts and labour to repair or replace the non-conforming portion of the equipment without additional charges. During that period, it is required to have a yearly Preventative Maintenance according to ABB manuals to be performed by ABB. If due to customer restrains no data can be analyzed in the ABB Ability service *Condition Monitoring & Diagnostics* for robots with OmniCore controllers, and ABB has to travel to site, travel expenses are not covered. The Extended Warranty period always starts on the day of warranty expiration. Warranty Conditions apply as defined in the Terms & Conditions.



Note

This description above is not applicable for option *Stock warranty* [438-8]


Option	Type	Description
438-1	Standard warranty	Standard warranty is 12 months from <i>Customer Delivery Date</i> or latest 18 months after <i>Factory Shipment Date</i> , whichever occurs first. Warranty terms and conditions apply.

3 Specification of variants and options

3.4.6 Application floor cables

RobotWare - OS

Continued

Option	Type	Description
438-2	Standard warranty + 12 months	Standard warranty extended with 12 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-4	Standard warranty + 18 months	Standard warranty extended with 18 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-5	Standard warranty + 24 months	Standard warranty extended with 24 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-6	Standard warranty + 6 months	Standard warranty extended with 6 months from end date of the standard warranty. Warranty terms and conditions apply.
438-7	Standard warranty + 30 months	Standard warranty extended with 30 months from end date of the standard warranty. Warranty terms and conditions apply.
438-8	Stock warranty	<p>Maximum 6 months postponed start of standard warranty, starting from factory shipment date. Note that no claims will be accepted for warranties that occurred before the end of stock warranty. Standard warranty commences automatically after 6 months from <i>Factory Shipment Date</i> or from activation date of standard warranty in WebConfig.</p> <p> Note</p> <p>Special conditions are applicable, see <i>Robotics Warranty Directives</i>.</p>

This page is intentionally left blank

Index

A

Absolute Accuracy, 63
 Absolute Accuracy, calibration, 58
 ambient humidity
 operation, 22
 storage, 22
 ambient temperature
 operation, 22
 storage, 22
 Axis Calibration
 calibration tool
 article number, 67

B

base plate, 45

C

calibration
 Absolute Accuracy type, 57
 standard type, 57
 calibration, Absolute Accuracy, 58
 calibration marks, 59
 calibration position
 scales, 59
 calibration scales, 59
 CalibWare, 57
 compensation parameters, 63

D

dimensions
 robot, 33
 direction of axes, 61

E

equipment, robot, 33
 extended working range, 162
 extension zone concept, 84
 extension zone limits, 84
 extra equipment, 33

F

fitting, equipment, 33
 foundation
 requirements, 21

G

Gravity Beta, 52

H

humidity
 operation, 22
 storage, 22

I

installation
 equipment, 33
 inverted mounting, 52

L

limitations, 85
 load, 83
 loads on foundation, 20

M

maintenance, 17

mounting, equipment, 33
 movable mechanical stop, 55

N

negative directions, axes, 61

O

operating conditions, 22
 option
 Extended working range, 162
 options, 153

P

positive directions, axes, 61
 product standards, 16
 protection classes, 22
 protection type, 22

R

requirements on foundation, 21
 robot
 dimensions, 33
 equipment, fitting, 33
 protection class, 22
 protection types, 22
 technical data, 19
 working range, 25

S

safety standards, 16
 scales on robot, 59
 securing the robot to foundation, attachment screws, 43
 speed, 85
 standards, 16
 ANSI, 16
 CAN, 16
 standard warranty, 186
 stock warranty, 186
 stopping distance, 85
 stopping time, 85
 storage conditions, 22
 sync marks, 59
 system parameter
 Gravity Beta, 52

T

technical data
 robot, 19
 temperatures
 operation, 22
 storage, 22
 tilted mounting, 52
 torques on foundation, 20
 troubleshooting, 17
 turning radius, 29

V

variants, 153

W

warranty, 186
 wcp, 84
 weight, 19
 working range, 30
 robot, 25



ABB AB

Robotics & Discrete Automation

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

ABB AS

Robotics & Discrete Automation

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd.

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201319, China

Telephone: +86 21 6105 6666

ABB Inc.

Robotics & Discrete Automation

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

abb.com/robotics